


# GL840

**midi LOGGER**

## **USER'S MANUAL**

---

MANUAL NO.GL840-UM-156

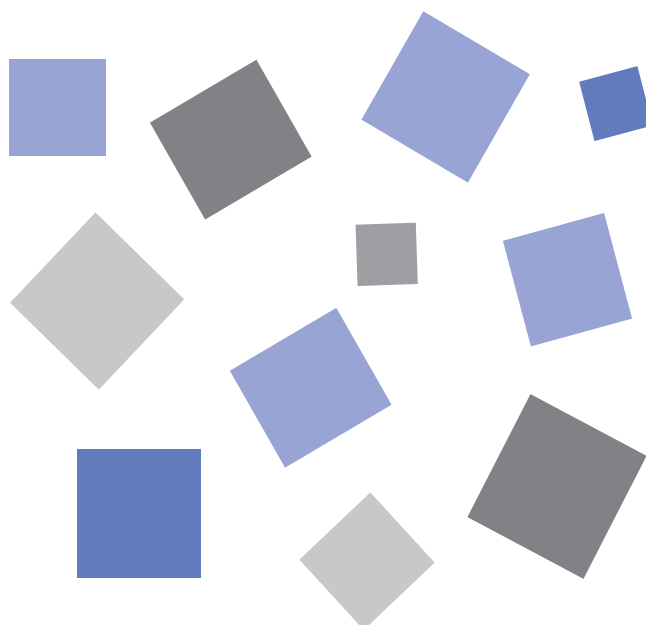






# GRAPHTEC

## To Ensure Safe and Correct Use










- To ensure safe and correct use of the GL840, read this manual thoroughly before use.
- After having read this manual, keep it in a handy location for quick reference as needed.
- Do not permit small children to touch the GL840.
- The following describes important points for safe operation. Please be sure to observe them strictly.

### Conventions Used in This Manual

To promote safe and accurate use of the GL840 as well as to prevent human injury and property damage, safety precautions provided in this manual are ranked into the five categories described below. Be sure you understand the difference between each of the categories.

 <b>DANGER</b>	This category provides information that, if ignored, is highly likely to cause fatal or serious injury to the operator.
 <b>WARNING</b>	This category provides information that, if ignored, is likely to cause fatal or serious injury to the operator.
 <b>CAUTION</b>	This category provides information that, if ignored, could cause physical damage to the GL840.
 <b>HIGH TEMPERATURE</b>	This category provides information that, if ignored, is likely to cause burns or other injury to the operator due to contact with high temperature.
 <b>ELECTRICAL SHOCK</b>	This category provides information that, if ignored, is likely to expose the operator to electrical shock.

### Description of Safety Symbols


	The  symbol indicates information that requires careful attention (including warnings). The specific point requiring attention is described by an illustration or text within or next to the  symbol.
	The  symbol indicates an action that is prohibited. Such prohibited action is described by an illustration or text within or next to the  symbol.
	The  symbol indicates an action that must be performed. Such imperative action is described by an illustration or text within or next to the  symbol.

# Safety Precautions

## ⚠ WARNING

### Be sure to securely connect the GL840's GND terminal.

- After checking that the power switch is turned off, connect the power cord's female plug to the GL840 and then connect its male plug into the electrical socket.
- For grounding, use a ground wire with a diameter of at least 0.75 mm<sup>2</sup>. When using the GL840 in an environment where grounding is not possible, ensure measured is no greater than 50 V (DC or rms).

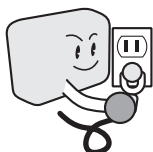


### If the GL840 generates smoke, is too hot, emits a strange odor, or otherwise functions abnormally, turn off its power and unplug its power cord from the electrical socket.

- Use of the GL840 in such status may result in a fire hazard or electrical shock.
- After checking that smoke is no longer being generated, contact your sales representative or nearest Graphtec vendor to request repair.
- Never try to perform repair yourself. Repair work by inexperienced personnel is extremely dangerous.



Use prohibited

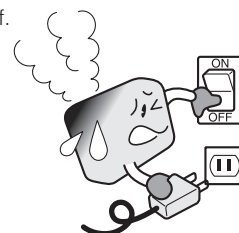


### Before turning on the GL840, ensure that the electric socket's supply voltage conforms to the GL840's power rating.

- Use of a different supply voltage may cause damage to the GL840 or a fire hazard due to electrical shock or current leakage.



Use prohibited

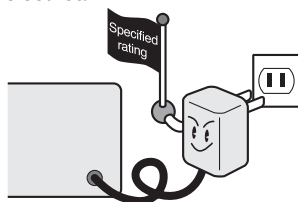

### Never disassemble or remodel the GL840.

- Such action may cause a fire hazard due to electric shock or current leakage.
- Contact with a high-voltage component inside the GL840 may cause electric shock.
- If repair is required, contact your sales representative or nearest Graphtec vendor.



No disassembly



### Avoid using the GL840 in extremely dusty or humid places.

- Such use may cause a fire hazard due to electrical shock or current leakage.



Use prohibited



Watch out for electrical shock



### Avoid using the GL840 in places where it may be exposed to water such as bathrooms, locations exposed to wind and rain, and so on.


- An electrical shock or fire may be caused due to current leakage.



Avoid water



Watch out for electrical shock

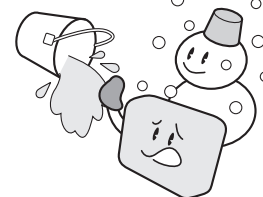

### Prevent dust or metallic matter from adhering to the power supply connector.


- Adhesion of foreign matter may cause a fire hazard due to electrical shock or current leakage.



Use prohibited



Watch out for electrical shock

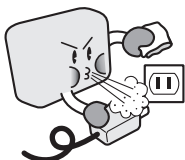

### Never use a damaged power cord.

- Use of a damaged cord may result in a fire hazard due to electrical shock.
- If the cord becomes damaged, order a new one to replace it.



Unplug the power cord from the socket



# Safety Precautions


## ! CAUTION

**Do not use or store the GL840 in a location exposed to direct sunlight or the direct draft of an air conditioner or heater.**

- Such location may impair the GL840's performance.



Use prohibited

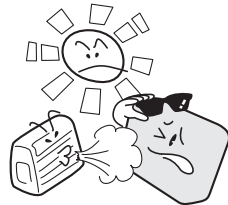

**Do not place the receptacles containing fluid onto this device or close to this device.**

- Fluid spilling inside the GL840 may cause a fire hazard due to electrical shock or current leakage.



Avoid water



Watch out for electrical shock




**Do not use the GL840 in a location subject to excessive mechanical vibration or electrical noise.**

- Such location may impair the GL840's performance.



Use prohibited

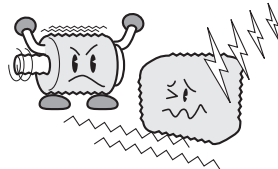

**To insert or disconnect the power cord or a signal input cable, grasp the power cord's plug or the signal input cable's connector.**

- Pulling the cord/cable itself damages the cord/cable, resulting in a fire hazard or electrical shock.



Use prohibited




**If fluid or foreign matters enters inside the GL840, turn off the power switch and disconnect the power cord from the electrical socket.**

- Use in such status may cause a fire hazard due to electrical shock or current leakage.
- Contact your sales representative or nearest Graphtec vendor to request repair.



Unplug the power cord from the socket

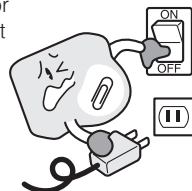


**Do not use the AC power supply and the DC power supply other than the specified supply voltage for this device.**

- Such action may cause a fire hazard due to electric shock or current leakage.



Use prohibited

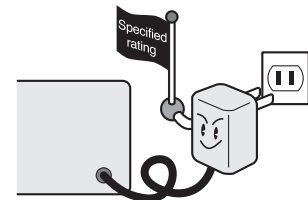


**Do not attempt to lubricate the GL840's mechanisms.**

- Such action may cause the GL840 to break down.



Use prohibited

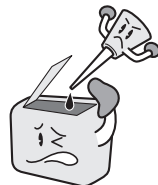


**Never clean the GL840 using a volatile solvent (such as thinner or benzine).**

- Such action may impair the GL840's performance.
- Clean off any soiled areas using a soft dry cloth.



Use prohibited

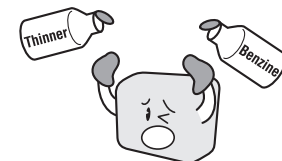

**Be sure to use the Graphtec-supplied AC adapter.**

- It will damage this device.



Use prohibited



# Safety Precautions

## CAUTION

**Do not touch the input terminals after the signal cable is connected to the measuring objects that are containing the voltage.**

- It will cause the electric shock.
- Ensure that the GL840's power source is positioned so that it can easily be disconnected.



Strict observance



Watch out for electrical shock

**Confirm the power of supplier of signal is turned off before connecting the input cables to the input terminal of this device to prevent the electric shock.**

- It will cause the electric shock.



Strict observance



Watch out for electrical shock

**Do not touch the device with wet hands.**

- This can cause an electrical shock or malfunction.



Don't touch with wet hands

**Be careful of static electricity.**

- Static electricity may damage the device. To prevent this from happening, touch a different metal object to discharge any built-up static electricity before touching the GL840.



CAUTION

**Do not input the voltage that is exceeding the specification of this device.**

- If a voltage exceeding the specified value is input, the semiconductor relay in the input section will be damaged. Never input a voltage exceeding the specified value even for a moment.



Strict observance

- Have an enough margin from the specification of withstanding voltage when using this device, it have to consider a noise and change of the measurement voltage.



CAUTION

- It will cause the fire or the electric shock when the voltage is input to the defective device.



Use prohibited

**Do not block the air vent on the GL840.**

- This device will get damage when there is abnormal heat in this device.



Strict observance



HIGH TEMPERATURE

**Confirm this device is not broken before the input cable is connected to the input terminal.**

- It will cause the fire or the electric shock when the voltage is input to the defective device.



Use prohibited

# Safety Precautions



**When using the wireless unit (when option is installed), please note the following:**

- If you have an implantable pacemaker or implantable defibrillator installed, radio signals from the device may have an effect on the operation of your implantable pacemaker or implantable defibrillator.



Strict observance

**When using the wireless unit (when option is installed) in a medical establishment, please note the following rules:**

- Please turn off the power of this product in hospital wards.
- Each medical institution has its own usage prohibitions in various areas. Be sure to follow these.



Strict observance

**When using the wireless unit (when option is installed), please note the following:**

- Turn off the device in places where wireless radio signal use is restricted, such as on aircrafts and in hospitals. The device can have an effect on electronic devices, medical devices, etc., and may cause malfunctions.



Use prohibited

**When using the wireless unit (when option is installed), please note the following:**

- In the event that the device has an effect on automatic electronic devices such as cars or elevators, immediately turn off the GL840.



Use prohibited

**Do not use the device in any way not specified in this manual. There is a danger that protective provisions will have not been put in place.**



Use prohibited

**The module connection terminal is for use only with separately sold sensors and modules. Do not connect any other devices. Doing so may damage the GL840.**



Use prohibited

**This GL840 is not meant for use with lifesaving devices or devices with mission-critical high reliability or high safety requirements (medical devices, aerospace devices, shipping devices, nuclear power devices, etc.). In the event that this GL840 causes injury or property damage when used under these circumstances, the maker assumes absolutely no responsibility and is not liable.**

# Introduction

Thank you for purchasing the GL840 midi LOGGER.

Please read this manual thoroughly before attempting to use your new product to ensure that you use it correctly and to its full potential.

## Notes on Use

Be sure to read all of the following notes before attempting to use the GL840 midi LOGGER.

### 1. Note on the CE Marking

The GL840 midi LOGGER complies with the following standards.

- EN 61326-1 standard is based on the EMC Directive
- EN 61010-1 standard is based on the Low Voltage Directive (LVD)
- EN 301 489-17/-1, EN 300 328 standards are based on the Radio Equipment Directive (RED)  
(Use optional B-568)

Although the GL840 complies with the above-mentioned standards, be sure to use it correctly in accordance with the instructions and notes provided in this manual.

Moreover, use of the GL840 by incorrect procedures may result in damage to the GL840 or may invalidate its safeguards. Please confirm all of its notes regarding use and other related information to ensure correct use.

## **CE** Information of Regulation (EU) 2023/1542

The manufacturer information of the Lithium Rechargeable Battery mounted on the internal board of the data logger is as below.

Manufacturer:

Name: Seiko Instruments Inc.

Address: 8, Nakase 1-chome, Mihama-ku, Chiba-shi, Chiba 261-8507, Japan

### 2. Warning

This is a Class A product according to the EMC directive. In a domestic environment, this product may cause radio interference or may be affected by radio interference to the extent that proper measurement cannot be performed.

### 3. Notes on Radio Law

When installing the wireless unit (option) on the GL840, please note the following:

- Do not remove the technical standards compliance label. Do not use the device if it does not have a label on it.
- This GL840 uses the 2.4GHz frequency band.


The following devices and transmitters use the same frequencies and should not be used near this GL840:

- Microwave ovens
- Pacemakers and other industrial, science, and medical devices
- Radio transmitters used in mobile body identification devices on factory production lines, etc. (transmitters requiring licensing)
- Specified low-power radio transmitters (transmitters not requiring licensing)  
Communications may become slower or impossible due to radio interference.
- The communications may become slower or impossible depending on the circumstances this GL840 is used in. Take particular note of steel-reinforced, metal, concrete, and other structural materials that can inhibit radio waves.

■ This GL840 is meant for use in Japan, the US, Europe, Taiwan, China and Korea. It has not been certified for use under any other country's radio laws.

The following are each region's certification marks.

Japan

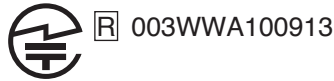

Taiwan



US

Contains FCC ID: ANSBP3591


China

CMIIT ID: 2015DJ5376

Europe

CE Mark

Korea

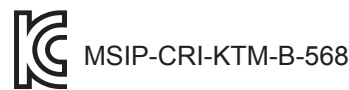

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### FCC CAUTION

Change or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

#### 4. Notes for Safe Operation

- (1) Be sure to use the Graphtec-supplied AC adapter. In environments where there is a lot of noise or where the power supply is unstable, we recommend that you ground the GL840.
- (2) When a high-voltage signal cable has been connected to the main unit's analog signal input terminal, avoid touching the leads of the input terminal's signal cable to prevent electrical shock due to high voltage.
- (3) Ensure that the GL840's power source is positioned so that it can easily be disconnected.
- (4) When connecting the high voltage signal line to the analog signal input terminal using the 4ch voltage/temperature terminal on the separately sold module (GS-4VT), avoid touching the leads of the input terminal's signal line to prevent electrical shock due to high voltage.
- (5) Do not input the voltage that is exceeding the specification of this device.
  - If a voltage exceeding the specified value is input, the semiconductor relay in the input section will be damaged. Never input a voltage exceeding the specified value even for a moment. It will cause the fire.
  - Have an enough margin from the specification of withstanding voltage when using this device, it have to consider a noise and change of the measurement voltage.
  - Confirm this device is not broken before the input cable is connected to the input terminal.
  - Please take care of the static electricity when the connecting the input cables or the thermocouples.

- Do not touch the tip of thermocouples with bare hand after the thermocouples are connected to the terminal of this device when the tip of thermocouples is not insulated.  
The static electricity of a human body will cause damage to this device.
- Do not put the tip of thermocouples to the object which is containing the static electricity when the tip of thermocouples is not insulated. The static electricity of object will cause damage to this device.
- Do not put the tip of thermocouples to the object which is containing the leaked high voltage of chassis or metal etc. when the tip of thermocouples is not insulated.  
The leaked high voltage of object will cause damage to this device.
- We recommend that the insulation tape puts on the tip of thermocouples before connecting the thermocouples to the input terminals.  
This will protect this device from the static electricity and the leaked high voltage.
  - \* This applies to all the channels even if channel extension is used.
  - \* The specification of all channels becomes the B-564(B-564SL), when the B-564(B-564SL), B-565 and B-563(B-563SL) are installed.

## 5. Notes on Functions and Performance

- (1) Be sure to connect the main unit to an AC or DC power supply that conforms to the rated range.  
Connection to a non-rated power supply may cause the main unit to overheat and break down.
- (2) Do not block the vent on the main unit.  
Continued operation with the vent blocked may cause the main unit to overheat and break down.
- (3) To avoid malfunctions and other damage, avoid using the GL840 in the following locations.
  - Places exposed to high temperature and/or high humidity, such as in direct sunlight or near heating equipment.  
(Allowable temperature range: 0 to 45°C (0 to 40°C when a battery pack is mounted, 15 to 35°C when battery is being charged), Allowable humidity range: 5 to 85%R.H., non-condensing)
  - Locations subject to excessive salt spray or heavy fumes from corrosive gas or solvents.
  - Excessively dusty locations.
  - Locations subject to strong vibrations or shock.
  - Locations subject to surge voltages and/or electromagnetic interference.
- (4) If the main unit becomes soiled, wipe it off using a soft, dry cloth. Use of organic solvents (such as thinner or benzene) causes deterioration and discoloration of the outer casing.
- (5) Do not use the GL840 in the vicinity of other devices which are susceptible to electromagnetic interference.
- (6) Measured results may not conform to the stated specifications if the GL840 is used in an environment which is subject to strong electromagnetic interference.
- (7) Insofar as possible, position the GL840 input signal cables away from any other cables which are likely to be affected by electromagnetic interference.
- (8) For stabilized measurement, allow the GL840 to warm up for at least 30 minutes after turning it on.

## (9) Supported terminals

Model name/Product name	Terminal Name	Firmware version
GL840-WV/ GL840-SDWV	B-565	Ver.1.00 or later
GL840-M/ GL840-SDM	B-564	Ver.1.00 or later
Standard 20CH screwless terminal	B-564SL	Ver.1.00 or later
GL860 Standard 20CH screw terminal	B-563	Ver.1.70 or later
GL860 Standard 20CH screwless terminal	B-563SL	Ver.1.70 or later
GL860 Standard 30CH screwless terminal	B-563SL-30	Not available

(10) When you want to use in combination of the Petit LOGGER GL100-WL (separately sold) and various modules (such as GS sensor and terminal / adapter), please refer to the GL100 User's Manual.

- When using in combination described above, please be careful to the operating environment because the environmental conditions of the GL840 midi LOGGER are applied.

It may cause abnormal operation or damage.

- Allowable temperature range: 0 to 45°C, Allowable humidity range: 5 to 85%R.H, non-condensing. (0 to 40°C when battery-powered / 15 to 35°C when charging)

---

 **CAUTION**

**When using temperature and humidity sensor (GS-TH) and the GL840 at the same time, the operating environment of GL840 is applied.**

---

- Temperature and Humidity Sensor (GS-TH):
  - Humidity sensors measure the change in dielectric capacity of water adsorption. As a result, humidity from organic materials such as fine particles or exhaust gas may have an effect on the sensor. Use in environments with large quantities of these organic materials may lead to significant measurement inaccuracies.
- CO2 Sensor (GS-CO2 ):
  - Because exhaled CO2 may have an effect on the sensor readings, do not use the sensor to take measurements near the face. Additionally, should air flow to the sensor be blocked, it will result in inaccurate readings, so be sure to keep vent holes open.
- Illumination / Ultraviolet Sensor (GS-LXUV):
  - When measuring illumination or ultraviolet light that can have harmful effects on the eyes or skin, be sure to use protective eyewear, shielding, etc.
  - If the sensor becomes dirty, it may affect measurements, so wipe it with a soft cloth when it becomes dirty.
  - Take care to avoid cracking the sensor when handling it. If the sensor is damaged or cracked it may affect measurements, so replace the sensor.
- Others
  - Depending on the usage and operating environment of Temperature and Humidity Sensor (GS-TH), CO2 Sensor (GS-CO2), and Illumination / Ultraviolet sensor (GS-LXUV), it is recommended to replace periodically the sensor with new one because the sensor performance may be deteriorated.
  - The 3-axis Acceleration/Temperature Sensor (GS-3AT) conforms to the IP54 standards, but the GL840 does not conform to the IP54 standards. When connecting the GS-3AT to the GL840, it cannot be used as a product that conforms to the IP54 standards.

### **Notes on the Use of This Manual**

- (1) All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, without the prior written permission of Graphtec Corporation.
- (2) The specifications and other information in this manual are subject to change without notice.
- (3) While every effort has been made to supply complete and accurate information about this product, please address any inquiries about unclear information, possible errors, or other comments to your sales representative or nearest Graphtec vendor.
- (4) Notwithstanding the preceding paragraph, Graphtec Corporation assumes no liability for damages resulting from the use of the information contained herein or of the product.

### **About Registered Trademarks**

Microsoft and Windows are registered trademarks or trademarks of Microsoft Corporation in the U.S. and elsewhere.

Other company names and product names included in this manual are registered trademarks or trademarks of their respective companies.

### **Copyright**

All copyrights regarding this manual belong to Graphtec Corporation.

# CONTENTS

<b>To Ensure Safe and Correct Use</b> .....	<b>i</b>
<b>Safety Precautions</b> .....	<b>ii</b>
<b>Introduction</b> .....	<b>1</b>
Notes on Use .....	<b>1</b>
Notes on the Use of This Manual .....	<b>V</b>
About Registered Trademarks .....	<b>V</b>
Copyright .....	<b>V</b>

## CHAPTER 1 General Description

<b>1.1 Overview</b> .....	<b>1-2</b>
<b>1.2 Features</b> .....	<b>1-2</b>
<b>1.3 Operating Environment</b> .....	<b>1-3</b>
Ambient Operating Conditions .....	<b>1-3</b>
Warming-up Before Use .....	<b>1-4</b>
Configuration When in Use .....	<b>1-4</b>
<b>1.4 Notes on Temperature Measurement</b> .....	<b>1-5</b>
<b>1.5 Notes on Using the Monitor</b> .....	<b>1-5</b>
<b>1.6 Changing the Display Language</b> .....	<b>1-5</b>

## CHAPTER 2 Checks and Preparation

<b>2.1 Checking the Outer Casing</b> .....	<b>2-2</b>
<b>2.2 Checking the Accessories</b> .....	<b>2-2</b>
<b>2.3 Nomenclature and Functions</b> .....	<b>2-3</b>
<b>2.4 Connecting the Power Cable and Turning on the Power</b> .....	<b>2-4</b>
<b>2.5 Connecting the Signal Input Cables</b> .....	<b>2-6</b>
<b>2.6 Logic Alarm Cable Connection and Functions</b> .....	<b>2-11</b>
<b>2.7 Mounting the SD CARD</b> .....	<b>2-14</b>
<b>2.8 Installing the Wireless Unit (B-568: Option)</b> .....	<b>2-16</b>
<b>2.9 Connecting to a PC</b> .....	<b>2-18</b>
<b>2.10 Using the Battery Pack (B-569: Option)</b> .....	<b>2-21</b>
<b>2.11 Connecting the Humidity Sensor (Optional)</b> .....	<b>2-23</b>
<b>2.12 Removing and mounting each terminal</b> .....	<b>2-24</b>
<b>2.13 Mounting the Extension Terminal Base (Optional) and Extension Terminal Cable (Optional)</b> ..	<b>2-26</b>
2.13.1 Mounting the extension terminal base .....	<b>2-26</b>
2.13.2 Mounting multiple extension terminals .....	<b>2-28</b>
<b>2.14 Precautions to Observe When Performing Measurement</b> .....	<b>2-32</b>
<b>2.15 Noise Countermeasures</b> .....	<b>2-35</b>
<b>2.16 Connecting the Temperature and Humidity Sensor (GS-TH) (Optional)</b> .....	<b>2-36</b>
<b>2.17 Connecting the 3-axis Acceleration / Temperature Sensor (GS-3AT) (Optional)</b> .....	<b>2-37</b>



2.18	Connecting the 4ch Voltage / Temperature Terminal (GS-4VT) (Optional) .....	2-38
2.19	Connecting the 4ch Thermistor Terminal (GS-4TSR) (Optional) .....	2-41
2.20	Connecting the Illumination / Ultraviolet Sensor (GS-LXUV) (Optional).....	2-44
2.21	Connecting the CO2 Sensor (GS-CO2) (Optional) .....	2-45
2.22	Connecting the Adapter for AC Current Sensor (GS-DPA-AC) (Optional) .....	2-46
2.23	Connecting the Branch Adapter for GS (GS-DPA) (Optional) .....	2-48
2.24	When Fixing the GL840 Body .....	2-51
2.25	Setting the Date and Time .....	2-52

## CHAPTER 3 Settings and Measurement

3.1	Window names and functions .....	3-2
3.2	Key Operation .....	3-8
3.3	Operation Modes .....	3-17
3.4	Setting Menus .....	3-21
	(1) AMP settings .....	3-21
	(2) DATA settings .....	3-47
	(3) TRIG settings .....	3-55
	(4) Interface settings .....	3-61
	(5) OTHER settings .....	3-80
	(6) FILE menu .....	3-84
	(7) File box .....	3-89
	(8) Character string input .....	3-91
	(9) Data replay menu .....	3-92
	(10) Integrated bar graph display .....	3-96
	(11) NAVI menu .....	3-100
	(12) Quick settings .....	3-102
	(13) To cancel key lock by password .....	3-103
3.5	WEB Server Function .....	3-104
3.6	List of Error Codes .....	3-109

## CHAPTER 4 Specification

4.1	Standard Specifications .....	4-2
	Standard Specifications .....	4-2
	Memory devices .....	4-3
	PC I/F .....	4-3
	Monitor .....	4-3
	GL840-M: B-564 / B-564SL .....	4-4
	GL840-WV: B-565 .....	4-6
4.2	Function Specifications .....	4-10
	Function Specifications .....	4-10
	Trigger/Alarm Functions .....	4-10
	External Input/Output Functions .....	4-12

**4.3 Accessories/Optional Accessories .....4-13**  
    Control Software ..... 4-13  
    Accessories ..... 4-13  
    Wireless LAN Unit B-568 (Option) ..... 4-13  
    Battery Pack B-569 (Option) ..... 4-14  
    Humidity Sensor B-530 (Option) ..... 4-14  
    List of Options ..... 4-15

**4.4 External Dimensions .....4-16**

**INDEX .....I-1**

# ***CHAPTER 1 General Description***

---

This chapter provides a general description of the GL840 and its features.

## **PRODUCT SUMMARY**

- 1.1 Overview***
- 1.2 Features***
- 1.3 Operating Environment***
- 1.4 Notes on Temperature Measurement***
- 1.5 Notes on Using the Monitor***
- 1.6 Changing the Display Language***

## 1.1 Overview

The GL840 is a compact, lightweight, multi-CH, and multi-purpose data logger with a 7-inch color display. There are five types of terminal units with 20 channels. By using the expansion terminal base, it is possible to measure up to 200 channels. In addition, when connecting various modules, the voltage, temperature and humidity as well as the acceleration, AC current, CO<sub>2</sub>, and illuminance / ultraviolet etc. can be measured. The GL840 can save the high-capacity measurement data directly in the internal memory or SD CARD. For the PC interface, as USB and Ethernet is included as standard, system configuration according to use is possible. As the Ethernet function is equipped with both WEB server and FTP server functions, remote supervision and data transfer are also possible. Multipurpose remote measurement can also be performed by installing an optional wireless unit and using it in combination with a wireless LAN.

## 1.2 Features

### Input

- Adoption of a pluggable M3 screw type or screwless type input terminal facilitates wiring.
- Up to 200 channels can be connected using the expansion terminal base and the terminal unit with 20 channels.
- When using the Graphtec's GS series and terminal / adapter, the acceleration, AC current, CO<sub>2</sub>, and illuminance / ultraviolet measurements are also possible.
- Because that the terminals of all terminal units have a whole CH isolated, the different standard signals can be measured at the same time.

In addition, when using the withstand high-voltage high-precision terminal, you can measure in the environmental conditions of high withstand voltage.

### Display & Operation

- With the GL840's high-resolution 7-inch TFT color liquid crystal display, you can confirm the waveforms of measured data and each channel's settings at a glance.
- Easy operation is achieved through a straightforward menu structure and key allocation which resembles mobile phones.

### Data Capture

- The high-capacity measurement data can be saved directly in the internal memory or SD CARD.
- Because the SD CARD is used as an external memory, you can measure a long period of time with peace of mind while data backup.
  - \* When the optional wireless unit is installed, the SD CARD cannot be inserted into the SD CARD2 slot.
- Because disk image can be used for the internal memory, multiple data can be saved.
- The new ring memory capture function maintains latest data even after capturing for a long term. (You need to set how long you want to keep data.)
- For voltage, temperature and humidity measurements, data can be captured at sampling rates of up to 10 msec per channel by using fewer measuring channels. (Temperature measurement can be done at sampling rates of 100 msec and higher.)
- The GL840 is equipped with the relay recording function, and 2GByte or more data can be saved by switching the to the other file without data missing. (When the capacity of one file reaches 2000MB, the file is switched.)

## Data Control & Processing

- The application software provided lets you set conditions and monitor data on a PC.
- The USB drive mode function enables the internal memory and SD CARD to be recognized as an external drive by the PC.  
(After connecting the GL840 to the computer, turn on the power of the GL840 while holding down the [START] key.)
- The WEB server function enables control and monitoring from a remote location without using dedicated software
- The FTP client function enables backup of measurement data to the FTP server.
- The NTP client function enables synchronization of the time with the NTP server.
- When optional wireless unit is installed, the data capture can be performed remotely by controlling the GL100-WL.

## 1.3 Operating Environment

This section explains the operating environment for the GL840.

### Ambient Operating Conditions

- (1) Ambient temperature and humidity (the GL840 must be operated within the following ranges.)
  - Temperature range: 0 to 45°C (0 to 40°C when a battery pack is mounted, 15 to 35°C when battery is being charged)
  - Humidity range: 5 to 85%R.H.
- (2) Environment (Do not use in the following locations.)
  - Outdoor
  - A Location such as being exposed to direct sunlight
  - Locations exposed to salty air, corrosive gases, or organic solvents
  - Dusty locations
  - Locations subject to vibration or impact
  - Locations subject to voltage surge or electromagnetic interference such as lightning or electric furnaces
- (3) Installation category (over-voltage category)
  - The GL840 belongs to Installation Category II defined in IEC60664-1.
  - Never use the GL840 for Installation Category III or IV.
- (4) Measurement category
  - The standard terminal (B-564) and screwless terminal (B-564SL) connected to the GL840 should be not used in Measurement Category II, III, and IV.
  - The withstand high-voltage high-precision terminal (B-565) connected to belongs to Category II. Therefore, it should be not use in Category III or IV.
  - The GL860 Standard 20CH screw terminal (B-563) and GL860 Standard 20CH screwless terminal (B-563SL) connected to the GL840 should be not used in Measurement Category II, III, and IV.
- (5) Altitude
  - Altitude up to 2000 m.
- (6) Mains supply voltage
  - 100 to 240 VAC  $\pm$ 10%

(7) Pollution degree

- POLLUTION DEGREE 2 in accordance with IEC60664.



•If condensation occurs...

Condensation occurs in the form of water droplets on the device surfaces and interior when the GL840 is moved from a cold to a warm location. Using the GL840 with condensation will cause malfunctioning. Wait until the condensation has disappeared before turning on the power.

---


### Warming-up Before Use

The GL840 should be allowed to warm up with the power turned on for approximately 30 minutes to ensure that it operates according to the specified performance.

### Configuration When in Use

Do not use the GL840 standing upright or at an angle. It must always be laid flat or inclined on the stands.

<Usage Configuration>

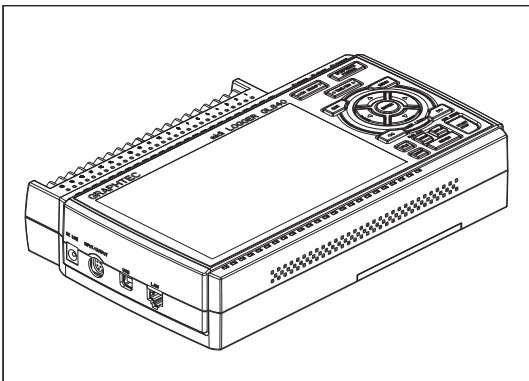

Do not block the air vent on the GL840, as this will cause malfunctioning.

Measurement accuracy may not be satisfactory if the system is used in a condition other than described above.

---

## 1.4 Notes on Temperature Measurement

Please observe the following precautions when performing temperature measurement.

- Do not block the air vents. Always provide a space of at least 30 cm on all sides of the GL840.
- For stabilized temperature measurement, allow the GL840 to warm up for at least 30 minutes after turning it on.
- Exposure of the input terminals to direct drafts, direct sunlight, or abrupt changes in temperature may impair the equilibrium of the input parts and result in measurement errors. To measure temperature in such an environment, take appropriate countermeasures such as changing the installation site of the GL840.
- To conduct measurement in noisy environments, connect the GL840's GND terminal to ground (Refer to "2.15 Noise Countermeasures").
- If measured values fluctuate due to noise, set to a slower sampling speed (Refer to "(2) DATA setting" in "3.4 Setting Menu").

## 1.5 Notes on Using the Monitor

The monitor is an LCD display unit, and so the display will vary depending on the operating environment.

### CHECKPOINT


- When the screen saver function is enabled, the screen will not be displayed if there is no operation for the set time.
- To display the screen, press any of the operation keys. The screen display will resume.

### CAUTION

- Condensation may form on the LCD screen if the GL840 is moved from a cold to a warm location. In such a case, wait for the power-on until the LCD screen reaches room temperature.
- The LCD screen is manufactured with very high precision technology, but black dots may be visible and red, blue, and green dots may not disappear. Likewise, streaks may appear when viewed from certain angles. These phenomena are due to the LCD screen construction, and are not signs of a fault.

## 1.6 Changing the Display Language

You can choose the language displayed on the screen. The default display language is set to English when the GL840 is shipped overseas. To change the display language, see the instructions in "OTHER:Language".

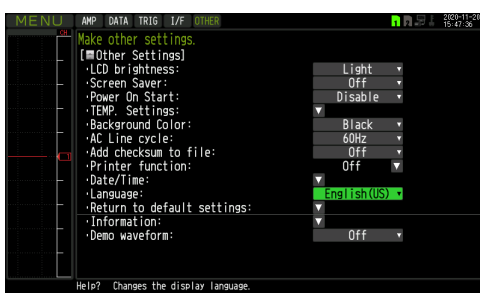

# ***CHAPTER 2 Checks and Preparation***

---

This chapter explains how to check the GL840's external casing and accessories, and how to prepare the GL840 for operation.

## **PRODUCT SUMMARY**

- 2.1 Checking the Outer Casing***
- 2.2 Checking the Accessories***
- 2.3 Nomenclature and Functions***
- 2.4 Connecting the Power Cable and Turning on the Power***
- 2.5 Connecting the Signal Input Cables***
- 2.6 Logic Alarm Cable Connection and Functions***
- 2.7 Mounting the SD CARD***
- 2.8 Installing the Wireless Unit (B-568: Option)***
- 2.9 Connecting to a PC***
- 2.10 Using the Battery Pack (B-569: Option)***
- 2.11 Connecting the Humidity Sensor (Optional)***
- 2.12 Removing and mounting each terminal***
- 2.13 Mounting the Extension Terminal Base (Optional) and Extension Terminal Cable (Optional)***
- 2.14 Precautions to Observe When Performing Measurement***
- 2.15 Noise Countermeasures***
- 2.16 Connecting the Temperature and Humidity Sensor (GS-TH) (Optional)***
- 2.17 Connecting the 3-axis Acceleration / Temperature Sensor (GS-3AT) (Optional)***
- 2.18 Connecting the 4ch Voltage / Temperature Terminal (GS-4VT) (Optional)***
- 2.19 Connecting the 4ch Thermistor Terminal (GS-4TSR) (Optional)***
- 2.20 Connecting the Illumination / Ultraviolet Sensor (GS-LXUV) (Optional)***
- 2.21 Connecting the CO2 Sensor (GS-CO2) (Optional)***
- 2.22 Connecting the Adapter for AC Current Sensor (GS-DPA-AC) (Optional)***
- 2.23 Connecting the Branch Adapter for GS (GS-DPA) (Optional)***
- 2.24 When Fixing the GL840 Body***
- 2.25 Setting the Date and Time***



## 2.1 Checking the Outer Casing

After unpacking, check the GL840's outer casing before use. In particular, please check for the following:

- Surface scratches
- Other flaws such as stains or dirt

## 2.2 Checking the Accessories




After unpacking, check that the following standard accessories are included.

### Standard Accessories


Item	Remarks	Quantity
Quick Start Guide	GL840-UM-85x	1
CD-ROM	User's Manual, Application software	1
AC cable/AC adapter	100 to 240 VAC, 50/60 Hz	1
Ferrite core	Used to attach to the USB cable.	1

## 2.3 Nomenclature and Functions

This section describes the names and function of parts of the GL840.

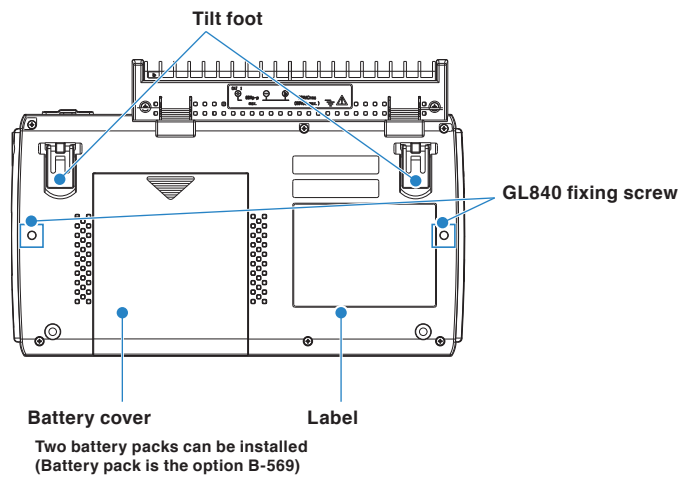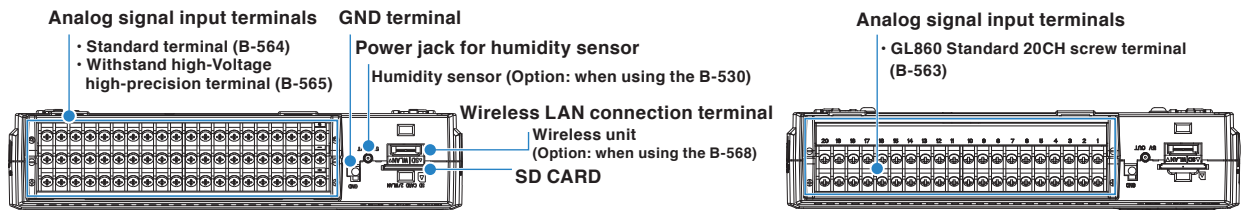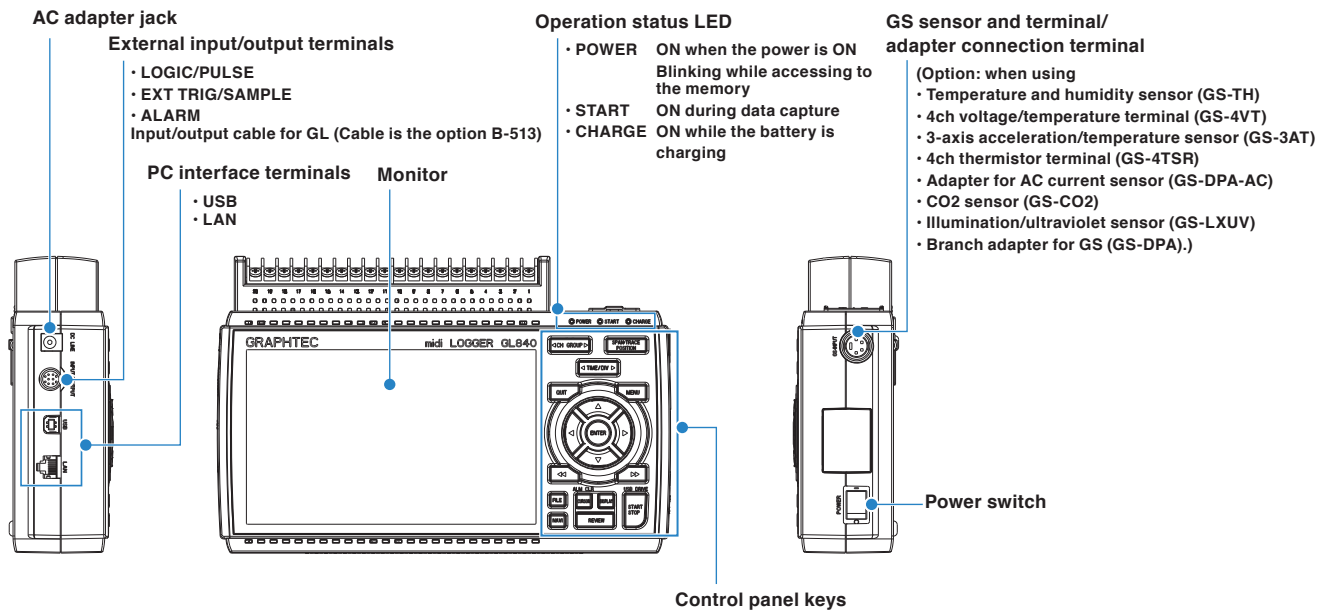

### Screwless terminal (B-564SL/B-563SL)

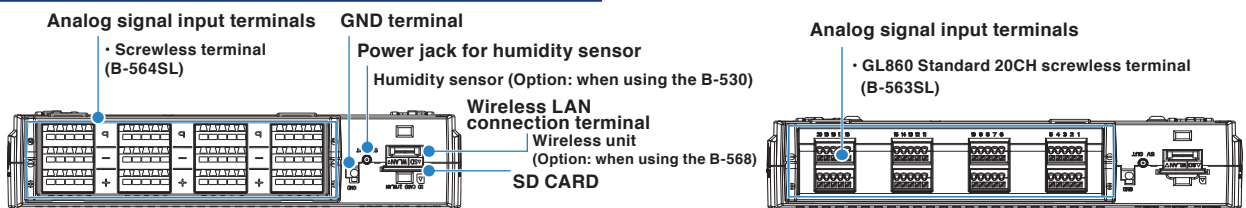

## 2.4 Connecting the Power Cable and Turning on the Power

This section describes how to connect the power cable and turn on the power. The connection method will vary depending on the type of power supply used.


### Connecting to an AC Power Supply

Connect to an AC power supply using the AC cable and AC adapter that are supplied as accessories.


#### **⚠ CAUTION**

Be sure to use the AC adapter that is supplied as a standard accessory.

- (1) Plug the AC cable into the AC adapter.

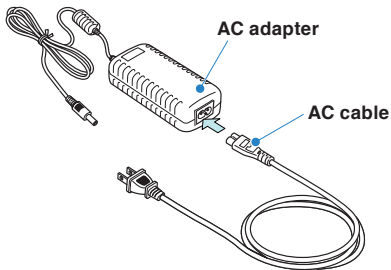


- (2) Connect the output side of the AC adapter to the connector on the GL840.

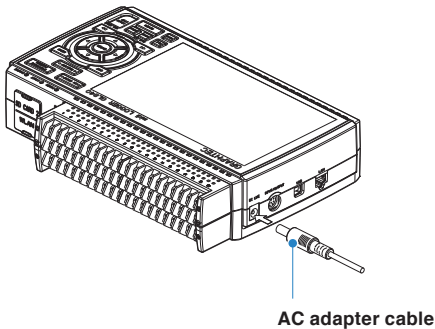

- (3) Using the flat-blade screwdriver, press against the minus (-) button above the GND terminal, while connecting the grounding cable to the GL840.

Connect the other end of the cable to ground.

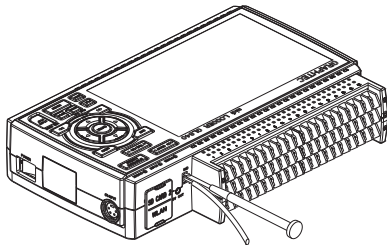

- (4) Plug the AC cable into the mains power outlet.  
 (5) Press the power switch on the GL840 to the ON side to turn on the power.

#### **⚠ CAUTION**

Always connect the GND terminal after referring to the safety precautions.

The GL840 must be grounded even when connected to other devices and sharing a common ground level.

## Connecting to a DC Power Supply


Connect to a DC power supply using DC drive cable (B-514: option).

---

### **CAUTION**

- Use a power supply within the 8.5 to 26.4 VDC range.
  - For DC drive cable, please be sure to use the B-514.
- 

- (1) Configure the tip of the DC drive cable (B-514: 2m) to enable it to be connected to the DC power supply.
- (2) Connect the DC output side to the power supply connector on the GL840.

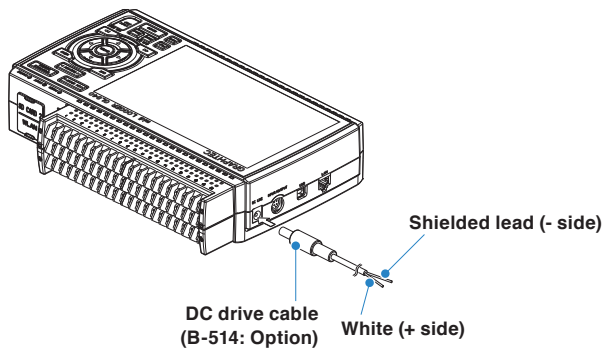

- (3) Connect the DC input side to the DC power supply.
- 

### **CAUTION**

Be sure to check the polarity of the wire tips when performing wiring.

---

- (4) Press the power switch on the GL840 to the ON side to turn on the power.

## 2.5 Connecting the Signal Input Cables


This section describes how to connect the signal input cables.

### ⚠ WARNING

During wiring, confirm that the signal's supply source is turned OFF to prevent electrical shocks. Also, position the GL840 input cable away from any power lines and ground cables.


### Terminal Configuration and Signal Types (Standard terminal: B-564, Withstand high-voltage high-precision terminal: B-565)

Terminal assignment of standard terminal and Withstand high-voltage high-precision terminal is common.

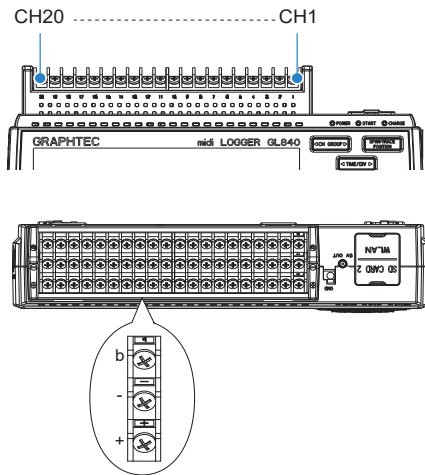


### Connection diagram (Standard terminal: B-564, Withstand high-voltage high-precision terminal: B-565)


#### DC voltage input

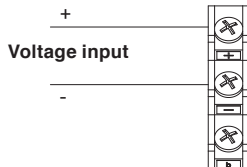

#### Thermocouple input

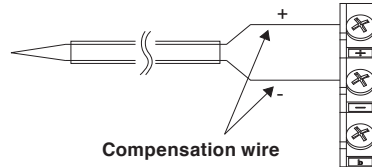


#### Resistance bulb input

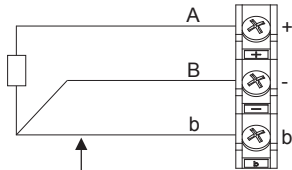

The lead wire resistance per line should be 10Ω or less, and the resistance values of the three lines should be equal.

#### DC current input

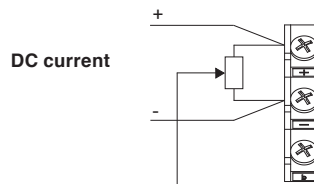

#### Shunt resistor

Ex: For 4-20mA, add 250Ω (±0.1%) and measure in the 1-5V range.

\* Use B-551 (option) for the shunt resistor.

+ .....High-voltage terminal (terminal for high-voltage input signals)

- .....Low-voltage terminal (terminal for low-voltage input signals)


b .....Dedicated terminal when connecting resistance bulb

\* Resistance bulb input terminals A (+) and B (-) are isolated within each channel. Terminal b is shorted within all channels.

Item	Description
Input configuration	Isolated input, scanning
Measurement range	20, 50, 100, 200, 500 mV/F.S.; 1, 2, 5, 10, 20, 50, 100 V; 1-5V/F.S.


Item	Description
Thermocouples	K, J, E, T, R, S, B, N, C (WRe 5-26)
Resistance bulb	Pt100, JPt100, Pt1000 (IEC751)
A/D resolution	16-bit (Effective resolution: Approx. 1/40,000 of the +/- range)
Filter	Off, 2, 5, 10, 20, 40 Filter operation is on a moving average basis. The average value of the set sampling count is used. If the sample interval exceeds 30 seconds, the average value of data obtained in a sub-sample (30 seconds) is used.

**Terminal arrangement and signal type (Screwless terminal: B-564SL)**

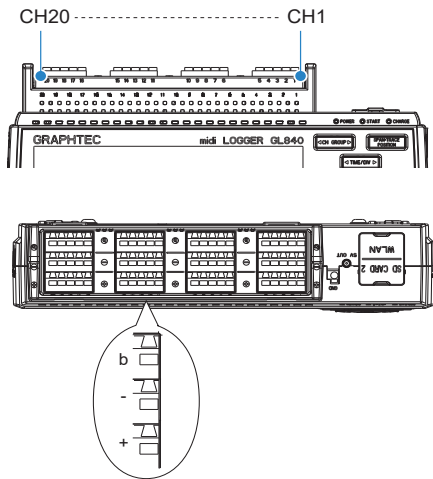


**Wiring diagram (Screwless terminal: B-564SL)**


DC voltage input

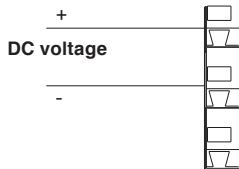

Thermocouple input

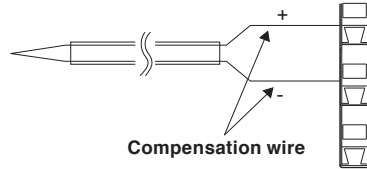


Resistance bulb input

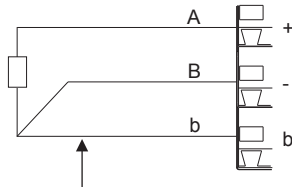

The lead wire resistance per line should be 10Ω or less, and the resistance values of the three lines should be equal.

DC current input

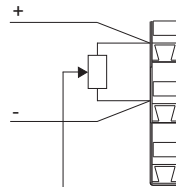

Shunt resistance

Ex: For 4-20mA, add 250Ω (± 0.1%) and measure in the 1 - 5V range.

+ .....High-voltage terminal (terminal for high-voltage input signals)


- .....Low-voltage terminal (terminal for low-voltage input signals)

b .....Dedicated terminal when connecting resistance bulb

\* Resistance bulb input terminals A (+) and B (-) are isolated within each channel. Terminal b is shorted within all channels.


Item	Description
Input configuration	Isolated input, scanning
Measurement range	20, 50, 100, 200, 500 mV/F.S.; 1, 2, 5, 10, 20, 50, 100 V; 1-5V/F.S.
Thermocouples	K, J, E, T, R, S, B, N, C (WRe 5-26)
Resistance bulb	Pt100, JPt100, Pt1000 (IEC751)
A/D resolution	16-bit (Effective resolution: Approx. 1/40,000 of the +/- range)
Filter	Off, 2, 5, 10, 20, 40 Filter operation is on a moving average basis. The average value of the set sampling count is used. If the sample interval exceeds 30 seconds, the average value of data obtained in a sub-sample (30 seconds) is used.

**Terminal Configuration and Signal Types (GL860 Standard 20CH screw terminal: B-563)**

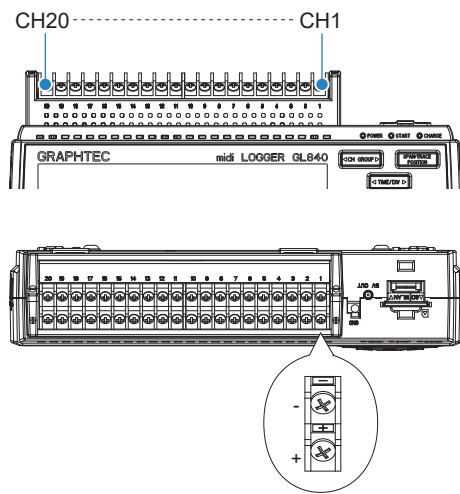


**Connection diagram (GL860 Standard 20CH screw terminal: B-563)**


DC voltage input

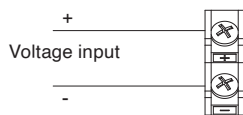

Thermocouple input

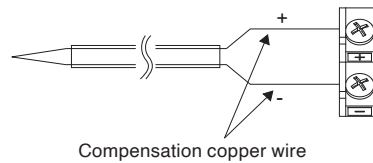

Current input

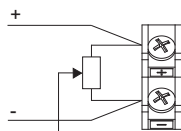

Shunt resistor

Ex: The current is converted to the voltage in the shunt resistor.  
For 4 to 20mA current input, installing 250 ohms (0.1%) resistor for converting 1 to 5V.


\* Use B-551 (option) for the shunt resistor.

+ .....High-voltage terminal (terminal for high-voltage input signals)

- .....Low-voltage terminal (terminal for low-voltage input signals)


Item	Description
Input configuration	Isolated input, scanning
Measurement range	20, 50, 100, 200, 500 mV/F.S.; 1, 2, 5, 10, 20, 50, 100 V; 1-5V/F.S.
Thermocouples	K, J, E, T, R, S, B, N, C (W: WRe 5-26)
A/D resolution	16-bit (Effective resolution: Approx. 1/40,000 of the +/- range)
Filter	Off, 2, 5, 10, 20, 40 Filter operation is on a moving average basis. The average value of the set sampling count is used. If the sample interval exceeds 30 seconds, the average value of data obtained in a sub-sample (30 seconds) is used.

**Terminal Configuration and Signal Types (GL860 Standard 20CH screwless terminal: B-563SL)**

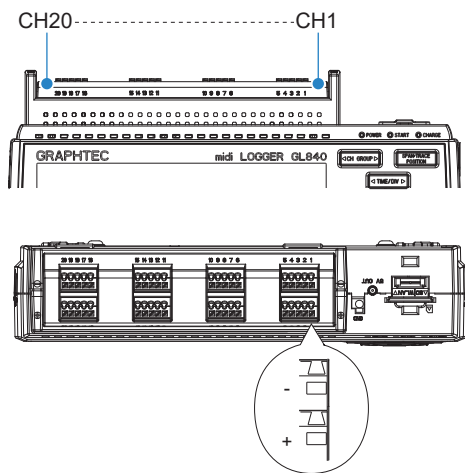


**Connection diagram (GL860 Standard 20CH screwless terminal: B-563SL)**


DC voltage input

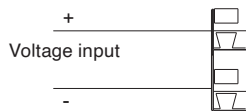

Thermocouple input

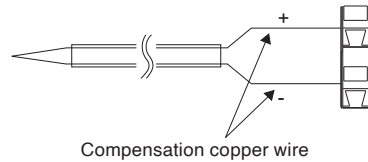

Current input

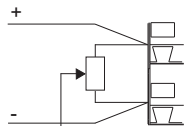

Shunt resistor

Ex: The current is converted to the voltage in the shunt resistor.

For 4 to 20mA current input, installing 250 ohms (0.1%) resistor for converting 1 to 5V.

+ .....High-voltage terminal (terminal for high-voltage input signals)

- .....Low-voltage terminal (terminal for low-voltage input signals)



<b>Item</b>	<b>Description</b>
Input configuration	Isolated input, scanning
Measurement range	20, 50, 100, 200, 500 mV/F.S.; 1, 2, 5, 10, 20, 50, 100 V; 1-5V/F.S.
Thermocouples	K, J, E, T, R, S, B, N, C (W: WRe 5-26)
A/D resolution	16-bit (Effective resolution: Approx. 1/40,000 of the +/- range)
Filter	Off, 2, 5, 10, 20, 40 Filter operation is on a moving average basis. The average value of the set sampling count is used. If the sample interval exceeds 30 seconds, the average value of data obtained in a sub-sample (30 seconds) is used.

## 2.6 Logic Alarm Cable Connection and Functions


This section describes how to connect the logic alarm cables and the functions of cable.

### WARNING

During wiring, confirm that the signal's supply source is turned OFF to prevent electrical shocks. Also, position the GL840 input cable away from any power lines and ground cables.

The Input/output cable for GL (B-513: Option) enables logic/pulse input, external trigger input, and alarm signal output.

Connect the Input/output cable for GL (B-513: Option) to the external input/output terminal as shown below.

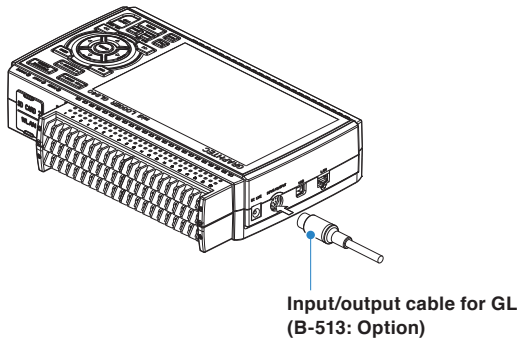

Input/output cable for GL  
(B-513: Option)

### Logic/Pulse Input Specifications

Item	Description
Number of input channels	4
Input voltage range	0 to +24V max. (single-ended ground input)
Threshold level	Approx. +2.5V
Hysteresis	Approx. 0.5 V (+2.5 to +3 V)

\* Switch between logic and pulse input.

### Trigger Input/External Sampling Input Specifications

Item	Description
Number of input channels	1
Input voltage range	0 to +24V max. (single-ended ground input)
Threshold level	Approx. +2.5V
Hysteresis	Approx. 0.5 V (+2.5 to +3 V)

### Alarm Output Specifications


Item	Description
Number of Output channels	4
Output format	Open collector output +5 V, 10 K $\Omega$ pull-up resistance * See the next page for details on alarm output

### CAUTION


When the power is turned OFF or ON, the GL840 temporarily becomes the alarm state.

**Internal equivalent circuit of I/O circuit**


● Alarm output

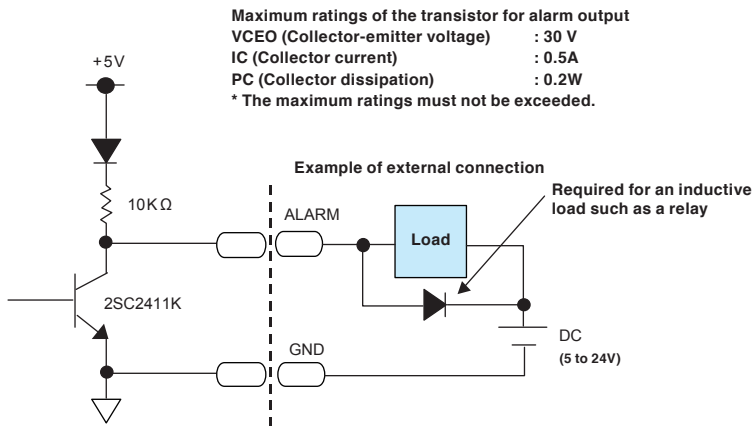

● Logic/pulse input

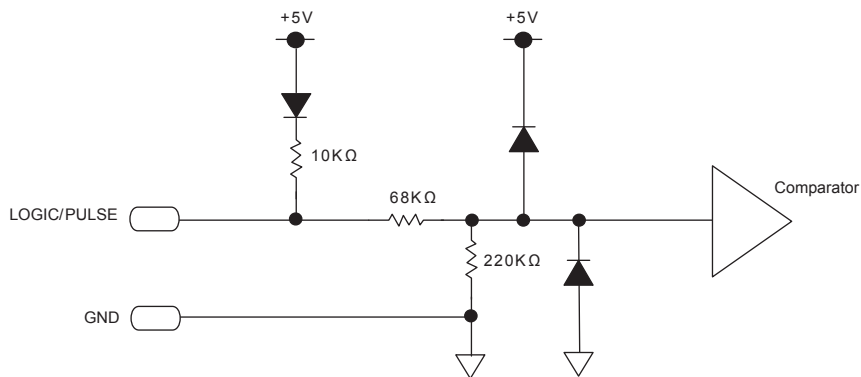

● Trigger input/external sampling input

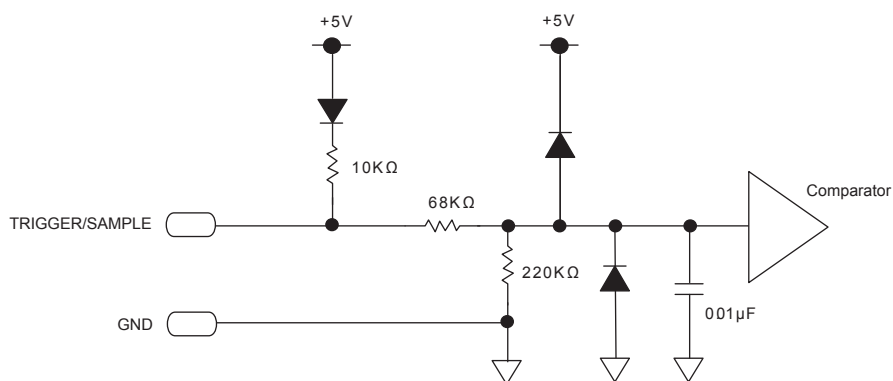


Wiring

Cable tips are bare tips. Perform wiring for the necessary functions.

Signal Name	Channel Number	Wire Color
Logic/Pulse Input	1	Orange with red dotted line
	2	Orange with black dotted line
	3	Grey with red dotted line
	4	Grey with black dotted line
Alarm output	1	White with red dotted line
	2	White with black dotted line
	3	Yellow with red dotted line
	4	Yellow with black dotted line
Trigger input/External sampling input		Pink with red dotted line
GND		Pink with black dotted line
		Shielded

\* Switch between logic and pulse.

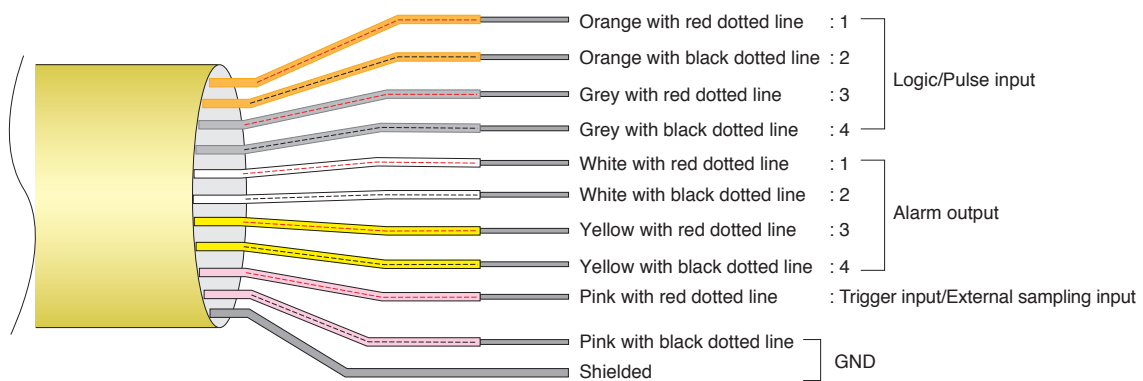

## 2.7 Mounting the SD CARD

### ⚠ CAUTION

- When the SD CARD is inserted, make sure that the card is not locked. If locked, the data cannot be captured.
- Please do not remove the SD CARD while accessing to the SD CARD (Device Access display is displayed in "red" and POWER LED is blinking.). The captured data may be damaged.
- When inserting the large capacity SD CARD, it may take some time to recognize it.

### How to insert the SD CARD


Insert the SD CARD into the SD CARD slot.

### ⚠ CAUTION

When the wireless unit (option) is installed, the SD CARD cannot be inserted.


#### < SD CARD >

(1) Open the SD CARD protective cover.

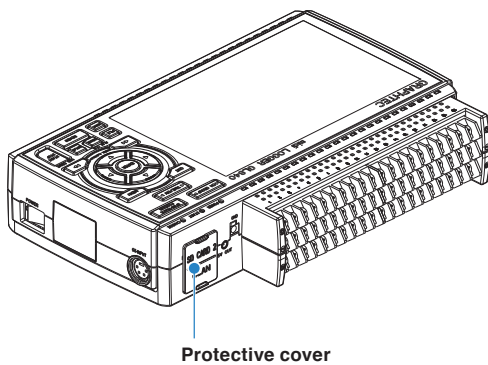


(2) Insert the SD CARD until it clicks and is locked.

\* Make sure that the SD CARD is not locked.

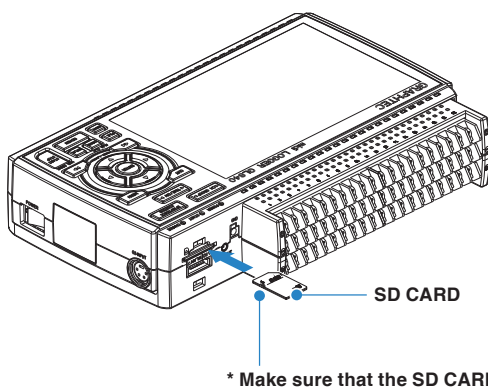

(3) Attach the protective cover into the upper hole and lower hole for the SD CARD protective cover.

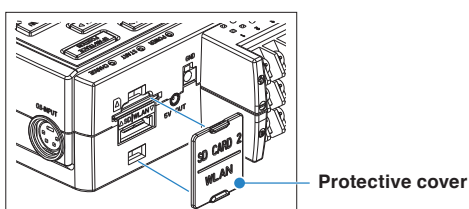

## How to remove the SD CARD


### < SD CARD >

(1) Make sure that the SD CARD displayed on the screen is green, and then remove it.



(2) Remove the SD CARD protective cover.


(3) The SD CARD is unlocked by pushing gently the SD CARD. Then, remove the SD CARD.

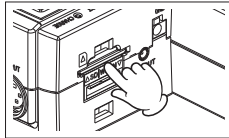

### ⚠ CAUTION

The SD CARD on the screen is displayed in red while accessing to the SD CARD (Device Access display is displayed in "red" and POWER LED is blinking.). Remove the SD CARD only when the SD CARD is displayed in green.

(4) Attach the protective cover into the upper hole and lower hole for the SD CARD protective cover.

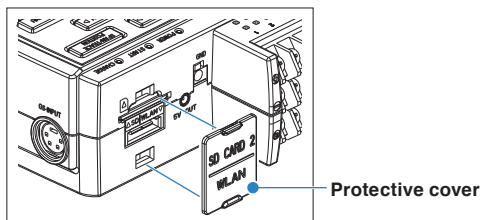

## 2.8 Installing the Wireless Unit (B-568: Option)

To connect the GL840 to the wireless LAN, insert the wireless unit in the SD CARD slot. This section describes the installation procedure using the wireless LAN unit (B-568).

### ⚠ CAUTION

- When the SD CARD has been inserted into the SD CARD slot, please remove the SD CARD.
- When the wireless unit has been inserted, the SD CARD cannot be inserted into the SD CARD slot.
- When inserting the wireless unit, please make sure that the power is turned OFF and then install the unit.
- When using the wireless LAN, please check the "3. Notes on Radio Law" in the "Notes on Use" described above.

### How to insert the wireless LAN unit


Insert the wireless LAN unit into the SD CARD slot.



(1) Turn OFF the GL840's power.


(2) Remove the SD CARD protective cover.

- \* Please keep so as not to lose the SD CARD protective cover.

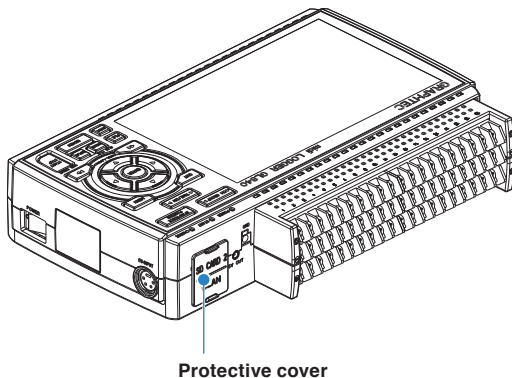


(3) When the SD CARD has been inserted, remove the SD CARD.

- \* The SD CARD is unlocked by pushing gently the SD CARD. Then, remove the SD CARD.

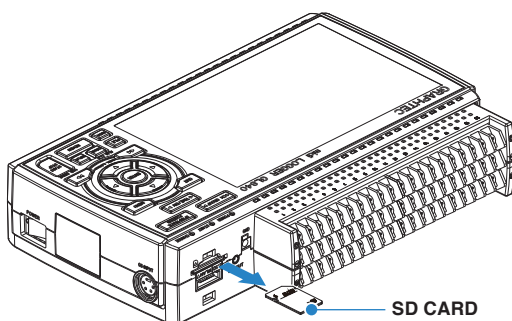

- (4) Align the wireless LAN unit to the wireless unit terminal and the wireless unit fixed guide and then insert the wireless LAN unit until the unit is locked.

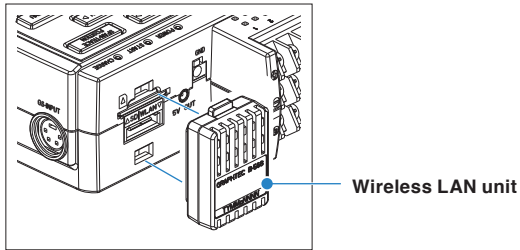


**⚠ CAUTION**

When the wireless LAN unit has been inserted, please be careful when handling so as not to hit and drop.


**Removing the wireless LAN unit**

Turn OFF the power and then remove the wireless LAN unit.

- (1) Push the lock part on the wireless LAN unit to unlock, and then remove it.

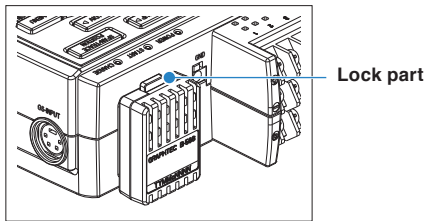

- (2) After removing it, mount the SD CARD protective cover to protect the connectors.

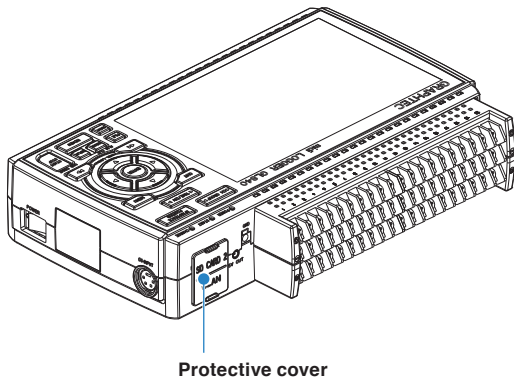




## 2.9 Connecting to a PC

Use the USB or LAN Interface to connect the GL840 to a PC.


### Connection Using a USB Cable

- (1) The GL840 complies with the EMC Directive in the state when the supplied ferrite core is attached to the USB cable.

To connect to the PC with the USB cable, attach the supplied ferrite core to the USB cable as shown in the following figure.

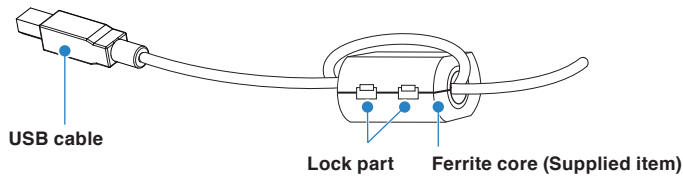

- (2) Connect between the GL840 and PC with the USB cable.

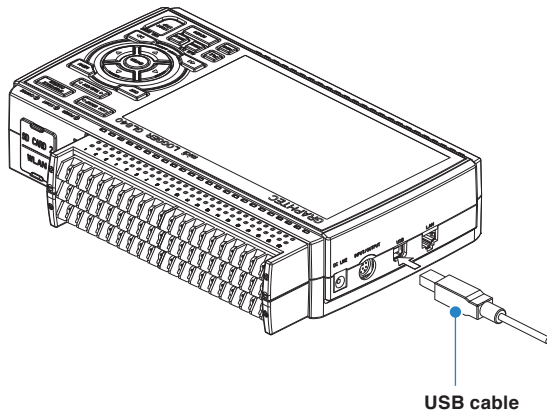


#### **CAUTION**

The USB connector is adjacent to the LAN connector. Make sure the cable is inserted into the correct connector.

#### **CHECKPOINT**


If the USB cable is used, the USB driver must be installed in your PC. Please refer to “USB Driver Installation Manual” in the supplied CD-ROM for the installation procedure.

- Use the cable with A and B connectors to connect the GL840 to a PC.

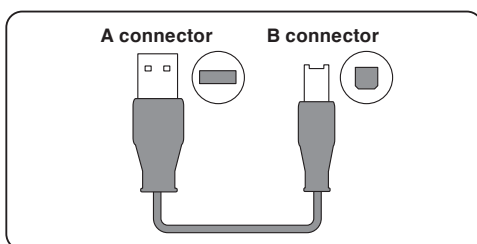


## LAN Connection

Use a LAN cable to connect the GL840 to a PC.

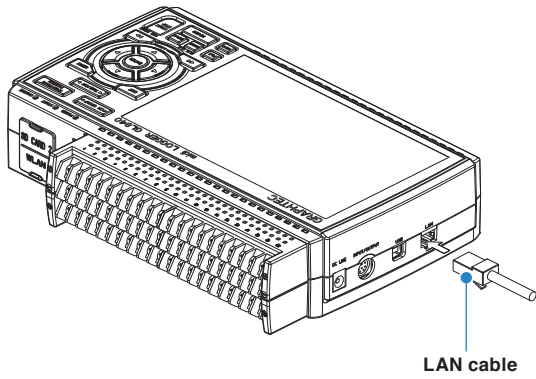


## Cable Types

- Use a crossing cable when connecting directly to a PC, without using a hub.

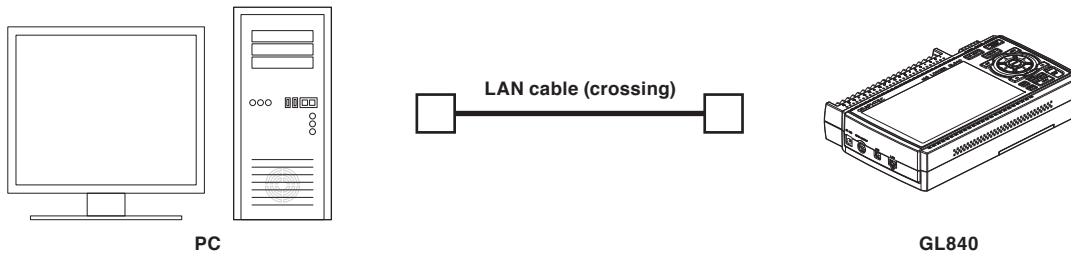

- Use a straight cable when using a hub.

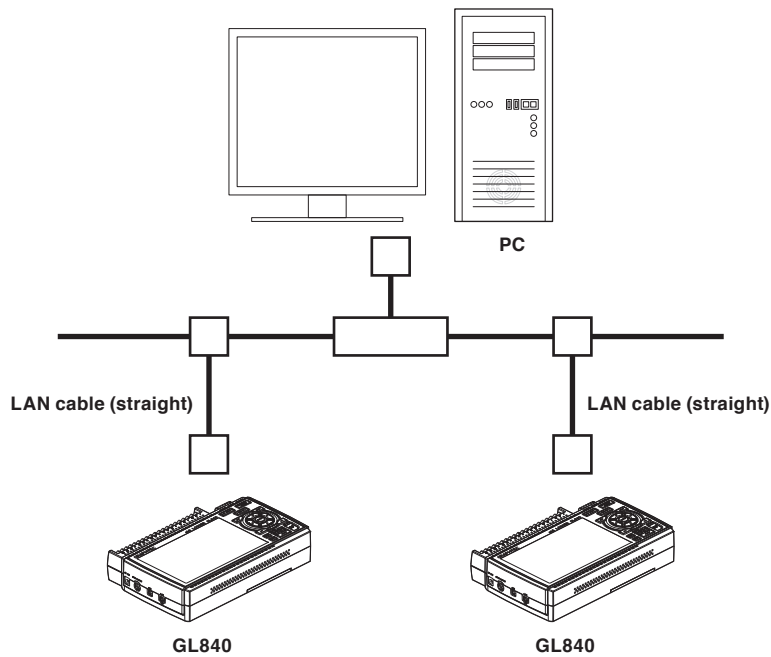


## Connection to the wireless LAN

Insert the wireless LAN unit (optional). For the insertion, refer to “2.8 Installing the Wireless Unit (B-568: Option)”.

### 1. Access point (operating as a base unit):

When connecting the GL840 to the GL100-WL (up to 5 units) or PC/Smartphone via the wireless LAN, the following devices and the operating environment are required.

- PC and Smartphone which can connect to the wireless LAN

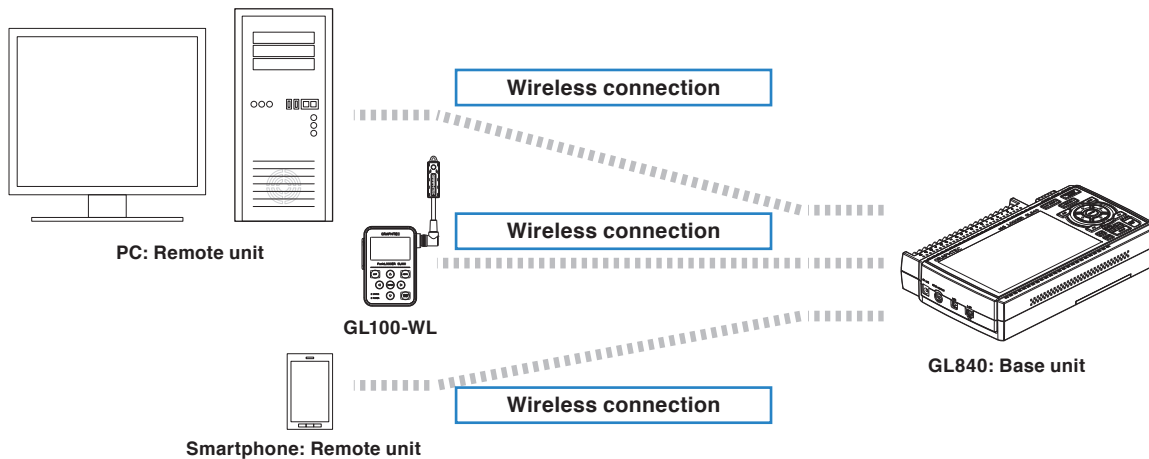


### CAUTION

When the GL100-WL is connected through the wireless LAN, the PC cannot be connected to the GL840 through the wireless LAN.

### 2. Stations (operating as a remote unit):

When connecting to the commercially available wireless LAN base unit and controlling multiple GL840s from PC, the following devices and the operating environment are required.

- PC and Smartphone which can connect to the wireless LAN with the dedicated software
- Wireless LAN base unit (equipped with the functions of Wi-Fi authenticated wireless LAN base unit.)
- Internet environment for Internet connection (Internet provider’s contracts and mobile carrier’s contracts)
- Internet connection and e-mail send/receive environment (Internet provider and Web mail, etc.) when sending/receiving e-mail.

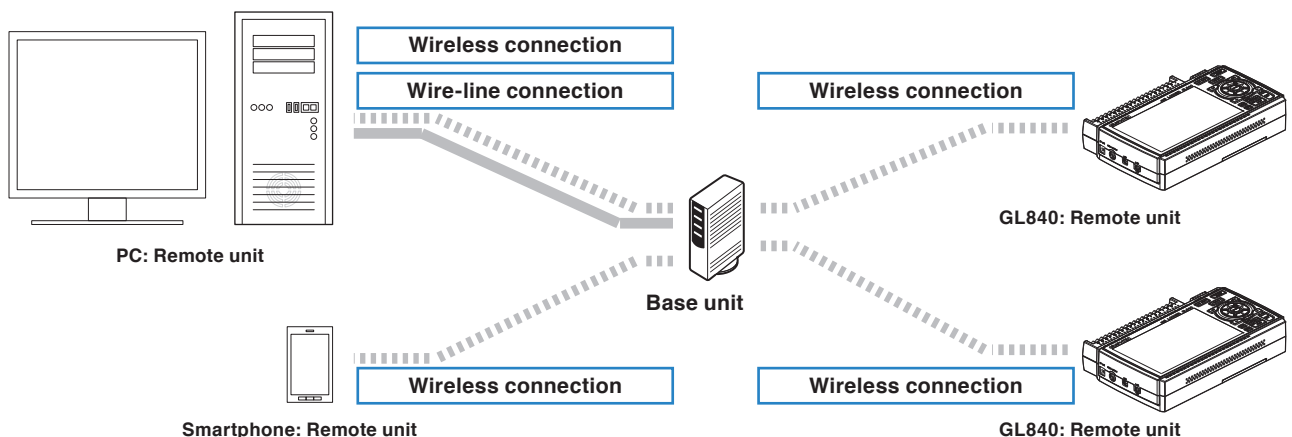


## 2.10 Using the Battery Pack (B-569: Option)

- The B-569 (optional) is the only battery type that can be used with the GL840.
- Refer to the specifications (Page 4-11) for information on the battery run time.
- The operating temperature ranges of the GL840 with a battery pack mounted are as follows:
 


Running on battery	: 0 to 40°C
Battery being charged	: 15 to 35°C

### Mounting the Battery Pack

- (1) While lightly pushing the grip of the battery cover, slid the cover in the direction indicated by the arrow.

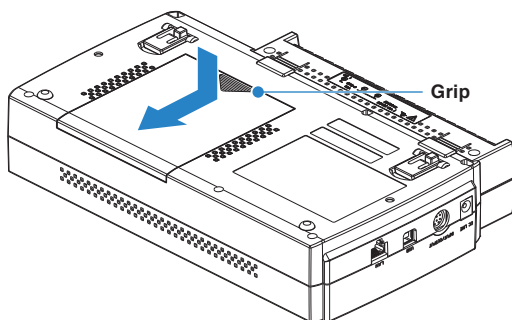

- (2) Attach the battery pack (B-569).

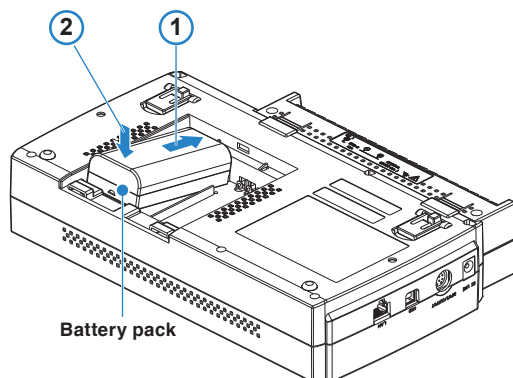


### **CHECKPOINT**

- Either one or two battery packs can be attached.
- To connect one pack, connect to either one of the connectors.
- Attaching two battery packs allows longer operational time.

### **CAUTION**

- When attaching two battery packs, make sure the battery levels are equivalent.
- Do not use a new battery with an old battery at the same time.
- When attaching two battery packs, make sure the remaining amount are same.
- If you are not sure about the amount, charge each battery and then attach full-charged two battery packs.

(3) Attach the battery cover.

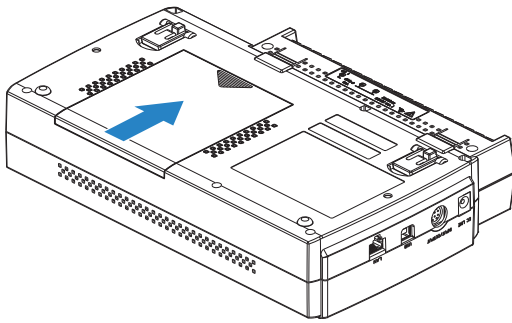


## Charging the Battery

Expected time required for charging:

- Battery pack x 1: approx. 5 hours
- Battery pack x 2: approx. 10 hours

The battery pack is charged by mounting it in the GL840, attaching AC adapter to the GL840.

- (1) Mount the battery pack in the GL840 (see "Mounting the Battery Pack" in the previous page for the mounting procedure.).
- (2) Connect the GL840 to AC power supply. (Please see "2.4 Connecting the Power Cable and Turning on the Power").
- (3) The CHARGE LED lights.

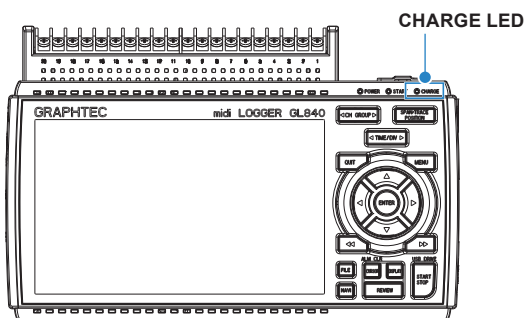

### CHECKPOINT


- GL840 is equipped with a temperature monitor function which starts automatic charging as soon as it is cooled down. Therefore, depending on the internal temperature, charging may not be performed immediately.
- The operating temperature range during charge is from 15 to 35°C.
- When charging is attempted while the power is ON, charging may not be performed immediately even if the temperature environment conforms to the specification. In such a case, set the Screen Saver settings to ON or perform charging while the power is OFF.

### CAUTION

- During data capture, when the battery capacity is lower, the file is closed automatically.
- When using with the AC adapter, the GL840 is automatically battery-powered in case of power outage.
- During the power is supplied directly from the DC power without using the AC adapter, when the DC voltage is 16V or less, the battery charge is disabled.
- The running time depends on the operating environment.  
When the empty battery is charged in the GL220/820/900, the charging in about 80-90% will stop. Once disconnect and connect the AC adapter, or remove and insert the battery pack. The battery pack charging is started in order to charge up to 100%. (It depends on the remaining capacity.)

## 2.11 Connecting the Humidity Sensor (Optional)

Connect the + and - lead wires of the humidity sensor (the B-530: Option) to the desired terminals, and then insert the round connector into the 5V OUT connector on the GL840.

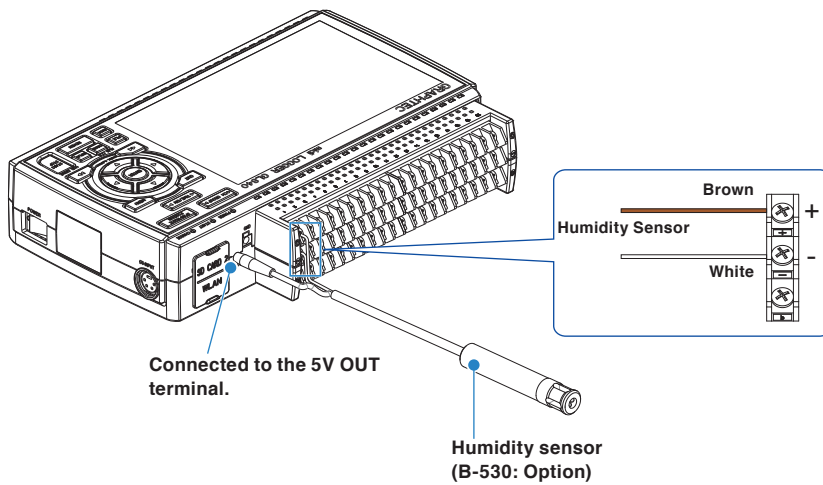

### **CAUTION**

- Do not use the sensor in a strong electrolyte environment. Measured results may not satisfy to the stated.
- The optional humidity sensor power BOX (B-542) is required to use 2 to 10 humidity sensors.
- 5V OUT terminal on the GL840 is available for only one humidity sensor.

## 2.12 Removing and mounting each terminal

This section describes the mounting and removing procedure of the Standard terminal and the Withstand high-voltage high-precision terminal.

The Screwless terminal can be removed and attached in the same way.


### CAUTION

When mounting or removing the standard terminal or Withstand high-voltage high-precision terminal, please make sure that the GL840's power is turned OFF.


### Removing

Pull out the terminal in the direction of the arrow while pressing the lock portion (place) under the Standard terminal or the Withstand high-voltage high-precision terminal.


(1) Press the two lock portions in the direction indicated by arrows.

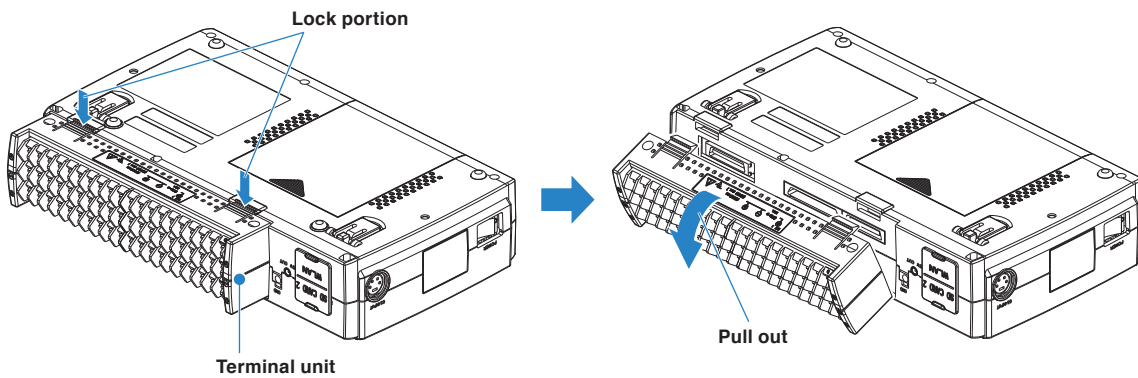

(2) Pull the terminal unit out towards the direction indicated by the arrow.

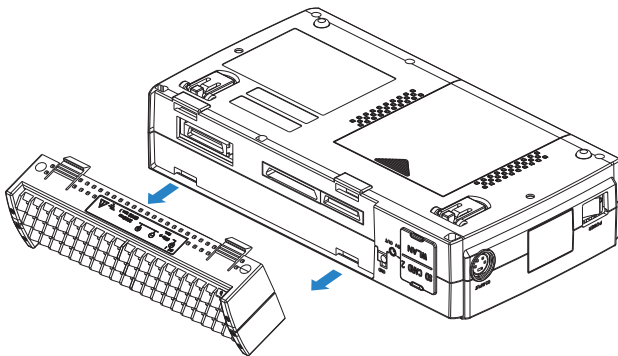


Pull the terminal unit out as shown in the following figure.

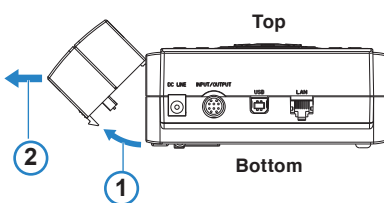


## Mounting


Insert the lock tabs at the top of the standard terminal or the Withstand high-voltage high-precision terminal into the slots of the GL840, and push in the terminal until the lock tabs at the bottom of the terminal are securely locked.

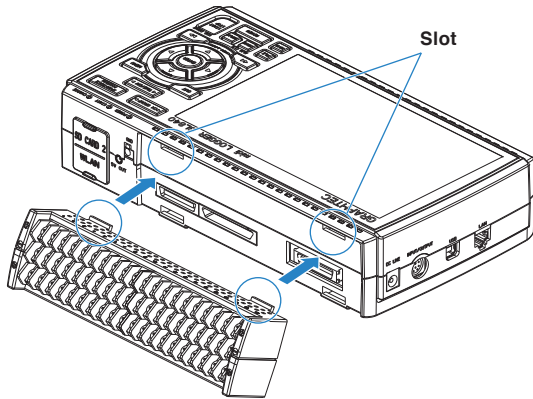

(1) Insert tabs at the top of the terminal unit into the slots.

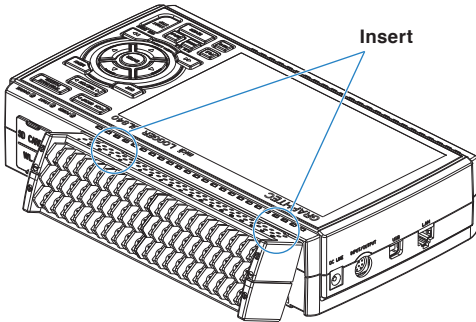

(2) Press the terminal unit in the direction shown until it is securely locked.

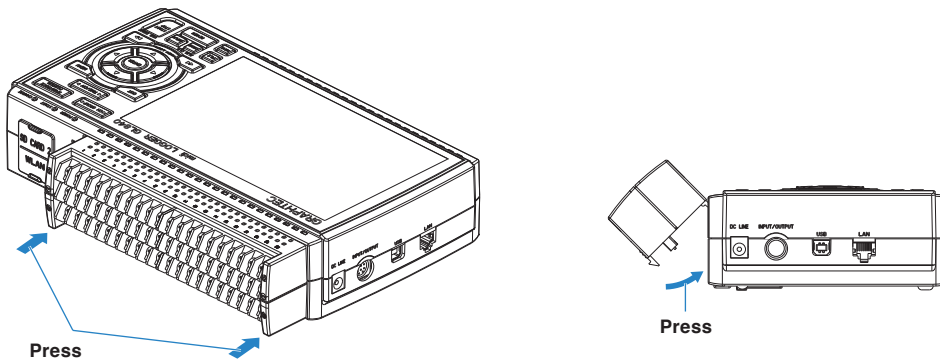

### ⚠ CAUTION

- If the terminal unit that comes with the standard GL800 is mounted on the GL840, the temperature measurement accuracy may not meet the specifications.
- If the terminal unit that comes with the standard GL820 is mounted on the GL840, the temperature measurement accuracy may not meet the specifications.
- The specifications of the Standard terminal (or GL860 Standard 20CH screw terminal), Screwless terminal (or GL860 Standard 20CH screwless terminal) and the Withstand high-voltage high-precision terminal are different, so check the specifications before use.
- The Withstand high-voltage high-precision terminal, Screwless terminal, GL860 Standard 20CH screw terminal and GL860 Standard 20CH screwless terminal is not available for the GL800 and GL820.



## 2.13 Mounting the Extension Terminal Base (Optional) and Extension Terminal Cable (Optional)

### 2.13.1 Mounting the extension terminal base


This section describes how to mount the extension terminal base.

#### **CAUTION**


When mounting the extension terminal base on the GL840, please make sure that the GL840's power is turned OFF.

Prepare the sold separately extension terminal base and the extension terminal connection cable.

#### **B-566 Extension Terminal Base**

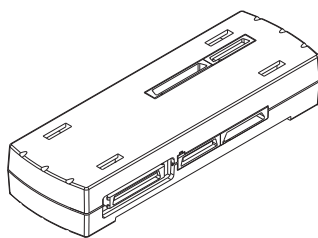

Extension terminal base: 1 unit

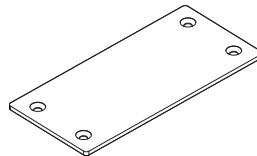


Connection plate: 1 pc.




M4 x 6 flat-head screw: 4 pcs.

#### **B-567 Extension terminal connection cable (Select from two types of cables)**

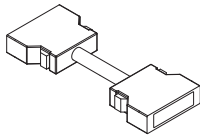



Extension terminal connection cable  
(50 cm: B-567-05): 1 pc.

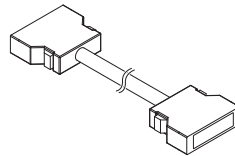

Extension terminal connection cable  
(2 m: B-567-20): 1 pc.


#### **Mounting**

- (1) Remove the Standard terminal or the Withstand high-voltage high-precision terminal mounted on the GL840.
- (2) Insert the lock tabs at the top of the terminal into the slots of the extension terminal base, and press the terminal until the lock tabs at the bottom of the terminal are securely locked.

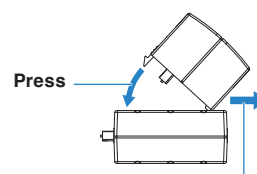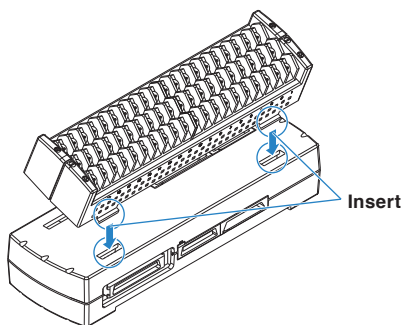


\* When installing the Withstand high-voltage high-precision terminal (B-565), please push it while pulling to the front.

- (3) Connect the extension terminal connection cable to the extension terminal base.
- \* Insert the extension terminal connection cable until the cable is securely locked.
  - \* Connect in accordance with the connector shape.

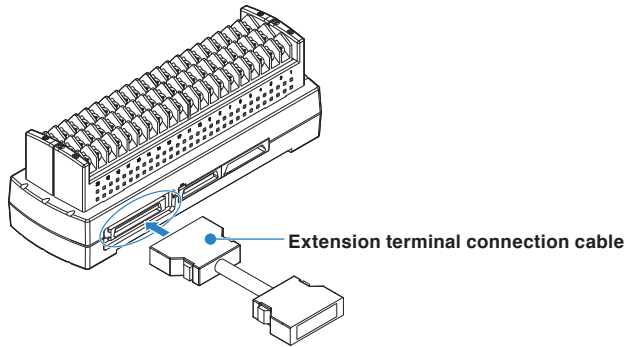

- (4) Connect one end of the extension terminal connection cable to the terminal connector on the GL840.
- \* Insert the extension terminal connection cable until the cable is securely locked.

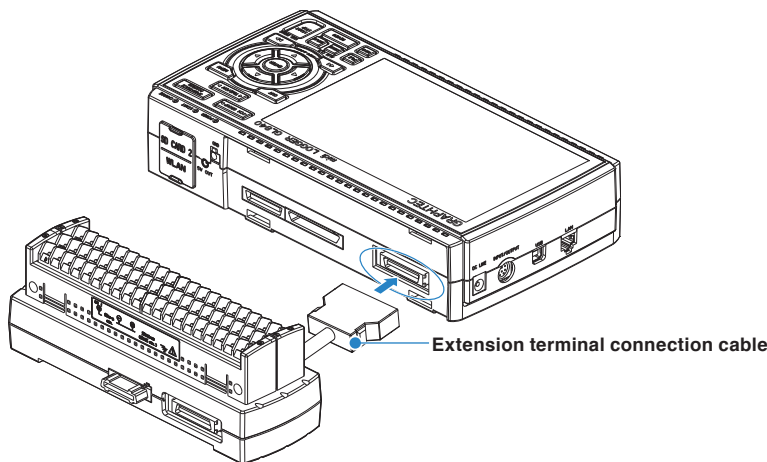


---


**CHECKPOINT**

When one terminal unit (20ch) is mounted, the connecting plate and flat-head screw are not used.

---

**CAUTION**

- How to remove the expansion terminal connection cable

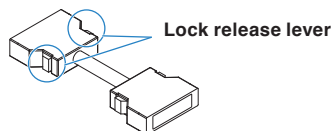

When you want to remove the expansion terminal connection cable from the GL840 or extension terminal base, please note the following.

- Always press the both sides of the lock release lever and pull out straightly in a state where the lock is released.
- Please do not forcibly remove or do not pull out in a state where the lock is not released by pressing only the one side of the lock release lever.

It may cause a connection failure of connector, please be careful when you remove it.

---

## 2.13.2 Mounting multiple extension terminals

The mounting procedure of the multiple extension terminal set is described.

### CAUTION

Make sure the GL840's power is OFF when mounting the extension terminals on the GL840.

Prepare the sold separately extension terminal base and extension terminal connection cable.

### B-566 Extension terminal base

Prepare the number of extension terminal bases that is equal to the number that the standard terminal or the Withstand high-voltage high-precision terminal is added.


### B-567 Extension terminal connection cable (Select from two types of cables)

Prepare one of the two types of extension terminal connection cables (50 cm: B-567-05 or 2 m: B-567-20).

Also, when you want to connect away between the extension terminal bases, the required number of the extension terminal bases must be prepared.

### When direct-connecting the extension terminal bases

(1) Connect the extension terminal base unit connectors as shown below.

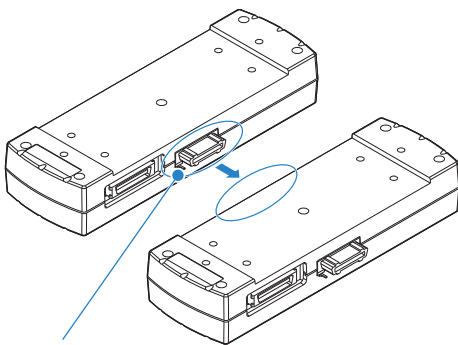


\* Please direct-connect to the protruding parts carefully.

### CAUTION


- Please direct-connect the extension terminal bases carefully so as not to bend the protruding parts next to the connector.
- Please handle the connection plate in a horizontal state until the connection plate is fixed.

(2) Fix the connection plate using attached screws.


\* Recommended screw torque: 14 kgf/cm

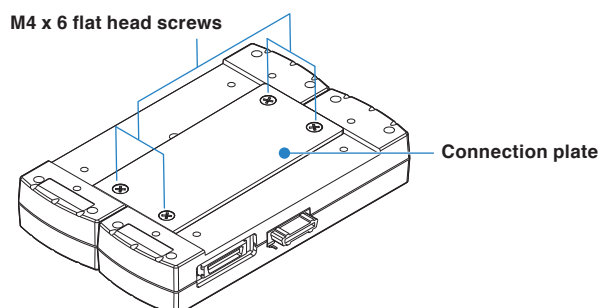

- (3) Connect the extension terminal connection cable to the extension terminal base.
- \* Insert the cable connector until it is securely locked.
  - \* Connect in accordance with the connector shape.

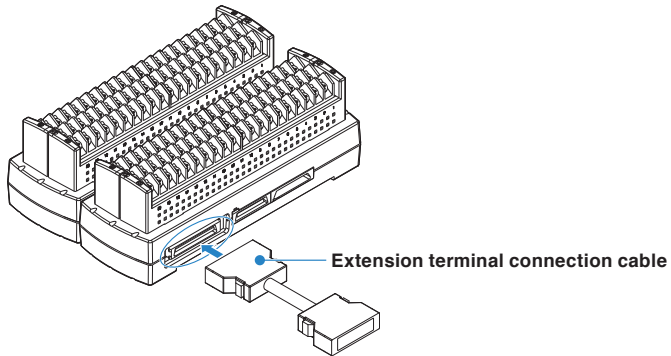

- (4) Connect one end of the extension terminal connection cable to the GL840.
- \* Insert the cable connector until it is securely locked.

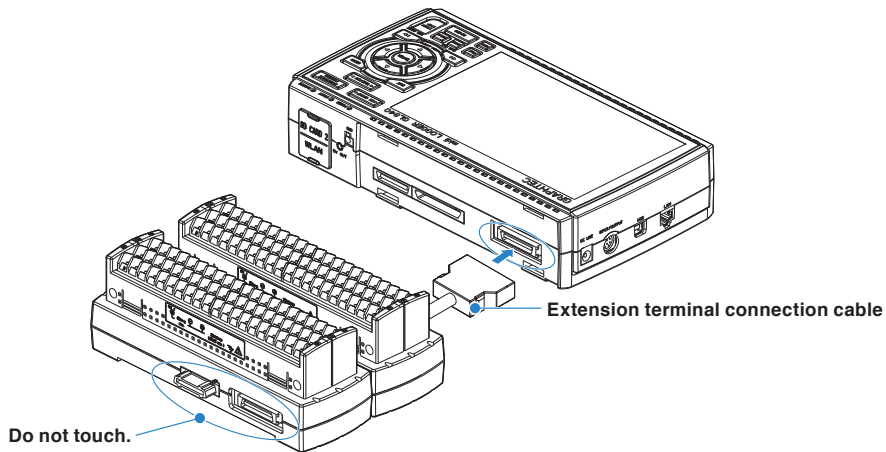


**CAUTION**

While the signal is input to the direct-connected terminal, please do not touch the connector pins and the protruding part next to the connector.

**CAUTION**

- How to remove the expansion terminal connection cable

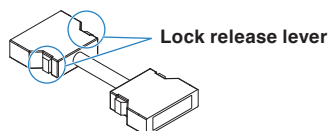


When you want to remove the expansion terminal connection cable from the GL840 or extension terminal base, please note the following.

- Always press the both sides of the lock release lever and pull out straightly in a state where the lock is released.
- Please do not forcibly remove or do not pull out in a state where the lock is not released by pressing only the one side of the lock release lever.

It may cause a connection failure of connector, please be careful when you remove it.

## When adding the extension terminal bases

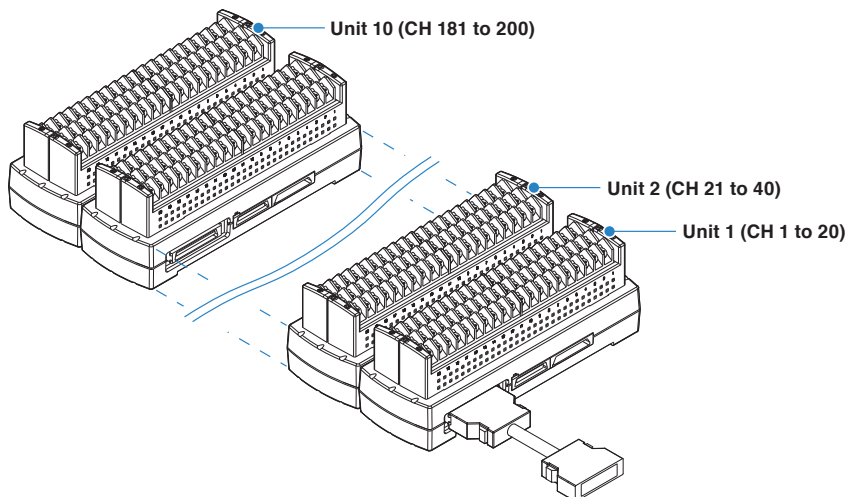


### ⚠ CAUTION

- When the terminals are added, please connect continuously them without disconnected terminals. If there is a disconnected terminal, subsequent terminals are not recognized.
- When the combination of the standard terminal and other terminal is used, the withstand voltage specification of standard terminal is applied.
- When the terminal of the GL800 or the GL820 is used, or the combination of the GL800 and the GL820 is used, the temperature measurement accuracy may not satisfy the specification.
- The Withstand high-voltage high-precision terminal and screwless terminal is not available for the GL800 and GL820.
- The GL860 Standard 20CH screw terminal and GL860 Standard 20CH screwless terminal is not available for the GL800 and GL820.

## When direct-connecting with extension terminal connection cable


(1) Connect between the extension terminal bases with the extension terminal connection cable.

- \* Insert the extension terminal connection cable until the cable is securely locked.
- \* Connect in accordance with the connector shape.

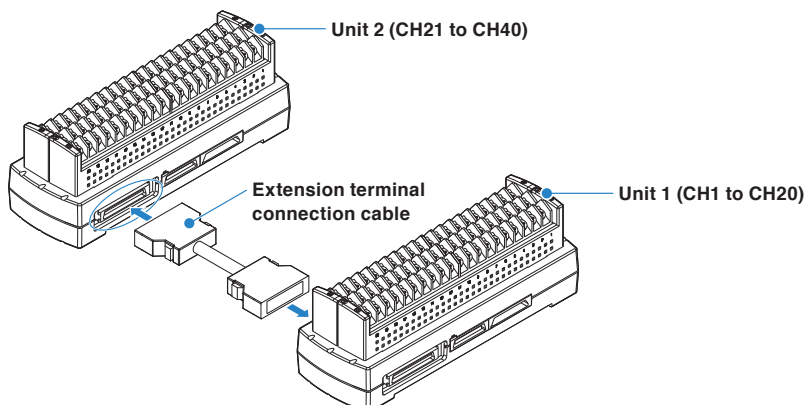


(2) Connect each between the extension terminal bases with the extension terminal connection cable.

- \* Insert the extension terminal connection cable until the cable is securely locked. Install the extension terminal bases in a stable location and be careful not to fall.

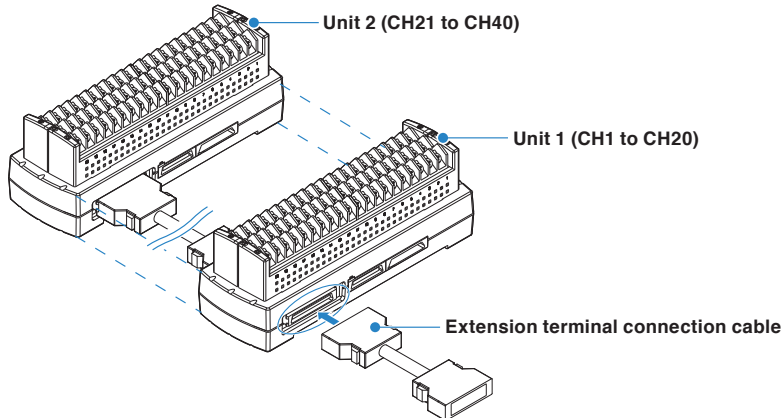

(3) Connect one end of the extension terminal connection cable to the GL840.

- \* Insert the extension terminal connection cable until the cable is securely locked.

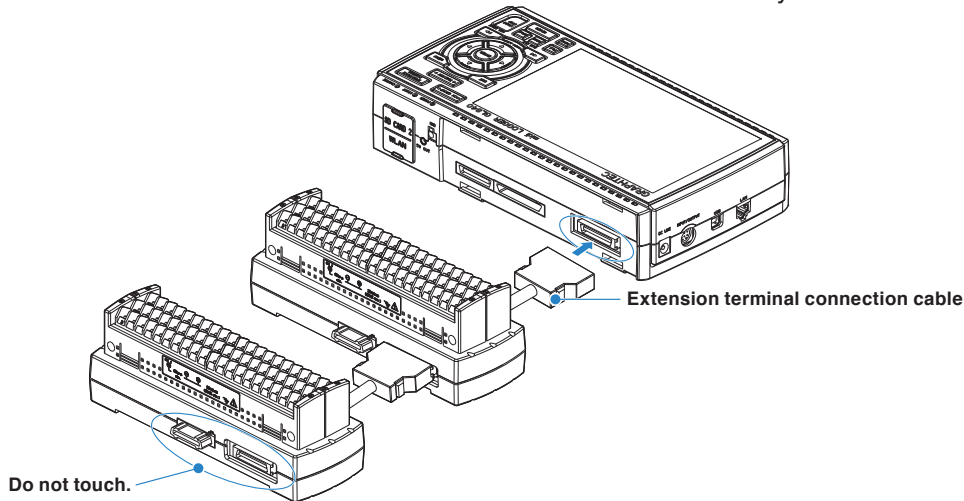

**CAUTION**

- While the signal is input to the direct-connected terminal, please do not touch the connector pins and terminal next to the connector.
- When removing the extension terminal connection cable from the GL840 or the extension terminal base, please note the following:
  - Please always pull out straightly in a state where the both sides of the lock release lever are pushed.
  - Please do not forcibly remove or do not pull out in a state where only the one side of the lock release lever is pushed.
 It may cause a connection failure of connector, please be careful when you remove it.
- When the extension terminal cable is used, it becomes susceptible to noise. If the cable is affected by the noise, please slow down the sampling speed.

**CAUTION**

- When the terminals are added, please connect continuously them without disconnected terminals. If there is a disconnected terminal, subsequent terminals are not recognized.
- When the combination of the standard terminal and other terminal is used, the withstand voltage specification of standard terminal is applied.
- When the terminal of the GL800 or the GL820 is used, or the combination of the GL800 and the GL820 is used, the temperature measurement accuracy may not meet the specification.
- The Withstand high-voltage high-precision terminal and screwless terminal is not available for the GL800 and GL820.
- The GL860 Standard 20CH screw terminal and GL860 Standard 20CH screwless terminal is not available for the GL800 and GL820.

## 2.14 Precautions to Observe When Performing Measurement

### WARNING

- Do not apply radio-frequency signals with high voltage (50 KHz or above).
- Be sure to use only the AC adapter provided as a standard accessory. The rated power supply range for the adapter is 100 to 240 VAC, and the rated frequency is 50/60 Hz. Do not use any other voltages.
- Do not input the voltage that is exceeding the specification of this device.
  - If a voltage exceeding the specified value is input, the semiconductor relay in the input section will be damaged. Never input a voltage exceeding the specified value even for a moment. It will cause the fire.
  - Have an enough margin from the specification of withstanding voltage when using this device, it have to consider a noise and change of the measurement voltage.
  - Confirm this device is not broken before the input cable is connected to the input terminal.
  - Please take care of the static electricity when the connecting the input cables or the thermocouples.
  - Do not touch the tip of thermocouples with bare hand after the thermocouples are connected to the terminal of this device when the tip of thermocouples is not insulated.  
The static electricity of a human body will cause damage to this device.
  - Do not put the tip of thermocouples to the object which is containing the static electricity when the tip of thermocouples is not insulated. The static electricity of object will cause damage to this device.
  - Do not put the tip of thermocouples to the object which is containing the leaked high voltage of chassis or metal etc. when the tip of thermocouples is not insulated.  
The leaked high voltage of object will cause damage to this device.
  - We recommend that the insulation tape puts on the tip of thermocouples before connecting the thermocouples to the input terminals.  
This will protect this device from the static electricity and the leaked high voltage.
- \* This applies to all the channels even if channel extension is used.
- \*The specification of all channels becomes the B-564(B-564SL), when the B-564(B-564SL), B-565 and B-563(B-563SL) are installed.

**When using the Standard terminal (GL840-M/B-563)**

**When using the Screwless terminal (B-564SL/B-563SL)**

Please be sure to read the following carefully in order to prevent electric shocks or shorts.

● **Maximum input voltage**

If a voltage exceeding the specified value is input, the semiconductor relay in the input section will be damaged. Never input a voltage exceeding the specified value even for a moment.

\* This applies to all the channels even if channel extension is used.

< Between +/- terminals (A) >


- Maximum input voltage : 60Vp-p (Range of 20mV to 2V)
- 110Vp-p (Range of 5V to 100V)

<Between input terminal/input terminal (B) >


- Maximum input voltage : 60Vp-p
- Withstand voltage : 350Vp-p/1 minute

<Between input terminal/GND (C) >

- Maximum input voltage : 60Vp-p
- Withstand voltage : 350Vp-p/1 minute

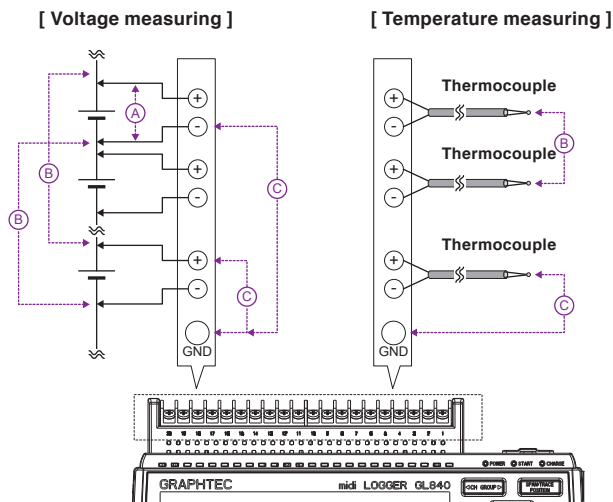

● **Input Circuit Diagram for Analog Input (Voltage, Thermocouples)**

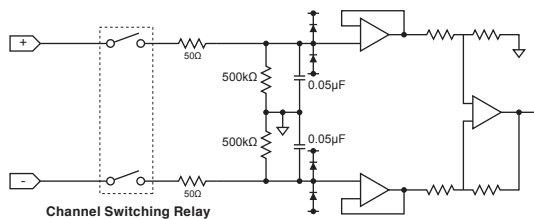

**CAUTION**

Capacitors have been incorporated into the input circuit to increase the noise elimination capability. After voltage measurement, when the inputs have been disconnected, there will still be some electric charge remaining.

Before starting another measurement operation, short-circuit the + and - terminals to enable self-discharge.

The GL840 has a scan system.

While in the status (open) in which signals are not input to the input terminal, measured results may be influenced by signals from other channels. In such a case, turn OFF the input setting or short circuit +/-.

If signals are input correctly, measured results are not influenced by other channels.



**When using the Withstand high-voltage high-precision terminal (GL840-WV and B-565)**

● Maximum input voltage

If a voltage exceeding the specified value is input, the semiconductor relay in the input section will be damaged. Never input a voltage exceeding the specified value even for a moment.

\* This applies to all the channels even if channel extension is used.

< Between +/- terminals (A) >


- Maximum input voltage : 60Vp-p (Range of 20mV to 2V)
- 110Vp-p (Range of 5V to 100V)

<Between input terminal/input terminal (B) >


- Maximum input voltage : 600Vp-p
- Withstand voltage : 600Vp-p

<Between input terminal/GND (C) >

- Maximum input voltage : 300Vp-p
- Withstand voltage : 2300VACrms/1 minute

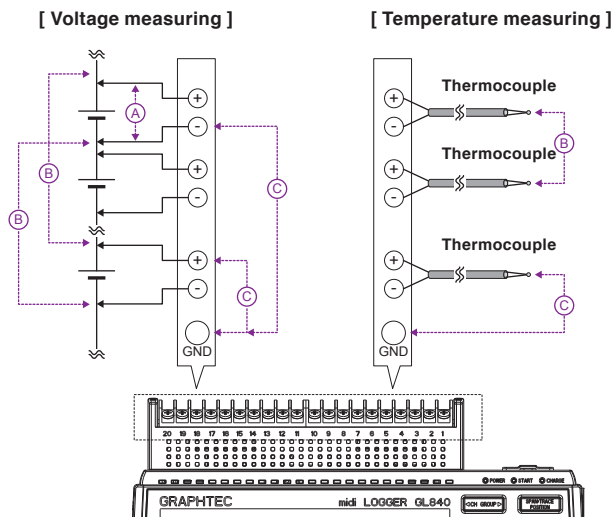

● Input Circuit Diagram for Analog Input (Voltage, Thermocouples)

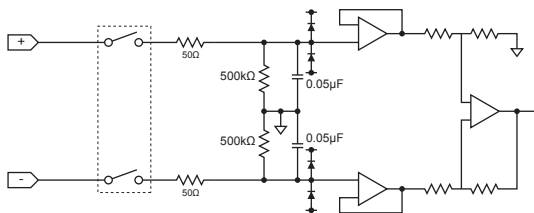

**CAUTION**

Capacitors have been incorporated into the input circuit to increase the noise elimination capability. After voltage measurement, when the inputs have been disconnected, there will still be some electric charge remaining.

Before starting another measurement operation, short-circuit the + and - terminals to enable self-discharge.

The GL840 has a scan system.


While in the status (open) in which signals are not input to the input terminal, measured results may be influenced by signals from other channels. In such a case, turn OFF the input setting or short circuit +/-.

If signals are input correctly, measured results are not influenced by other channels.

## 2.15 Noise Countermeasures


- Be sure to connect the chassis GND of the measurement object.

It may become effective by ensuring that the chassis GND wire of the measurement object is connected to a good ground.

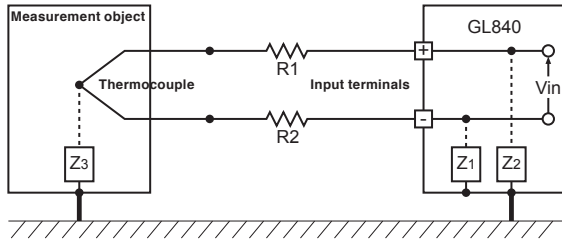

- Connect the signal chassis GND to the measurement device chassis ground.

Use a short, thick lead to connect the chassis GND of the measurement object to the GL840's chassis GND. It will become even more effective if the ground potentials are the same.

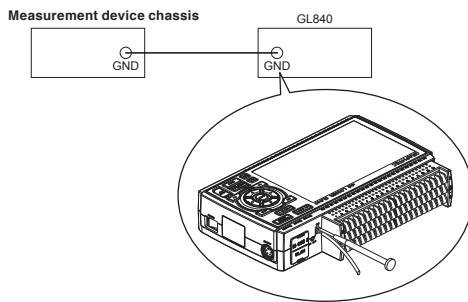

- Noise countermeasures

If measured values fluctuate due to extraneous noise, conduct the following countermeasures.

(Results may differ according to noise type.)

Ex 1 : Connect the GL840's GND to ground.

Ex 2 : Connect GL840's GND to measurement object's GND.

Ex 3 : In the AMP settings menu, set filter to any setting other than "OFF".

Ex 4 : Set the sampling interval which enables GL840's digital filter.

Use the "OTHER" menu to set the commercial power frequency you use.


Refer to "3.4 Setting Menus" for details.

## 2.16 Connecting the Temperature and Humidity Sensor (GS-TH) (Optional)

For the specifications of the temperature and humidity sensor, refer to the Instruction Manual supplied with the sensor.

The connecting procedure between the GL840 and temperature and humidity sensor is described.

- Turn Off the GL840's power.
  - Connect firmly the temperature and humidity sensor's connector to the GL840's GS sensor and terminal / adapter connection terminal (GS-INPUT).
  - Turn On the GL840's power and make sure that the sensor settings are displayed on the AMP Setting screen.

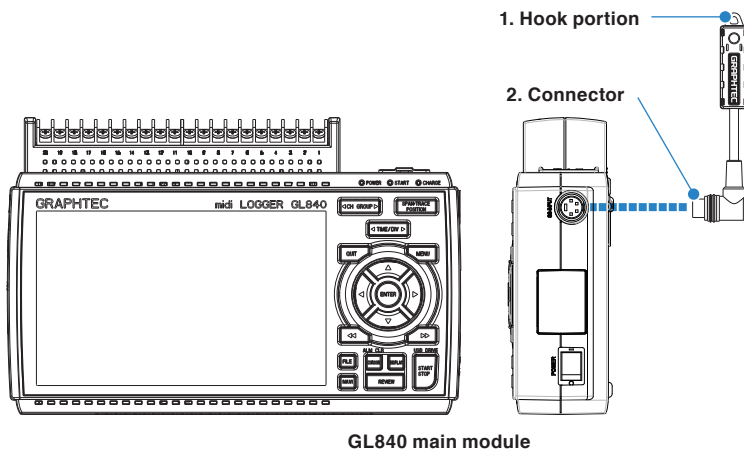

1. Hook portion .....Used to mount to a wall.
2. Connector .....Used to connect to the connector on the GL840 module.

### CAUTION


- Please do not use in a state in which only the temperature and humidity sensor is attached on a wall or the like.  
The damage of the connected cable and connector or the drop of the GL840 may be caused.
- The temperature sensor measures the change in capacitance of the conductivity caused by moisture absorption. Therefore, dust, fumes and other organic compound may affect measurements. Usage in an environment with a large quantity of these substances floating about will cause large measurement deviations.

## 2.17 Connecting the 3-axis Acceleration / Temperature Sensor (GS-3AT) (Optional)

For the specifications of the 3-axis acceleration / temperature sensor, refer to the Instruction Manual supplied with the sensor.


The connecting procedure between the GL840 and temperature sensor is described.

- Turn Off the GL840's power.
- Connect firmly the 3-axis acceleration / temperature sensor's connector to the GL840's GS sensor and terminal / adapter connection terminal (GS-INPUT).
- Turn On the GL840's power and make sure that the sensor settings are displayed on the AMP Setting screen.

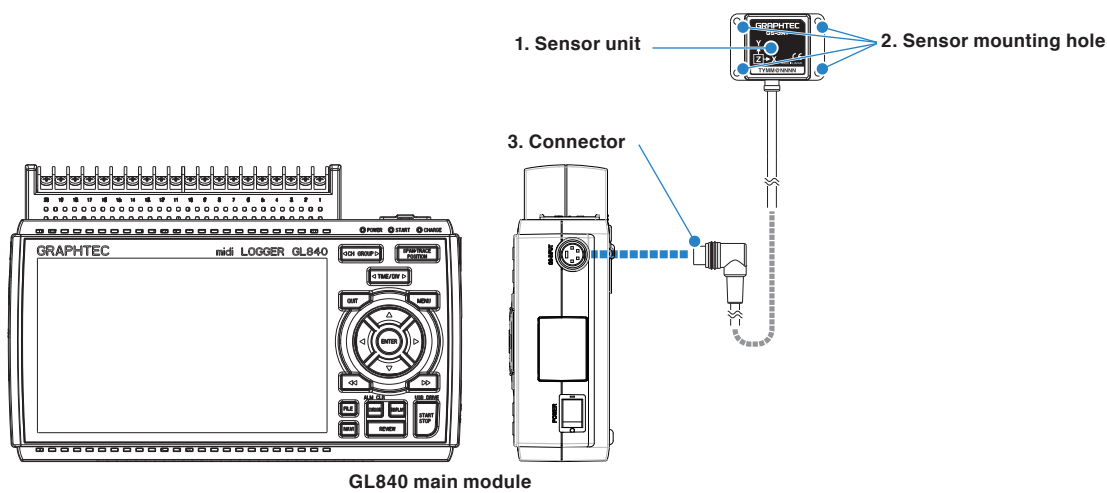

1. Sensor unit .....The 3-axis acceleration and temperature sensor are built in this unit.
2. Sensor mounting hole ....Used to fix the sensor.
3. Connector .....Used to connect to the connector on the GL840 module.

- Check the operating direction of the sensor unit, and then securely mount it using four M3 screws to what is to be measured

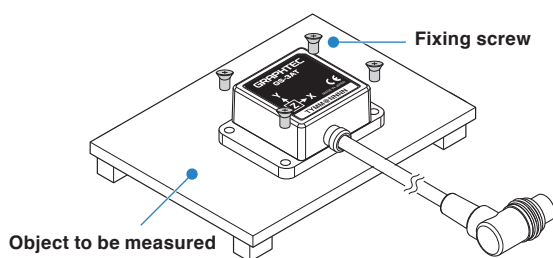

### CAUTION

- The sensor unit is dustproof and splash-resistant (IP54), but the GL840 does not conform to IP54. Please be careful of the operating environment.
- Please take care not to drop or shock the sensor.
- If the sensor's mounting is loose, it will give inaccurate readings.

### CHECKPOINT

< Extension cable >


The module can be used approx. 1.5 m away from the GL840 by using an extension cable for GS (GS-EXC). However, you cannot connect and use multiple extension cables.

## 2.18 Connecting the 4ch Voltage / Temperature Terminal (GS-4VT) (Optional)

For the specifications of the 4ch voltage / temperature terminal, refer to the Instruction Manual supplied with the sensor.

The connecting procedure between the GL840 and 4ch voltage / temperature terminal is described.

- Turn Off the GL840's power.
- Connect firmly the 4ch voltage / temperature terminal's connector to the GL840's GS sensor and terminal / adapter connection terminal (GS-INPUT).
- Turn On the GL840's power and make sure that the sensor settings are displayed on the AMP Setting screen.

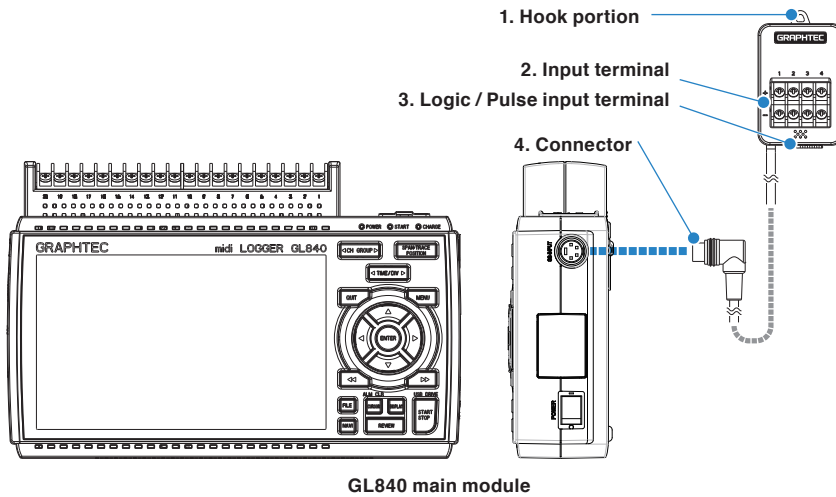

1. Hook portion .....Used to mount to a wall.
2. Input terminal .....Used to connect voltage input or thermocouple.
3. Logic / Pulse input terminal ..Used to apply logic input.
4. Connector .....Used to connect to the connector on the GL840 module.

### **CAUTION**

Please do not use in a state in which only the 4ch voltage / temperature terminal is attached on a wall or the like.

The damage of the connected cable and connector or the drop of the GL840 may be caused.

### **CHECKPOINT**

< Extension cable >

The module can be used approx. 1.5 m away from the GL840 by using an extension cable for GS (GS-EXC). However, you cannot connect and use multiple extension cables.


## Each input terminal

The connecting procedure of the signal input cable is described.

### WARNING

During wiring, confirm that the signal's supply source is turned OFF to prevent electrical shocks. Also, position the GL840 input cable away from any power lines and ground cables.

#### 1. Voltage input

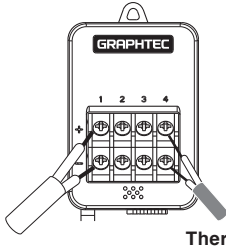


Thermocouple

- + .....High-voltage terminal (terminal input on the input signal's high-voltage side)
- .....Low-voltage terminal (terminal input on the input signal's low-voltage side)

#### 2. Thermocouple input

Connect thermocouple to the + and – terminals.

#### 3. Current input

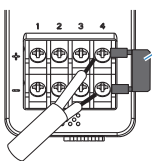


Shunt resistance

E.g.: For 4-20mA, add 250Ω (±0.1%) resistance and measure with a 1-5V range.

\* For shunt resistance, use the B-551 (option).

Attach shunt resistance when measuring the current input.


#### 4. Logic / pulse input

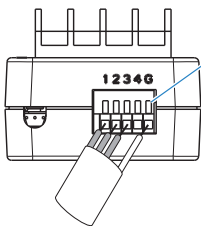

When inserting the cable, insert it while pressing here.

No. 1 to 4: High-voltage terminal (terminal input on the input signal's high-voltage side)

G: Low-voltage terminal (terminal input on the input signal's low-voltage side)

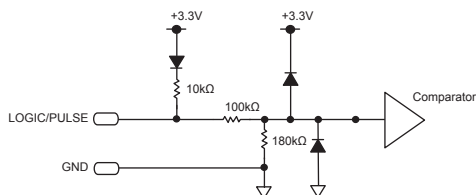

### CAUTION

- G is the GND terminal for this GL840.
- For the maximum input voltage, refer to "Regarding Maximum Input Voltage" in the next page.

### Regarding Maximum Input Voltage

To avoid break-downs or short-circuiting accidents, please make sure to abide by the items written below.

In case the input voltage exceeds the specifications, the circuit at the input part will break down. Please don't input it.

< Between input terminal (+)/input terminal (-) >

- Maximum input voltage : DC60Vp-p

< Between input terminal (-)/input terminal (-) >

- Maximum input voltage : 60Vp-p

< Between input terminal (-)/GND terminal >

- Maximum input voltage : DC60Vp-p
- Withstand voltage : 350Vp-p/1 minute

Logic/Pulse

< Between input terminal (+)/GND terminal >

- Maximum input voltage : DC24V

---

#### CAUTION

##### Notes on temperature


When measuring the temperature, please pay attention to the following.

- Do not block the air vents of the GL840. Leave a clear space of at least 20 cm around it.
  - When rapid temperature change occurs in the input terminals, the error may occur on the measurement.
-

## 2.19 Connecting the 4ch Thermistor Terminal (GS-4TSR) (Optional)

For the specifications of the 4ch thermistor terminal, refer to the Instruction Manual supplied with the sensor. The connecting procedure between the GL840 and digital sensor is described

- Turn Off the GL840's power.
- Connect firmly the 4ch thermistor terminal's connector to the GL840's GS sensor and terminal / adapter connection terminal (GS-INPUT).
- Turn On the GL840's power and make sure that the sensor settings are displayed on the AMP Setting screen.

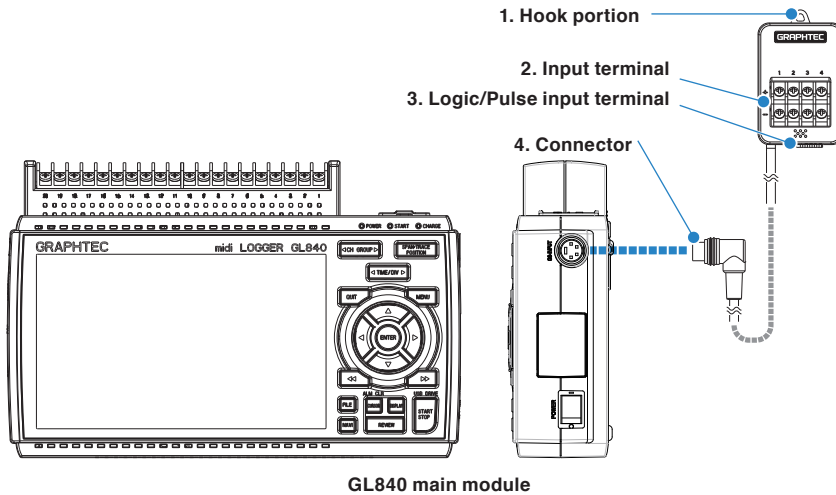

1. Hook portion .....Used to mount to a wall.
2. Input terminal .....Used to connect Thermistor.
3. Logic/Pulse input terminal ...Used to input logic / pulse.
4. Connector .....Used to connect to the connector on the GL840 module.

### **CAUTION**

Please do not use in a state in which only this module is attached on a wall or the like.  
The damage of the connected cable and connector or the drop of the GL840 may be caused.

### **CHECKPOINT**

< Extension cable >

The module can be used approx. 1.5 m away from the GL840 by using an extension cable for GS (GS-EXC). However, you cannot connect and use multiple extension cables.



## Each input terminal


The connecting procedure of the signal input cable is described.

### ⚠ WARNING

During wiring, confirm that the signal's supply source is turned OFF to prevent electrical shocks. Also, position the GL840 input cable away from any power lines and ground cables.

Connect the GS thermistor sensor (GS-103AT-4P (Type A) or GS-103JT-4P (Type J) each sold separately) to the +/-.

1. Connect the thermistor sensor

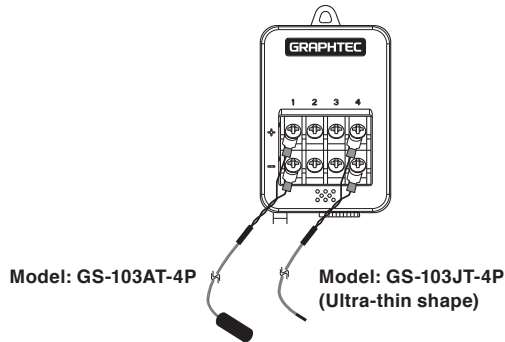


No. 1 to 4 is the thermistor connection terminal.


### ⚠ WARNING

These terminals are for thermistor input only. Make sure not to input voltage or electric current, as this can cause damage.

2. Logic / Pulse input

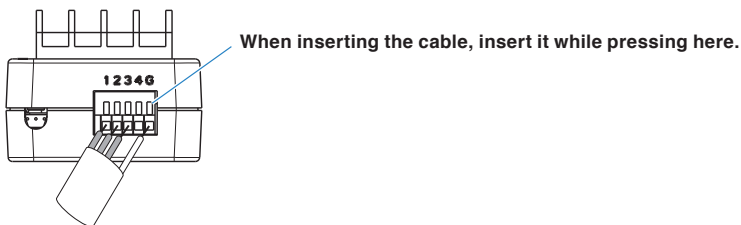

No. 1 to 4: High potential terminal  
(terminal input on the input signal's high-voltage side)  
G: Low potential terminal  
(terminal input on the input signal's low-voltage side)

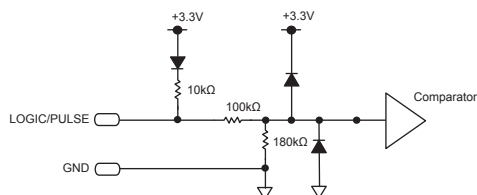

### ⚠ CAUTION

- G is the GND terminal for this module.
- Please apply the maximum input voltage, referring to "Regarding Maximum Input Voltage" in the next page.

**Regarding Maximum Input Voltage**

To avoid break-downs or short-circuiting accidents, please make sure to abide by the items written below.  
In case the input voltage exceeds the specifications, the circuit at the input part will break down. Please do not input it.

Logic / Pulse

<Between input terminal (+)/GND terminal >


Maximum input voltage : DC24V

## 2.20 Connecting the Illumination / Ultraviolet Sensor (GS-LXUV) (Optional)

For the specifications of illumination / ultraviolet sensor, refer to the Instruction Manual supplied with the sensor.

The connecting procedure between the GL840 and illumination / ultraviolet sensor is described.

- Turn Off the GL840's power.
- Connect firmly the illumination / ultraviolet sensor's connector to the GL840's GS sensor and terminal / adapter connection terminal (GS-INPUT).
- Turn On the GL840's power and make sure that the sensor settings are displayed on the AMP Setting screen.

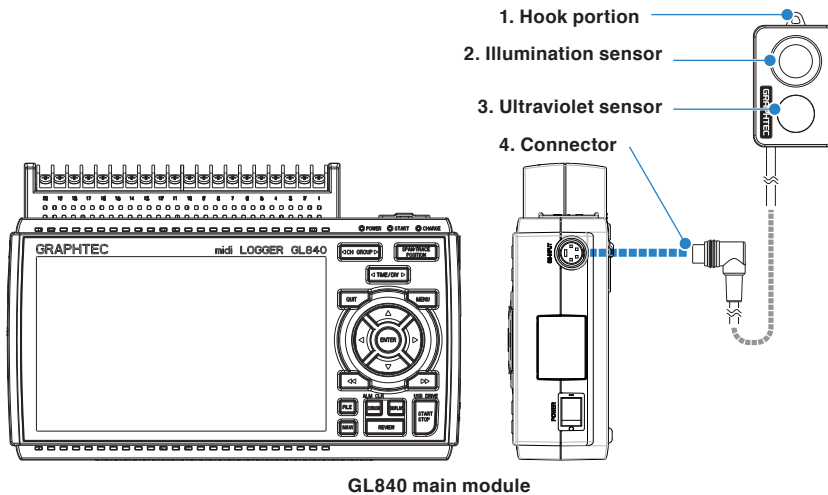

1. Hook portion .....Used to mount to a wall.
2. Illumination sensor .....Sensor unit that measures illumination rays.
3. Ultraviolet sensor .....Sensor unit that measures ultraviolet rays.
4. Connector .....Used to connect to the connector on the GL840 module.

### **CAUTION**


- Please do not use in a state in which only the illumination / ultraviolet sensor is attached on a wall or the like.  
The damage of the connected cable and connector or the drop of the GL840 may be caused.
- When measuring ultraviolet rays that have an effect on the eyes or the skin, wear protective glasses, apply light shielding, etc.
- If the sensor unit becomes dirty, this may affect measurements. Wipe it down with a soft cloth.
- Make sure to handle the sensor unit in a way that it will not crack. If the sensor unit is cracked it may affect measurements. Replace the sensor if cracked.

## 2.21 Connecting the CO2 Sensor (GS-CO2) (Optional)

For the specifications of CO2 sensor, refer to the Instruction Manual supplied with the sensor.

The connecting procedure between the GL840 and CO2 sensor is described.

- Turn Off the GL840's power.
- Connect firmly the CO2 sensor's connector to the GL840's GS sensor and terminal / adapter connection terminal (GS-INPUT).
- Turn On the GL840's power and make sure that the sensor settings are displayed on the AMP Setting screen.

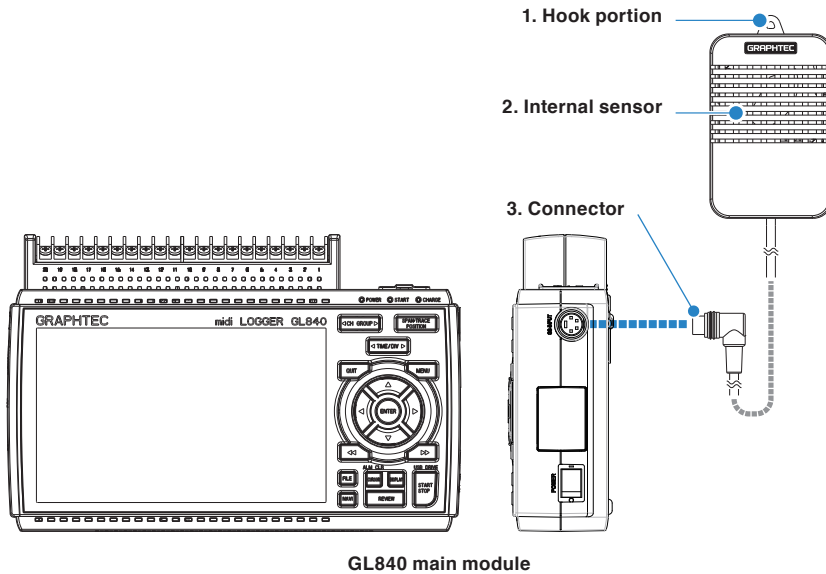

1. Hook portion .....Used to mount to a wall.
2. Internal sensor .....A sensor that detects the CO2 is built in.  
The lamp for detecting flashes every two seconds.
3. Connector .....Used to connect to the connector on the GL840 main module.

### CAUTION


- Please do not use in a state in which only the CO2 sensor is attached on a wall or the like.  
The damage of the connected cable and connector or the drop of the GL840 may be caused.
- Do not use the module close to your face.  
Your breath may affect measurements.
- Blocking the module's ventilation hole may cause the airflow to affect measurements.

## 2.22 Connecting the Adapter for AC Current Sensor (GS-DPA-AC) (Optional)

For the connecting procedure and specifications of Adapter for AC current sensor, refer to the Instruction Manual supplied with the sensor.

The connecting procedure between the GL840 and Adapter for AC current sensor is described.

- Turn Off the GL840's power.
- Connect firmly the connector of Adapter for the AC current sensor to the GL840's GS sensor and terminal / adapter connection terminal (GS-INPUT).
- Turn On the GL840's power and make sure that the sensor settings are displayed on the AMP Setting screen.

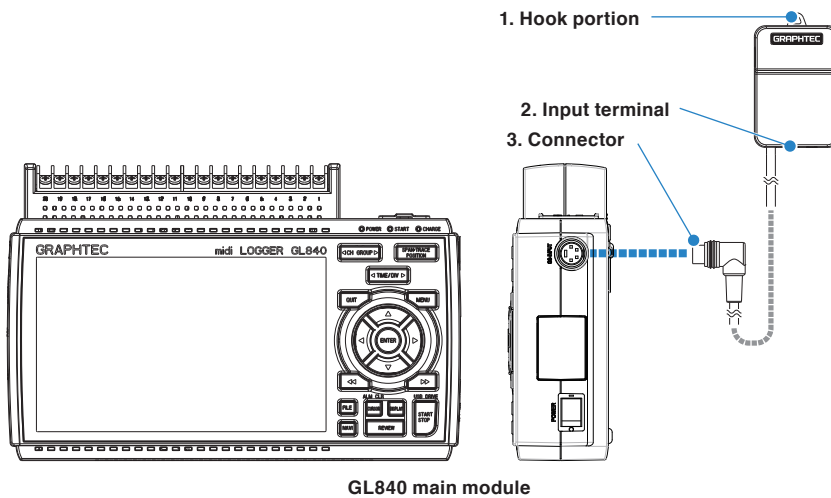

1. Hook portion .....Used to mount to a wall.
2. Input terminal .....Used to connect to the AC current sensor (sold separately).
3. Connector .....Used to connect to the connector on the GL840 module.

### **CAUTION**

Please do not use in a state in which only the Adapter for AC current sensor is attached on a wall or the like.

The damage of the connected cable and connector or the drop of the GL840 may be caused.

### **CHECKPOINT**

< Extension cable >


The module can be used approx. 1.5 m away from the GL840 by using an extension cable for GS (GS-EXC). However, you cannot connect and use multiple extension cables.

### Connecting procedure of the AC current sensor

1. Connect the AC current sensor (GS-AC\*\*A, sold separately) to the module.

Connecting : Insert the connector in until it locks in.

Disconnecting : Pull the connector out while pressing down on the lock portion on the bottom with your finger.

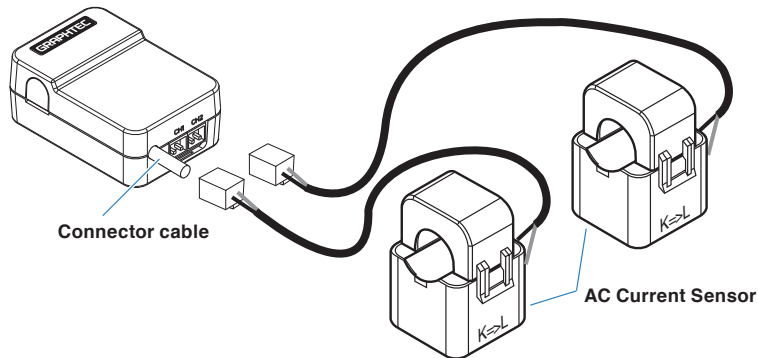

---

**⚠ WARNING**

The connector is available exclusively to be used to connect the AC Current Sensor. Do not connect it to voltages, other electrical currents, etc. It will damage the module.

---

---

**⚠ CAUTION**


Pulling the AC Current Sensor's cable and holding the sensor by the cable will damage the cable's wires.

---

## 2.23 Connecting the Branch Adapter for GS (GS-DPA) (Optional)

For the specifications of branch adapter for GS, refer to the Instruction Manual supplied with the sensor. There are three ways to connect with a combination of the GL840 and various sensors. Please check the information of the sensor and perform the connection using the following steps.

- Turn Off the GL840's power.
- Be sure to connect two types of digital sensors to the Branch Adapter for GS.
- Connect firmly the branch adapter for GS to the GL840 sensor connection terminal (GS-INPUT).
- \* After connecting the branch adapter for GS to the GL840, the digital sensor is not recognized even if the digital sensor is connected.
- Turn On the GL840's power and make sure that the sensor settings are displayed on the AMP Setting screen.

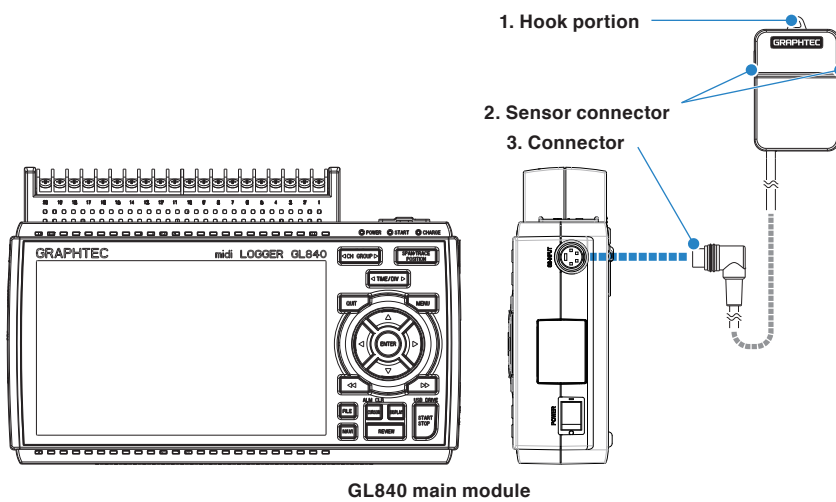


1. Hook portion .....Used to mount to a wall.
2. Sensor connector .....Used to connect to the AC current sensor (sold separately).
3. Connector .....Used to connect to the connector on the GL840 module.

### 1. Combined illumination / ultraviolet sensor and temperature and humidity sensor measurement

Composite measurement can be done by using the illumination / ultraviolet sensor (GS-LXUV) and the temperature and humidity sensor (GS-TH) (each sold separately).

**CAUTION**

It is not possible to be used by connecting two same sensors.

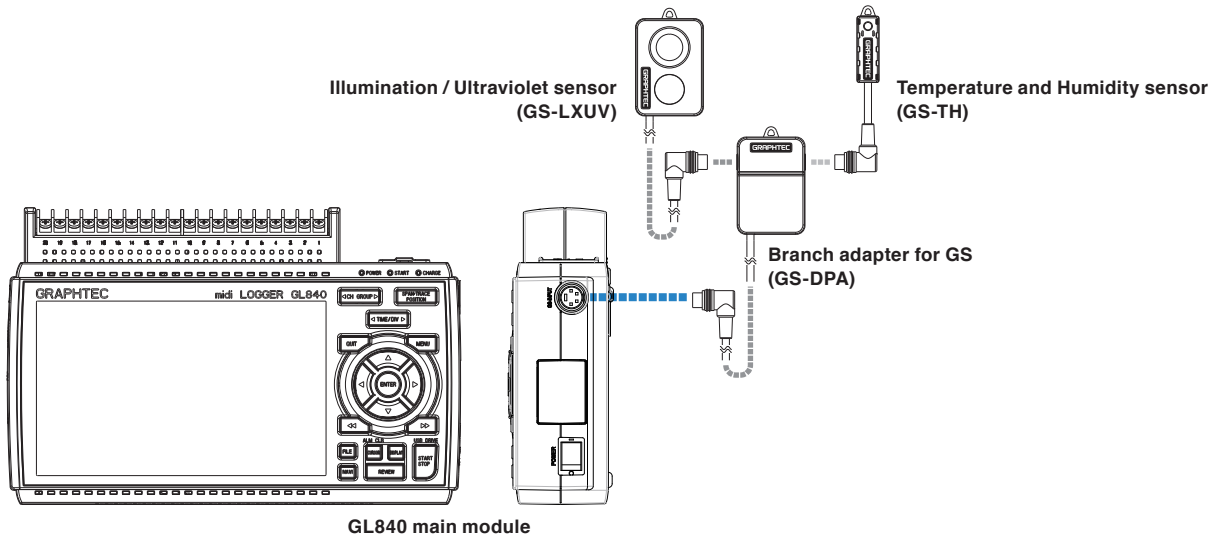


### 2. Combined CO2 sensor and temperature and humidity sensor measurement

Composite measurement can be done by using the CO2 sensor (GS-CO2) and the temperature and humidity sensor (GS-TH) (each sold separately).

**CAUTION**

It is not possible to be used by connecting two same sensors.

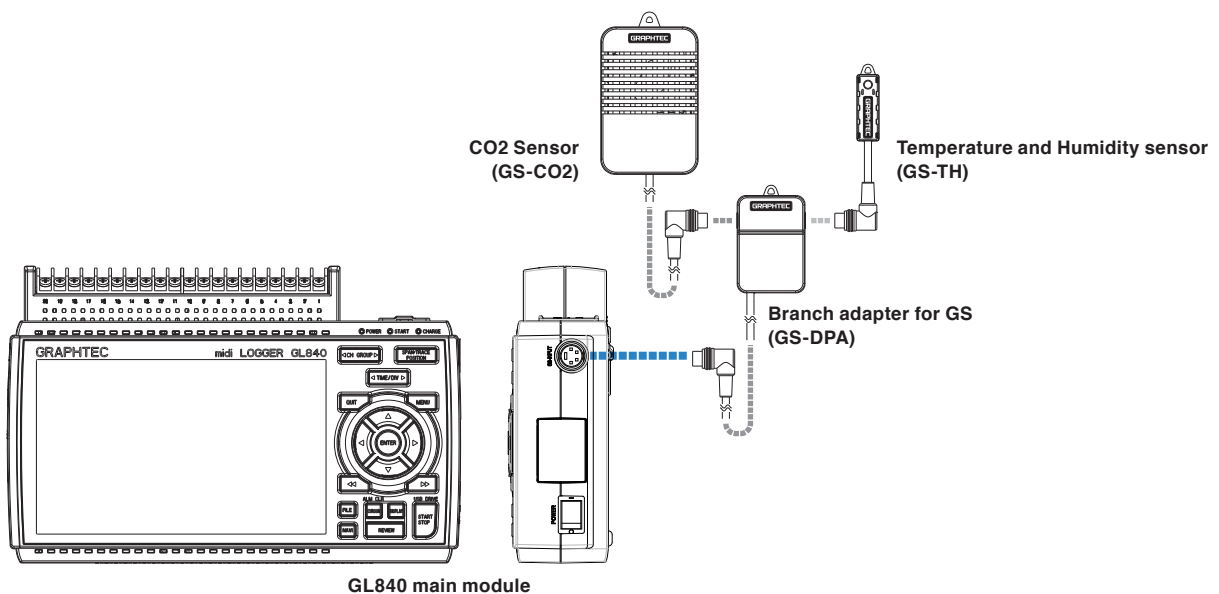




### 3. Combined CO2 sensor and illumination / ultraviolet sensor

Composite measurement can be done by using the CO2 sensor (GS-CO2) and the illumination / ultraviolet sensor (GS-LXUV) (each sold separately).

**CAUTION**

It is not possible to be used by connecting two same sensors.

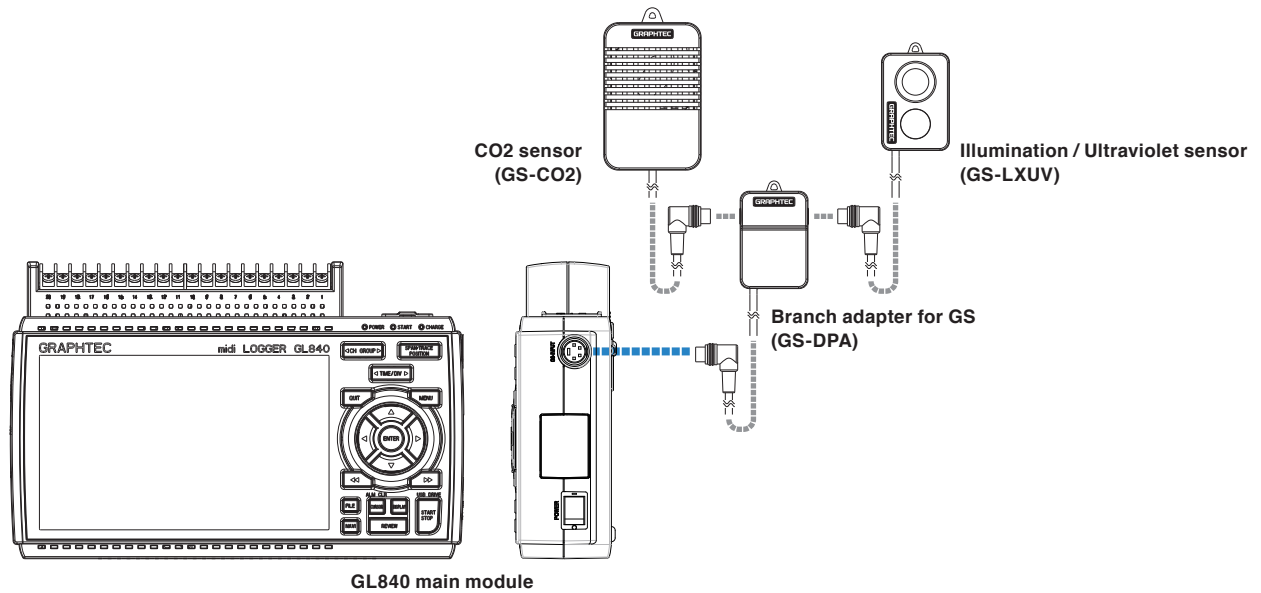


## 2.24 When Fixing the GL840 Body

### Fixing the GL840 body

When fixing the GL840 body to prevent the dropout of the GL840, the two nuts on the back must be used.

\* Recommended tightening torque: 14kgf/cm

When fixing the GL840, it must be installed in horizontal state rather than in vertical or inclined state.

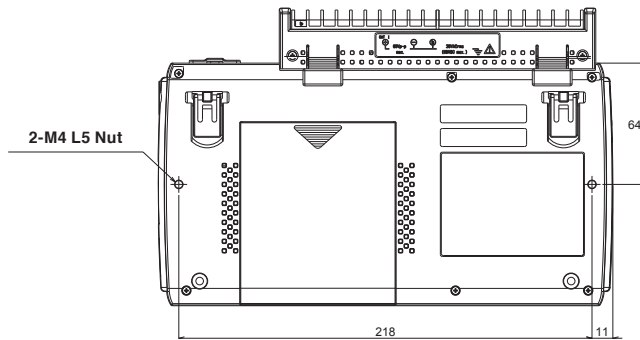

---

#### **CAUTION**

To prevent possible malfunction, do not block the air vents of the GL840.

If the GL840 is installed in other than the state described above, the measurement accuracy may not meet the specifications.

---

## 2.25 Setting the Date and Time

If you are using the GL840 for the first time, charge the internal rechargeable battery and then make the date and time settings.

### CAUTION


If the GL840 is not used for a period of approximately six months, the internal rechargeable battery may be discharged and the date and time may revert to the initial settings. If this happens, recharge the battery before using the GL840.

### How to Recharge the Rechargeable Battery

Using the AC adapter provided, connect the GL840 to a mains power outlet, turn on the power switch, and then leave the GL840 connected for at least 24 hours.

### How to Set the Date and Time

Press the [MENU] key, display the “OTHER” screen, and then set the date and time at the Date/Time Settings sub-menu. For details, refer to “Date/Time” in “3.4 Setting Menus”.

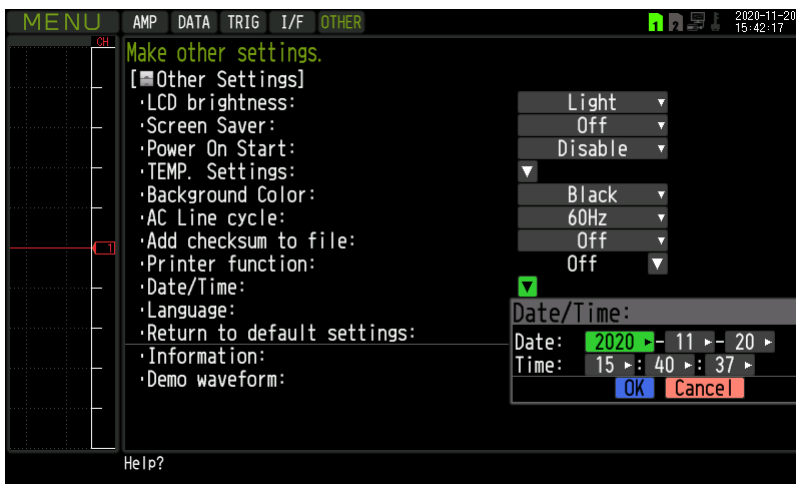

# ***CHAPTER 3 Settings and Measurement***

---

This chapter describes the setting and measurement procedures for the GL840.

## **PRODUCT SUMMARY**

***3.1 Window names and functions***

***3.2 Key Operation***


***3.3 Operation Modes***

***3.4 Setting Menus***

***3.5 WEB Server Function***

***3.6 List of Error Codes***

## 3.1 Window names and functions

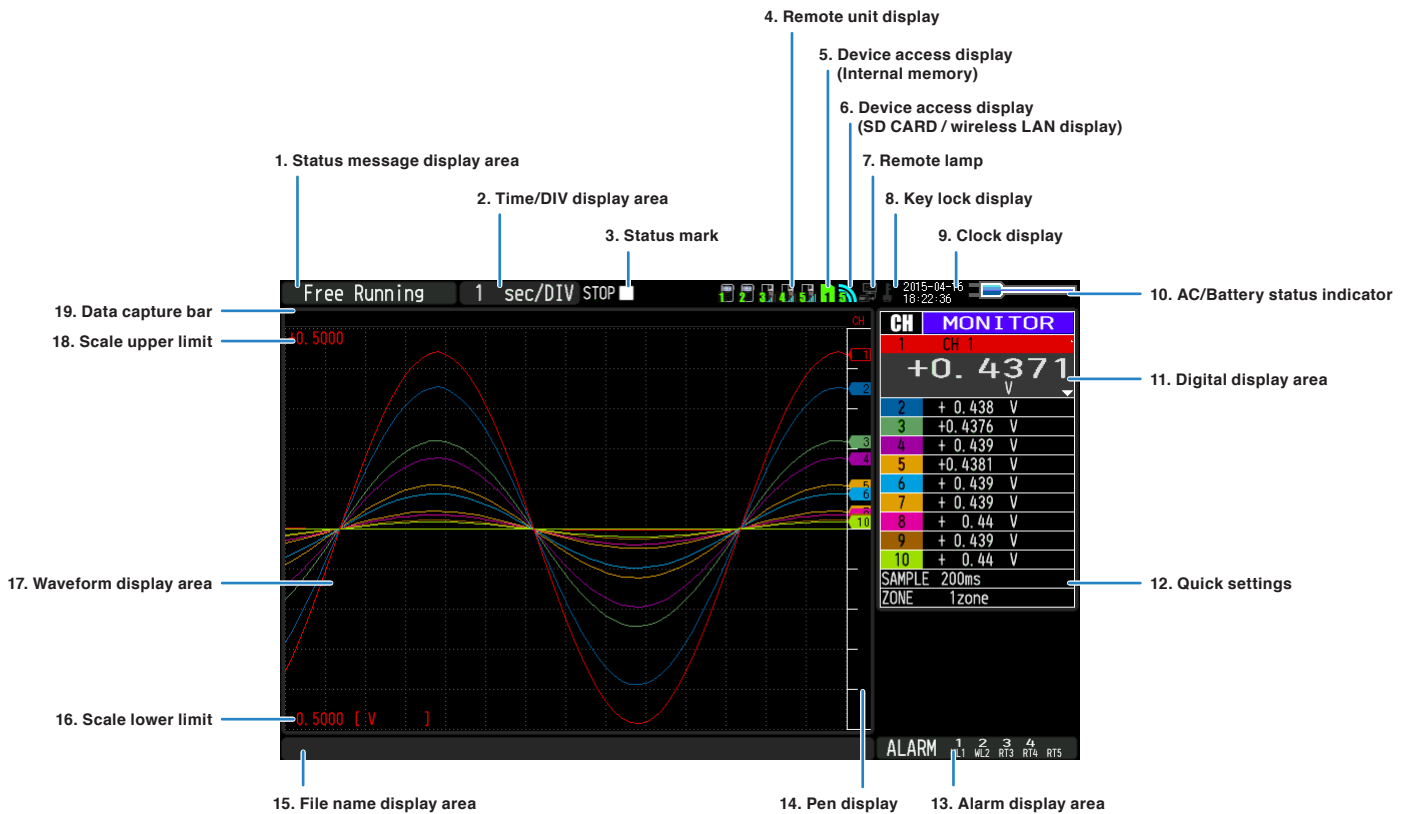

### 1. Status message display area

Displays the operation status of the GL840.

- Free Running** : Appears in the start up status or when data is not being captured.
- Armed** : Appears while waiting for trigger generation after measurement is started.
- Data capture SD card 1** \* : Displayed when the data is captured to the internal memory (SD1).
- Data capture SD card 2** \* : Displayed when the data is captured to the SD CARD (SD2).
- Writing** \* : Displayed when performing the capturing stop process.
- Finished** : Appears when the GL840 waits for you to press the [Start/Stop] key to stop it after data capture.
- Playing SD card 1** \* : Displayed when the data in the internal memory (SD1) is replayed.
- Playing SD card 2** \* : Displayed when the data in the SD CARD (SD2) is replayed.
- Backup Failed** : Appears when backup fails (e.g. when the SD CARD specified as the backup destination has been removed).
- Demo Wave Mode** : Appears when a demo waveform is being displayed, not measurement data.

\* Refer to "(3) TRIG settings" in "3.4 Setting Menus" for details on the data capture such as a trigger and repeat.

\* Refer to "(2)-2 Captured data file name" in "3.4 Setting Nemus" for details on data capture setting.

### CAUTION

Please do not turn off the power when the status message of "Capturing to SD CARD 1 (2)" or "Writing" is displayed (" \* " status icon). The data is damaged, and it will not be captured.






Please start the operation after making sure that the status mark is switched to "STOP".

The internal memory is displayed as the SD1 or SD CARD1.

## 2. Time/DIV display area

Displays the current time scale.

## 3. Status mark

-  \* : Appears when neither capture nor replay is in progress.
-  \* : Displayed when saving the captured data in the internal memory (SD1) or SD CARD (SD2).
-  \* : Appears when waiting for a trigger during capturing and the stop key after capturing.
-  \* : Displayed when replaying the captured data in the internal memory (SD1) or SD CARD (SD2).
-  \* : Displayed when replaying the captured data in the internal memory (SD1) or SD CARD (SD2) during data capture or replaying it the data in two-screen (Refer to "(10) REVIEW" in "3.2 Key Operation").






### CAUTION

Please do not turn Off the power and do not remove the SD CARD when the status icon indicates other than "STOP". The data is damaged, and it will not be accessed.

Please start the operation after making sure that the status mark is switched to "STOP".



## 4. Remote unit display

This is displayed when the wireless sensor (GL100-WL) or the remote terminal (GLT400) is connected.

- 
-  : The wireless sensor setting is On and the unit is not being searched.
  -  : The wireless sensor setting is On and the unit is being searched.
  -  : The remote terminal setting is On and the unit is not being searched.
  -  : The remote terminal setting is On and the unit is being searched.

The remote terminal represents the radio field intensity with four antennas.

## 5. Device access display (Internal memory)




-  : Not accessed to the internal memory (SD1).
-  : Accessed to the internal memory (SD1)  
During accessing to the internal memory (SD1), the POWER LED blinks.

### CAUTION

Please do not turn Off the GL840's power while accessing the internal memory (SD1).

The data is damaged, and it will not be accessed.

## 6. Device access display (SD CARD 2 / wireless LAN display)

-  : The SD CARD is not inserted into the SD CARD (SD2) slot.
-  : The SD CARD is inserted into the SD CARD (SD2) slot, but it is not accessed.
-  : The SD CARD in the SD CARD (SD2) slot is accessed. Do not remove the SD CARD. During accessing to the SD CARD, the POWER LED blinks.

### CAUTION

Please do not remove the SD CARD and do not turn Off the GL840's power when accessing the SD CARD. The data is damaged, and it will not be accessed.



: The radio field intensity display of base unit (5 stages from Weak to Strong).



: The number of remote units which are connecting to the GL840 is displayed when setting to base unit.

## 7. Remote lamp



: Indicates local mode. Operations can be conducted on the GL840.



: Indicates remote mode. With some exceptions, operations must be conducted on a PC.

When you cancel the connection on the application (GL100\_240\_840APS), the GL840 automatically returns to local mode. If local mode is not entered, press the [QUIT] key.

## 8. Key lock display



: Not in key lock status. Normal operations are enabled.



: Key lock status. All the keys are locked.







Refer to “(13) To cancel key lock by password” in “3.4 Setting Menus” for details on the key lock.

## 9. Clock display

Displays the current date and time.

Refer to “(5) OTHER settings” in “3.4 Setting Menus” for details on date and time settings.

### 10. AC/battery status indicator

	: Running on AC or DC power supply.
	: Running on the battery. The remaining battery power is 100 to 91%.
	: Running on the battery. The remaining battery power is 90 to 61%.
	: Running on the battery. The remaining battery power is 60 to 31%.
	: Running on the battery. The remaining battery power is 30 to 11%.
	: Running on the battery. The remaining battery power is 10% or below.

#### CAUTION





- Data capture automatically stops when the remaining battery power drops to 10% or below during data capture.
  - The power is automatically turned off when the remaining battery power is 0%.
  - Please use the remaining battery display as a guide.
- This indicator does not guarantee the operating time with battery.

### 11. Digital display area

Displays the input value of each channel and span. Use the [SPAN/TRACE/POSITION] keys to switch the display.


Use the ▲ ▼ key to select the channel you want to activate (enlarged display).

The waveform of the active channel is displayed at the top.

	: Displays the input value.
	: The span of the active channel can be changed using the ◀▶ keys.
	: The position of the active channel can be changed using the ◀▶ keys.
	: The ON or OFF of the active channel display can be changed using the ◀▶ keys.

Refer to “(2) SPAN/TRACE/POSITION” in “3.2 Key Operation” for details.

As described below, the CH indicating the calculation mark is the channel which calculation between the CHs is enabled (On).

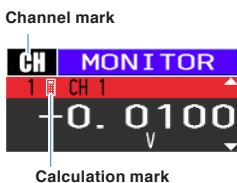

The channel mark indicates the type of CH that is digitally displayed.

CH: Indicates the analog channels.

GS: Indicates the channels of the GS sensor.

WL1 to 5: Indicates the channels of the wireless sensor (GL100-WL).

RT1 to 5: Indicates the channels of the remote terminal (GLT400).

### 12. Quick settings

The settings of the sampling interval and the division of waveform display can be changed. Use the ◀▶ keys to activate the Quick setting and the left/right keys to change values.

For details, refer to “(12) Quick settings” in “3.4 Setting Menus”.

\* The "SAMPLE" item cannot be changed during data capture.




### 13. Alarm display area

Displays the alarm output terminal status.

The number with which an alarm has occurred is displayed in red. The channel with the alarm cause has a red input value in the digital display area.

### 14. Pen display

Displays the each channel signal position, trigger position, and alarm range.

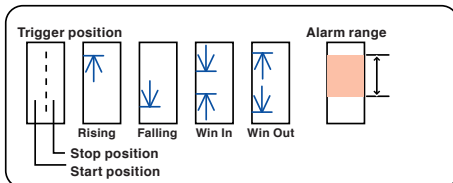

### 15. File name display area

(1) During data capture

A capture file name is displayed during capture.

`<SD1>150302#150302-090930.GBD`

\* If the ring recording setting is ON, a file name displayed during capture ends with "\_RINGx" (x represents a number) but the actual file name does not include "\_RINGx".

In the above figure, if the ring recording is set to ON, the file name during capture will be displayed, for example, as "`<SD1>150302\150302-090930_RING4.GBD`" but the actually created file will be "`<SD1>150302\150305-090930_.GBD`".

\* Refer to "(2) DATA settings" in "3.4 Setting Menu" for details.

(2) During data replay

Information on the time axis of the cursor is displayed during replay.



### 16. Scale lower limit

Displays the scale lower limit of the currently active channel.

### 17. Waveform display area

Displays the waveform of the input signal.


### 18. Scale upper limit

Displays the scale upper limit of the currently active channel.

### 19. Data capture bar

(1) During data capture

Displays the elapsed time and the internal memory (SD1) and SD CARD usage status.

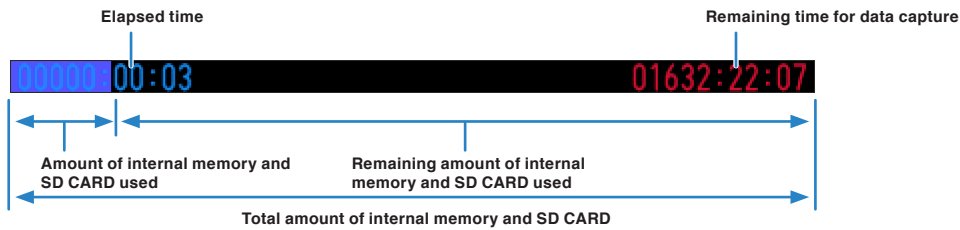


If, for example, 4 GB SD CARD is inserted and about 100 MB is used before data capture, the total amount of memory is 4 GB, the amount of SD CARD used is about 100 MB, and the amount of SD CARD remaining is about 3.9 GB. As time elapses during data capture, the amount of used SD CARD increases and the amount of remaining memory decreases.

The remaining time for data capture shows a length of time during which data capture is available with the amount of remaining SD CARD. If the amount of remaining SD CARD is more than 2 GB, however, this part shows remaining time during which data capture is available with one 2 GB file.

\* Remaining time more than 99999 hours is displayed as "+++++:++:++".


(2) During data replay

Displays the display position, cursor position, and trigger position graphically.

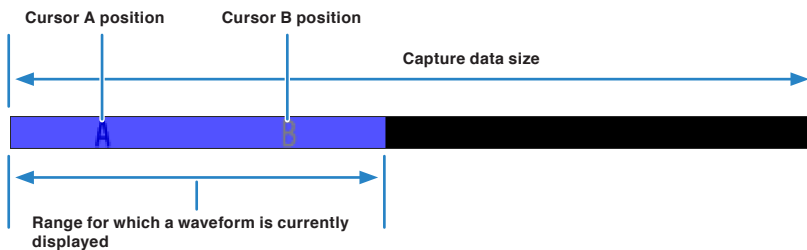

## 3.2 Key Operation

This section describes key operation.

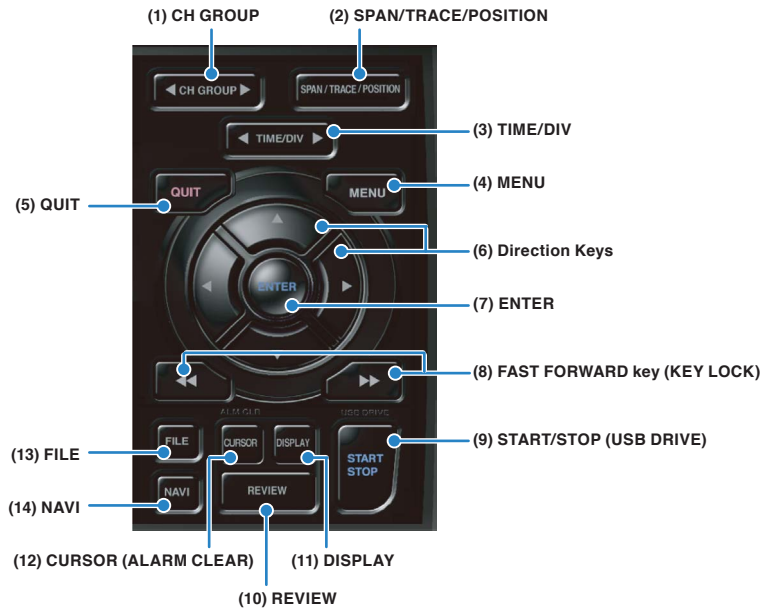

### (1) CH GROUP




Press this key to switch to the next group consisting of 10 channels.

Press the ◀ key to switch to the group consisting of the next 10 channels with a smaller number.


Press the ▶ key to switch to the group consisting of the next 10 channels with a larger number.

\* When optional GS sensor and terminal/addapter are connected, they are displayed in the following group. When the wireless LAN unit (optional) is installed in the GL840 and the GL100-WL is connected to the GS sensor and terminal/addapter through the wireless LAN, they are displayed in the last group.

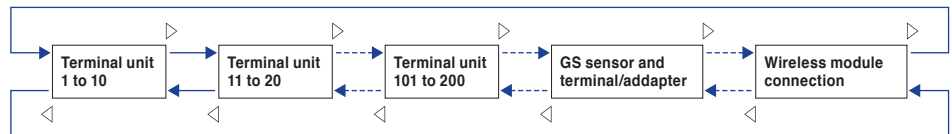

The items that can be switched in this key are as follows.

- Switch channels of the digital display area
- Switch channels of the AMP settings
- Switch channels of the trigger/alarm level settings
- Switch channels of the calculation display

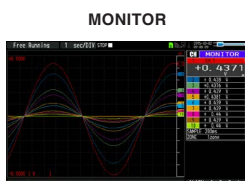

AMP settings

CH	Sensor	Span	Filter	EL	Min	Max
1	ALM	1000	OFF	1	0.00	0.02
2	ALM	1000	OFF	1	0.00	0.02
3	ALM	1000	OFF	1	0.00	0.02
4	ALM	1000	OFF	1	0.00	0.02
5	ALM	1000	OFF	1	0.00	0.02
6	ALM	1000	OFF	1	0.00	0.02
7	ALM	1000	OFF	1	0.00	0.02
8	ALM	1000	OFF	1	0.00	0.02
9	ALM	1000	OFF	1	0.00	0.02
10	ALM	1000	OFF	1	0.00	0.02

Level settings

Level	Setting	Combination	Display	Level	Level
1	ALM	1000	OFF	1	0.00
2	ALM	1000	OFF	1	0.00
3	ALM	1000	OFF	1	0.00
4	ALM	1000	OFF	1	0.00
5	ALM	1000	OFF	1	0.00
6	ALM	1000	OFF	1	0.00
7	ALM	1000	OFF	1	0.00
8	ALM	1000	OFF	1	0.00
9	ALM	1000	OFF	1	0.00
10	ALM	1000	OFF	1	0.00

Digital + Calculation Display screen

CH	VALUE	Max	Min
1	+ 0.00	+ 0.02	- 0.02
2	+ 0.12	+ 0.23	- 0.32
3	+ 0.00	+ 0.01	- 0.02
4	+ 0.00	+ 0.01	- 0.02
5	+ 0.00	+ 0.02	- 0.02
6	+ 0.00	+ 0.01	- 0.02
7	+ 0.01	+ 0.01	- 0.02
8	+ 0.00	+ 0.01	- 0.02
9	+ 0.01	+ 0.01	- 0.02
10	+ 0.00	+ 0.01	- 0.02


Statistical calculation between cursors

Calculation Results	CH	Unit	Value	Max	Min
1	1	V	0.00	0.02	-0.02
2	2	V	0.12	0.23	-0.32
3	3	V	0.00	0.01	-0.02
4	4	V	0.00	0.01	-0.02
5	5	V	0.00	0.02	-0.02
6	6	V	0.00	0.01	-0.02
7	7	V	0.01	0.01	-0.02
8	8	V	0.00	0.01	-0.02
9	9	V	0.01	0.01	-0.02
10	10	V	0.00	0.01	-0.02

**(2) SPAN/TRACE/POSITION**



Switches the information in the digital display.  
 Used to change the settings related to waveform display during Free Running (when stopped), data capture and data replay.  
 Pressing this key will switch displays as shown below.

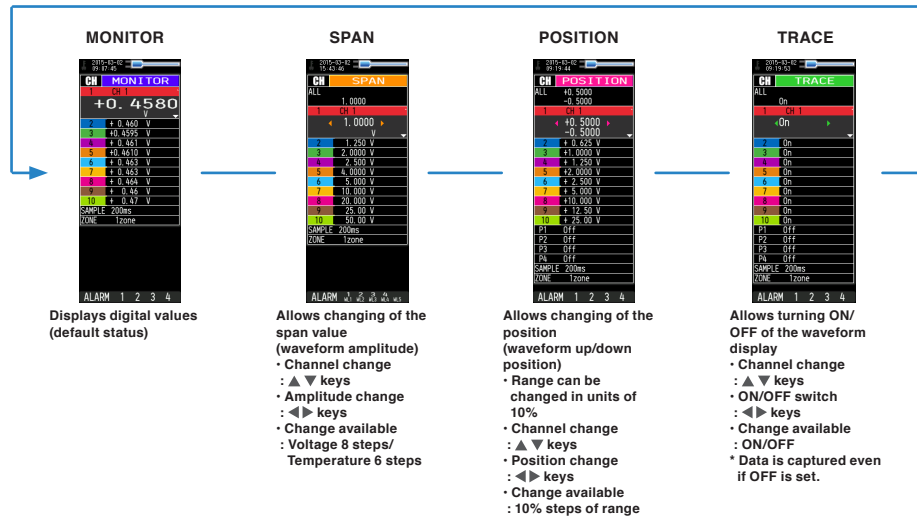


\* When ALL is set, setting values for CH1 is reflected on other channels.  
 When CH1 is OFF, ALL cannot be set.

**(3) TIME/DIV**



Press the left/right key of the [TIME/DIV] key to change the time axis display width.

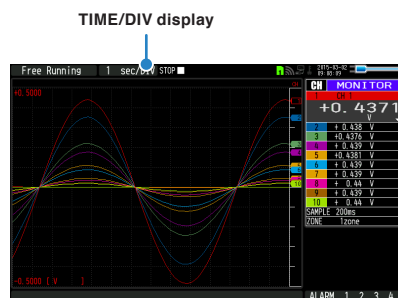

**(4) MENU**



Open the settings window to capture data. For details on settings, refer to “3.4 Setting Menus” .

CH	Input	Sensor	Range	Filter	EU	Misc.
ALL: M	DC		2 V	Off		
1: M	DC		2 V	Off		
2: M	DC		5 V	Off		
3: M	DC		2 V	Off		
4: M	DC		5 V	Off		
5: M	DC		2 V	Off		
6: M	DC		5 V	Off		
7: M	DC		5 V	Off		
8: M	DC		50 V	Off		
9: M	DC		20 V	Off		
10: M	DC		50 V	Off		

### (5) QUIT (LOCAL)



This key is primarily used for the following operations.

- To cancel a setting during menu configuration.
- To return to the MONITOR screen when the SPAN/TRACE/POSITION screen is displayed.
- To cancel remote status (in which keys are disabled) through interface control.
- To close the menu screen.
- To quit data replay.

### (6) Direction Keys



This key is primarily used for the following operations.

- To move a menu or setting item during menu configuration.
- To move the cursor during replay.
- To move the active channel in the Waveform + Digital and Digital + Calculation Display screens (▲ ▼ keys).
- To change the setting of SPAN/TRACE/POSITION (◀▶ keys).
- To change the Quick setting (◀▶ keys).
- To change the channel to be displayed in the Digital + Calculation Display screen (◀▶ keys).

### (7) ENTER



This key is primarily used for the following operations.

- To finalize setting items during menu configuration or open submenus.

**(8) FAST FORWARD key (KEY LOCK)**



This key is primarily used for the following operations.

- To move the cursor at high speed during replay.
- To change the display order of the files in the file box.
- To set key lock (Hold down the left/right FAST FORWARD key for at least two seconds. Press again to unlock)

A password for canceling the key lock can be specified.

Refer to “(13) To cancel key lock by password” in “3.4 Setting Menu” for details.

- To change the display mode in the Digital + Calculation Display screen.




**(9) START/STOP (USB Drive Mode)**



This key performs the following two operations:

<Starts/stops capture>

- During Free Running, starts capture.
- During capture, stops capture.

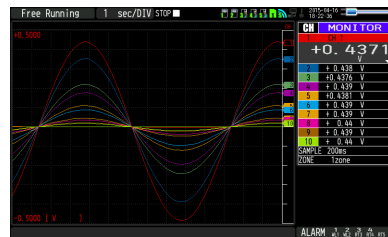

**USB Drive Mode**

In the “USB Drive Mode”, the internal memory (SD1) and SD CARD (SD2) can be check on a PC as an external storage device.

When two SD CARDS are inserted into the SD CARD1 (SD1) and the SD CARD2 (SD2) respectively, they are recognized as two external storage media.

Since the SD CARD is recognized as a removal disk, this mode facilitates file manipulation such as transfer and deletion.

1. Use a USB cable to connect the GL840 and a PC.
2. While pressing the GL840 [START/STOP] key, turn ON the power.
3. The external storage media is recognized by the PC and data exchange becomes possible.

\* In USB Drive Mode, the display on the GL840 becomes as follows:



**CAUTION**


- To exit USB Drive Mode, turn off and on the power again.
- In USB Drive Mode, no operation including data capture and data replay is available.

**(10) REVIEW**




This key is used to replay captured data.

- During Free Running, captured data is replayed.  
The screen used to specify the data replay source file appears; specify the file you want to replay.

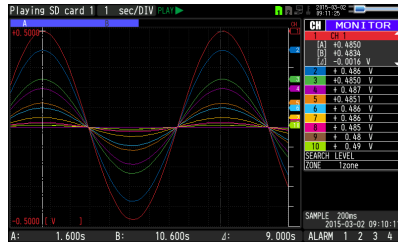


- While capturing data, recently captured data is replayed in 2-screen.

<1-screen replay display>

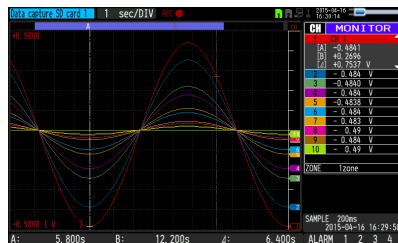

- When the [DISPLAY] key is pressed after the captured data is replayed, the captured data and current data are replayed in 2-screens consisting of the captured data screen and current data screen respectively.  
Press the [DISPLAY] key again to switch the screen to 1-screen replay display.

<2-screen replay display>

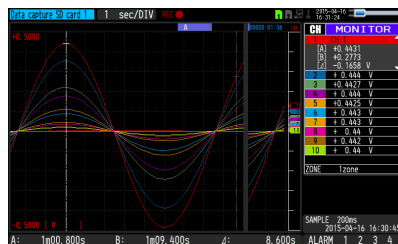

Captured data      Current data

To exit the replay display, press the [QUIT] key.

**CAUTION**

For CSV-formatted data, only the data captured by this GL40 can be replayed.

Also, when the data captured in CSV format is replayed, the unit of the temperature data is displayed in “deg C” rather than “°C”.



**(11) DISPLAY**




This key is used to switch the screen mode.

When running free-running (when the recording is stopped), data capturing, and data replaying during the capture, the screen mode can be switched.

Pressing this key switches the screen display as follows:

<When free-running and data capturing>

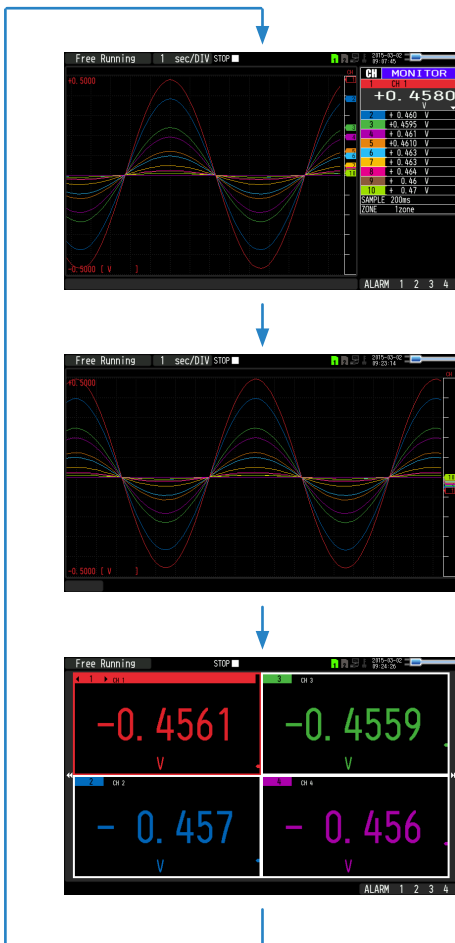

<Waveform + Digital Screen>

Displays the waveform and the digital values.

The setting can be changed using the [SPAN/TRACE/ POSITION] key.

<Expanded Waveform screen>

Displays only the waveform expanded in full screen mode.

<Digital + Calculation Display screen>

Displays digital values and two calculation results in large letters.


The calculation settings can be made using the Data menu. Refer to "(2) DATA setting" in "3.4 Setting Menu".

Use the ◀◀▶▶ FAST FORWARD keys to change the display mode. The calculation results are displayed only when switched to "All Mode".

Refer to "(8) FAST FORWARD key (KEY LOCK)" in "3.2 Key Operation" for details on "All Mode".



<Data replay during capture>

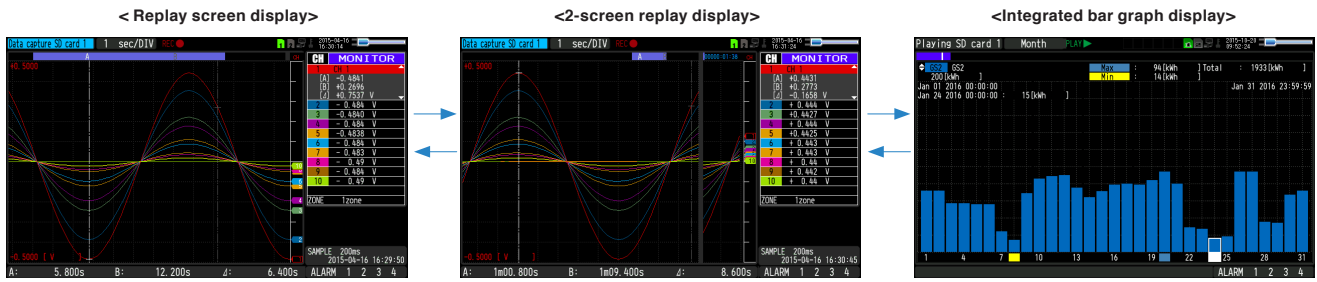


**CAUTION**

For CSV-formatted data, only the data captured by this GL840 can be replayed.  
 Also, when the data captured in CSV format is replayed, the unit of the temperature data is displayed in “deg C” rather than “°C”.  
 Only when the integrated CH is included in the data, the integrated bar graph can be displayed. For details, please refer to “(10) Integrated bar graph display” in “3.4 Setting Menus”.


**(12) CURSOR (ALARM CLEAR)**



- This key is used to switch between cursors A and B during replay. Pressing this key switches between cursor A and B. Refer to “(9) Data replay menu” in “3.4 Setting Menus” for details on cursor operation.

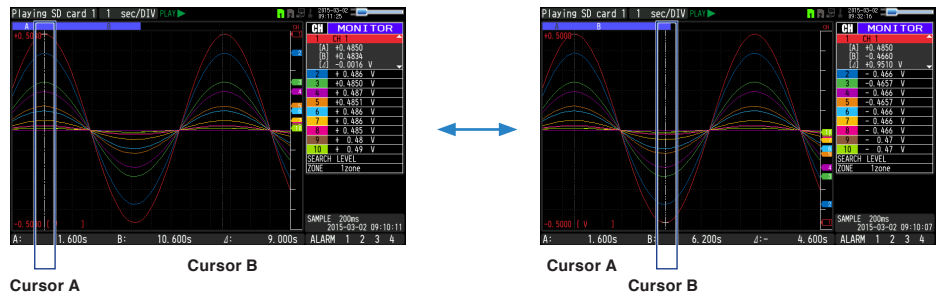

- When the alarm setting is “Hold generated Alarm”, the maintained alarm is cleared.

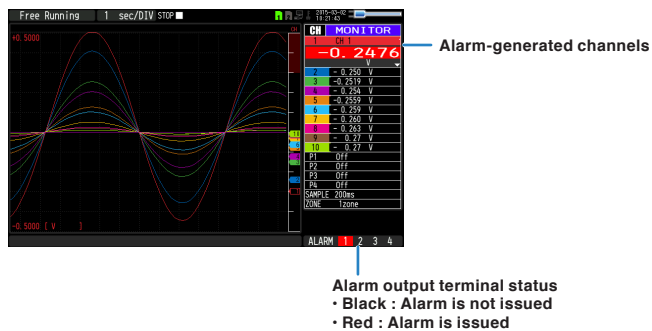

**(13) FILE**



This key is used to perform the file-related operations.


- Performs the operations (copy and delete, etc.) for the internal memory (SD1) and SD CARD (SD2).
- Performs the screen copy
- Saves all data or data between cursor A and cursor B during replay (can be set during replay only)
- Saves or reads the currently set condition into the USB device. (can be set during Free Running only).
- Replaces the SD CARD (SD2) during data capture (Settable when capturing or backing up to the SD CARD) and when the backup is performing for the CSV Format, the SD CARD can not exchange.

Refer to “(6) FILE menu” in “3.4 Setting Menus” for details on file operation.

**(14) NAVI**




Press the [NAVI] key during free-running to display the MENU screen for Navigation.  
<Navigation display>

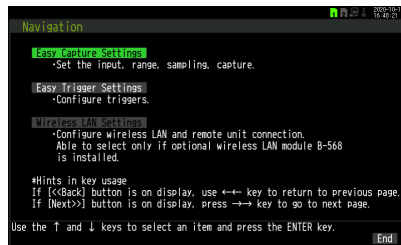

**Operations**


1. Select the “Easy Capture Settings” and then press the [ENTER] key to display the following menu screen.

In this screen, you can set the basic settings such as input, sensor, and range, etc.

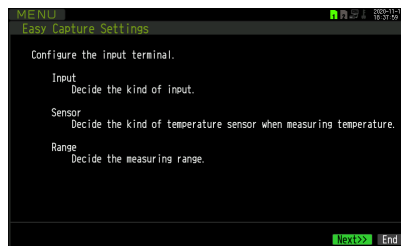

2. Select the “Easy Trigger Settings” and then press the [ENTER] key to display the following menu screen.


In this screen, you can set the basic trigger settings to start the data capture.

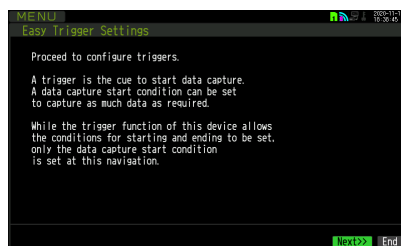

3. Select the “Wireless LAN Settings” and then press the [ENTER] key to display the following menu screen.

This screen is displayed only when optional wireless unit is installed.


In this screen, you can set the basic settings for wireless connection (connection to wireless sensor/remote terminal or connection to wireless LAN base unit (Router), etc.).

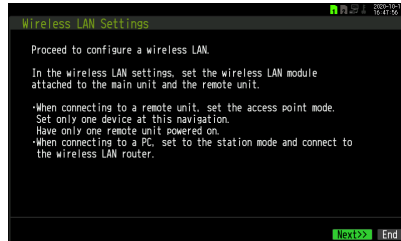

The above settings can be performed by following operation instructions on the screen. Because the setting procedure varies depending on each setting item, please set in accordance with the instructions on the screen.


### 3.3 Operation Modes

You can check the system operation status in the status message display.

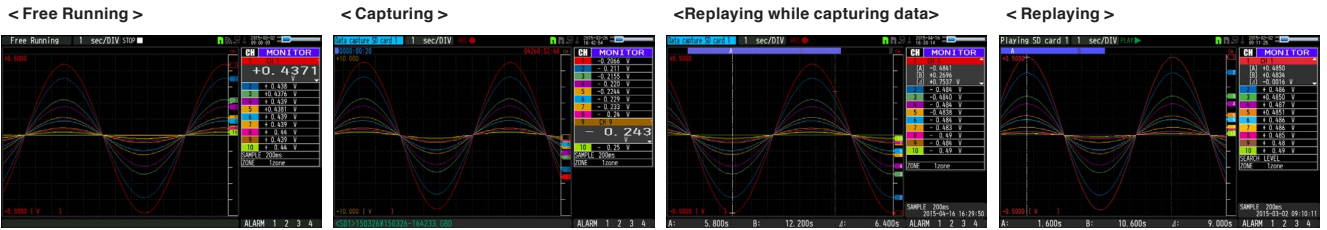


Operation	Description	Simple message display
Free Running	Startup status, or data is not being captured.	Free Running
Capturing	The data is being captured.	Capturing the data to SD CARD1 or SD CARD2
Replaying while capturing data	Replaying the data during capture and displaying the current waveform	Capturing the data to SD CARD1 or SD CARD2
Replaying	Captured data is being replayed	The data in the SD CARD1 or SD CARD2 is being replayed.

Operation status transition

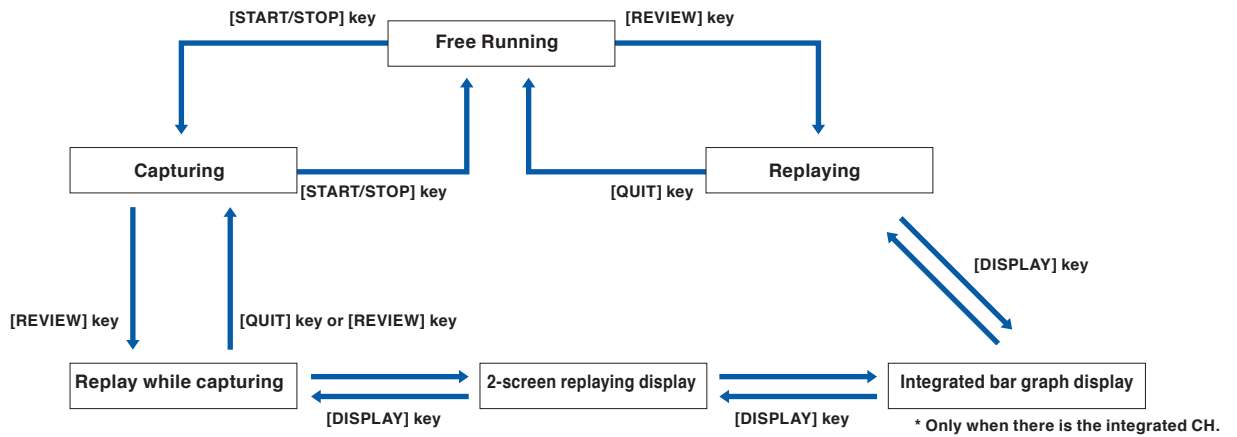

**(1) Free Running**

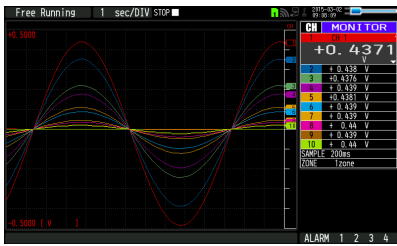

In free-running, you primarily perform the settings for data capture. You can check the currently input signal in the waveform or digital value.

**Main operations available during Free Running**

Measurement parameters settings	The [MENU] key is used to change various setting items in configuration menus.
SPAN/TRACE/POSITION	The [SPAN/TRACE/POSITION] key is used to change settings.
Display mode	The [DISPLAY] key is used to change the display mode.
File operations	The [FILE] key is used to perform file-related operations.
Data replay	The [REVIEW] key is used to replay captured data.
Time axis change	The [TIME/DIV] key is used to change the time axis scale..

**Operation of screen display**

The information in the screen display is changed by switching the channel. The operation of screen display can be performed during free-running, capturing, and replaying.


<Screen display when the CH1 is selected on the MONITOR screen during free-running>

The scale of the selected channel is indicated.

The selected channel is enlarged. The display channel can be switched by operating the ▲ ▼ keys.

The selected channel is displayed without coloration.

## (2) Capturing

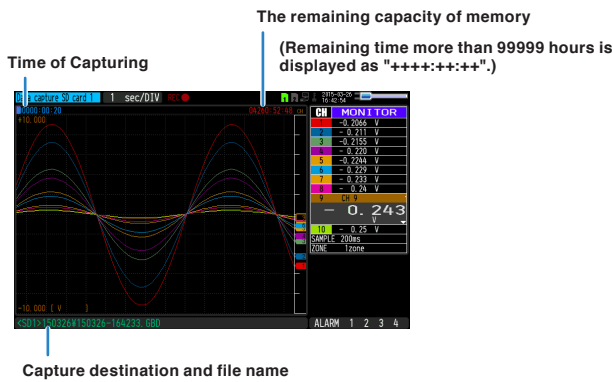


The captured data is saved in the internal memory (SD1) or SD CARD (SD2) during data capture. You cannot use the [MENU] key to change the setting.

### Operations available during capture

SPAN/TRACE/POSITION change	Change the settings with the [SPAN/TRACE/POSITION] key.
Screen display mode switch	Used to change the screen mode with the [DISPLAY] key.
Replay while capturing	Replay the data captured while capturing
Save to device	Save to the device with the [FILE] key during data capture.
Setting check	Display the setting information with the [MENU] key.
Time axis change	Change the time axis with the [TIME/DIV] key.

## (3) Data replaying during capture

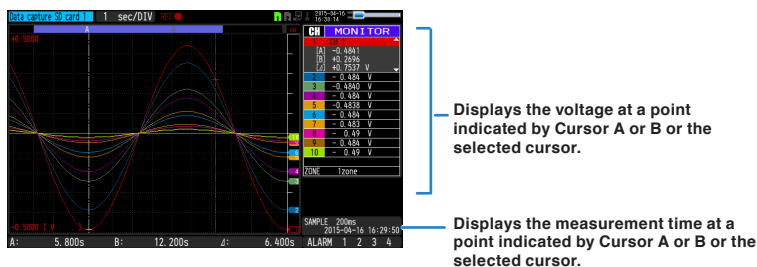

The captured data while capturing can be replayed by pressing the [REVIEW] key.


You can switch between the 1-screen (replayed data) and 2-screen (replayed data during data capture) by pressing the [DISPLAY] key.

Use the Direction keys (◀▶) to move the cursor and captured data to check digital values.

### Main operations to replay during data capture

Cursor movement	The [CURSOR] key is used to switch between cursors A and B. The ◀▶ or ◀◀, ▶▶ keys are used to move the cursors.
Save to device	The save to the device can be performed from the [FILE] menu. (The data up to the present or between the cursors can be saved in a separate file during data capture.)
Screen copy	Copy the screen with the [FILE] key.
Switching between 1-screen and 2-screen	You can switch between 1-screen and 2-screen during data replaying by pressing the [DISPLAY] key.
Time axis change	Change the time axis with the [TIME/DIV] key.

**(4) Captured data replaying**

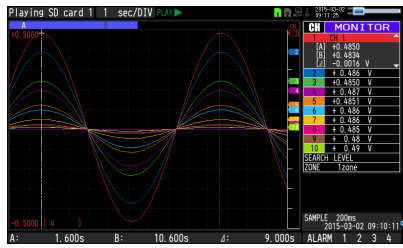

Displays the voltage at a point indicated by Cursor A or B or the selected cursor.

Displays the measurement time at a point indicated by Cursor A or B or the selected cursor.

Displays the captured data.

**Main operations to replay captured data**

SPAN/TRACE/POSITION change	Change the settings with the [SPAN/TRACE/POSITION] key.
Operation in the menu during data capture	Perform cursor movement, data search, and calculation setting with the [MENU] key.
Cursor movement	Switch between Cursor A and B with the [CURSOR] key. Using the ◀▶ or ◀◀, ▶▶ keys, move the cursor.
Data save	Save all the data or data between cursors with the [FILE] key.
Time axis change	Change the time axis scale with the [TIME/DIV] key.
File operation	Perform file-related operations
Display copy	Copy the screen with the [FILE] key.


**CAUTION**

For CSV-formatted data, only the data captured by this GL840 can be replayed.

Also, when the data captured in CSV format is replayed, the unit of the temperature data is displayed in “deg C” rather than “°C”.

### 3.4 Setting Menus

When you press the [MENU] key during Free Running, the following menu screens appear.

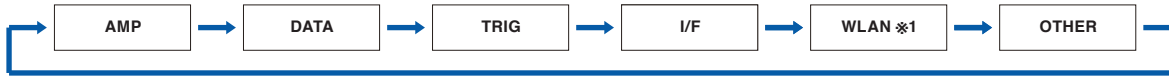


\* When optional wireless unit is not installed, these menu screen are not displayed.

#### (1) AMP settings

This menu is used to specify input signal-related settings.

<Analog settings>

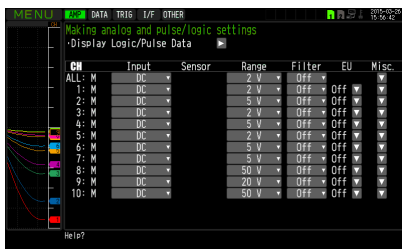

<Logic/Pulse settings>



Setting		Selections available	
Input	Standard terminal, Withstand high-voltage high-precision terminal, Screwless terminal, GL860 Standard 20CH screw terminal, GL860 Standard 20CH screwless terminal	Off, DC, TEMP, RH	
	GS sensor and terminal/addapter (optional)	Temperature and humidity sensor (GS-TH): Off, TEMP, DEW, ACC. TEMP 3-axis acceleration / temperature sensors (GS-3AT): Off, TEMP / ACC. X / ACC. Y / ACC. Z 4ch voltage / temperature terminal (GS-4VT): Off, DC, TEMP 4ch thermistor (GS-4TSR): Off, TEMP Illumination / ultraviolet sensor (GS-LXUV): Off, ILLUM. / UV / ACC. ILLUM. / ACC. UV CO2 sensor (GS-CO2): Off, CO2 Adapter for AC current sensor (GS-DPA-AC): Off, CURRENT / POWER, ACC. POWER	
Standard terminal and Withstand high-voltage high-precision terminal	Range	[Voltage]	20, 50, 100, 200, 500mV; 1, 2, 5, 10, 20, 50, 100V; 1-5V
		[Temperature] Sensor	Thermocouple: TC-K, TC-J, TC-T, TC-R, TC-E, TC-B, TC-S, TC-N, TC-C Resistance bulb: Pt100, JPt100, Pt1000
	Range	100, 500, 2000°C	
	[Humidity]	100% fixed	
Filter	Off, 2, 5, 10, 20, 40		
GL860 Standard 20CH screw terminal (B-563) / GL860 Standard 20CH screwless terminal (B-563SL)	Range	[Voltage]	20, 50, 100, 200, 500mV; 1, 2, 5, 10, 20, 50, 100V; 1-5V
		[Temperature] Sensor	Thermocouple: TC-K, TC-J, TC-T, TC-R, TC-E, TC-B, TC-S, TC-N, TC-C
	Range	100, 500, 2000°C	
	[Humidity]	100% fixed	
Filter	Off, 2, 5, 10, 20, 40		
Temperature and humidity sensor (GS-TH)	Range	[Temperature] / [Dew-point temperature] / [Accumulated temperature]	100°C fixed
		[Humidity]	100% fixed
	Filter	None	
3-axis acceleration / temperature sensor (GS-3AT)	Range	[Acceleration] Sensor	Peak / Ave. / RMS
		Range	2, 5, 10G; 20, 50, 100m/s <sup>2</sup>
	[Temperature]	100°C fixed	
Filter	None		




Setting			Selections available	
4ch voltage / temperature terminal (GS-4VT)	Range	[Voltage]	20, 50, 100, 200, 500mV; 1, 2, 5, 10, 20, 50V; 1-5V	
		[Temperature]	Sensor	Thermocouple: TC-K , TC-T
			Range	2000°C fixed
	Filter			None
4ch thermistor (GS-4TSR)	Range	[Temperature]	Sensor	Thermistor: TSR-A, TSR-J
			Range	200°C fixed
	Filter			None
Illumination / ultraviolet sensor (GS-LXUV)	Range	[Illuminance] / [Accumulated illuminance]	2000, 20000lx, 200klx	
		[Ultraviolet] / [Accumulated ultraviolet]	30mW/cm <sup>2</sup> fixed	
	Filter			None
CO2 sensor (GS-CO2)	Range		5000ppm fixed	
	Filter			None
Adapter for AC current sensor (GS-DPA-AC)	Range	AC clamp mode	AC 1P2W, AC 1P3W, AC 3P3W	
		[Current]	50, 100, 200A	
		[Power] / [Accumulated power]	(20, 50, 100kW) Change in synchronization with the current range.	
	Filter			None
EU (Scaling settings)	Function		Off, On * When measuring the humidity, "On" is fixed.	
	Meas. Value	Upper limit	Set numeric value	
		Lower limit	Set numeric value	
	EU output	Upper limit	Set numeric value	
		Lower limit	Set numeric value	
	Dec pt		EU output upper limit x 0.01, x 1, x 10, x 100, x 1000	
	Select		Cur, Length, Area, Volume, Velocity, Accel, Freq, Mass, Energy, Pressure, Flow , Temp, Strain, Brightness, Concentration	
	Unit		(The selections vary depending on the unit selected in the above.)	
	Arbitrary unit		Enter text (Max. 8 characters)	
	Misc.	Annotation text string		Enter text (Max. 31 characters)
Inter-CH Op Settings		Function	Off, On	
		Operation	CH-X (+, -, x, /) CH-Y	
		Scaling	/1000000, /1000, x1, x1000, x1000000	
		Upper/Lower limit	Set numeric value	
		Dec pt	x1, x10, x100, x1000, x10000	
		Select	Cur, Length, Area, Volume, Velocity, Accel, Freq, Mass, Energy, Pressure, Flow , Temp, Strain, Brightness, Concentration	
		Unit	(The selections vary depending on the unit selected in the above.)	
		Arbitrary unit	Enter text	
Span settings		Upper limit	Set numeric value	
		Lower limit	Set numeric value	
Waveform color setting		0 to 31 for each of red, green, blue (RGB)		
Line Thickness Setting		1 to 8 dots		
Trace setting		Off, On		
Perform Auto Zero ADJ. * When using the GS-3AT, the auto balance is performed.		▶ Press right key to execute. * This function is not available for the temperature setting.		
Reset Auto Zero ADJ. * When using the GS-3AT, the auto zero is released.		▶ Press right key to execute. * This function is not available for the temperature setting.		
Accumulated reference temperature		-20 to +85°C * Available for GS-TH sensor only.		
Accumulated polarity		High/Low * Available for GS-TH sensor only.		
CO2 calibration		Off, On * Available for GS-CO2 sensor only.		
Voltage		90 to 264 * Available for GS-DPA-AC adapter only.		
Power factor		0.30 to 1.00 * Available for GS-DPA-AC adapter only.		

Setting		Selections available		
Logic/Pulse			Off, Logic, Pulse	
	[Logic]	Filter	Off, On	
		Misc.	Waveform color setting	0 to 31 for each of red, green, blue (RGB)
			Trace setting	Off, On
	[Pulse]	Input	Off, Revolution counts, Counts, Inst.	
		Filter	Off, On	
		Slope	↑ H, ↓ L	
		EU	Function	Off, On
			Meas. Value	Set numeric value
			EU output value	Set numeric value
			Select	Cur, Length, Area, Volume, Velocity, Accel, Freq, Mass, Energy, Pressure, Flow, Temp, Strain, Brightness, Concentration
			Unit	(The selections vary depending on the unit selected in the above.)
		Arbitrary unit	Enter text	
		Misc.	Waveform color setting	0 to 31 for each of red, green, blue (RGB)
	Line Thickness Setting		1 to 8 dots	
	Trace setting		Off, On	
Number of pulses per revolution	1 to 10000			

## Switching displays

Analog and logic/pulse can be switched as shown below.

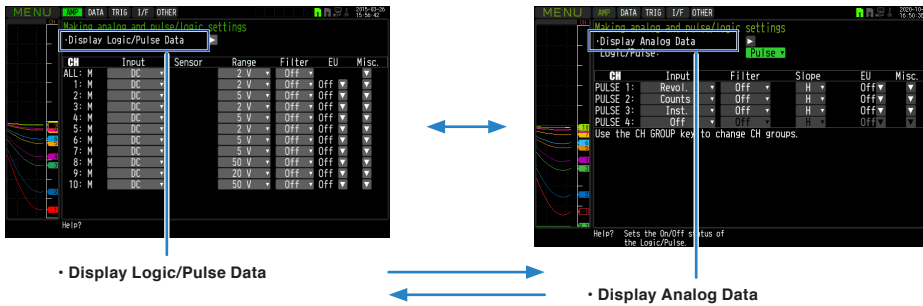

## Analog settings

Specifies the conditions for analog signals.

### CHECKPOINT

When you use CH ALL to set an input, range and filter, all channels are set to the same values if the input is the same. Range is set only for the same input channels. However, the range of a channel is not changed if its EU (scaling) is set to On.

Span All Settings is set only for the same range channels.

\* If the first channel in a channel group (CH1 if CHs 1 to 10 are displayed) has an input that is set to Off, the input of CH ALL is set to Off.

### (1)-1 Input

This is used to select input condition

Selection item	Description
Off	Input signal measurement is disabled. No waveform or digital value is displayed.
DC	Used for measuring direct-current voltage.
TEMP	Used for measuring temperature.
RH	Used for measuring humidity with the humidity sensor B-530. In this case, the voltage range will become 1 V, and the EU settings will not be available.

### (1)-2 Sensor

This is used to select the thermocouple connected when the temperature is input and type of resistance bulb. Additionally, perform the settings for sensor operation when connecting the optional GS sensor or terminal/addapter. For details, refer to "\*\*\*\*\* setting".

\* The \*\*\*\*\* symbols indicate the abbreviation of name (model).

### (1)-3 Range

This is used to select the range of measurement.

Input item	Description
DC	20, 50, 100, 200, 500 mV; 1, 2, 5, 10, 20, 50, 100V 1-5 V
TEMP	2000, 500, 100°C * This setting is used for only Standard terminal, Withstand high-voltage high-precision terminal, Screwless terminal, GL860 Standard 20CH screw terminal and GL860 Standard 20CH screwless terminal. The resolution varies depending on the range.
RH	No selection available

\* Please select each GS sensor and terminal/addapter in reference to "\*\*\*\*\* setting" described below.

\* The \*\*\*\*\* symbols indicate the abbreviation of name (model).

Available SPAN Settings

<Voltage Ranges>

Range	Maximum SPAN	Minimum SPAN	Minimum Resolution
20mV	-22.000 to +22.000mV	0.200mV	0.001mV
50mV	-55.00 to +55.00mV	0.50mV	0.01mV
100mV	-110.00 to +110.00mV	1.00mV	0.01mV
200mV	-220.00 to +220.00mV	2.00mV	0.01mV
500mV	-550.0 to +550.0mV	5.0mV	0.1mV
1V	-1.1000 to +1.1000V	0.0100V	0.0001V
2V	-2.2000 to +2.2000V	0.0200V	0.0001V
5V	-5.500 to +5.500V	0.050V	0.001V
10V	-11.000 to +11.000V	0.100V	0.001V
20V	-22.000 to +22.000V	0.200V	0.001V
50V	-55.00 to +55.00V	0.50V	0.01V
100V	-110.00 to +110.00V	1.000V	0.01V
1-5V	-5.500 to +5.500V	0.050V	0.001V

<Temperature Ranges>

Type	Humidity Range	Resolution	Measurement range
R/S	100°C F.S.	0.01°C	0 to 100°C
	500°C F.S.	0.05°C	0 to 500°C
	2000°C F.S.	0.1°C	R : 0 to 1600°C S : 0 to 1760°C
B	500°C F.S.	0.05°C	400 to 500°C
	2000°C F.S.	0.1°C	500 to 1820°C
K/E/T/J/N	100°C F.S.	0.01°C	-100 to 100°C
	500°C F.S.	0.05°C	K/E/J/N : -200 to 500°C T : -200 to 400°C
	2000°C F.S.	0.1°C	K : -200 to 1370°C
			E : -200 to 800°C
			T : -200 to 400°C
			J : -200 to 1100°C
N : -200 to 2000°C			
W	100°C F.S.	0.01°C	0 to 100°C
	500°C F.S.	0.05°C	0 to 500°C
	2000°C F.S.	0.1°C	0 to 2000°C
Pt	100°C F.S.	0.01°C	-100 to 100°C
	500°C F.S.	0.05°C	-200 to 500°C
	2000°C F.S.	0.1°C	Pt100 : -200 to 850°C JPt100/Pt1000 : -200 to 500°C

<Humidity Range>

Range	Maximum SPAN	Minimum SPAN (p-p)	Minimum Resolution
100%	0 to +110%	1.0%	0.1%


**(1)-4 Filter**

Selects the range to be measured.

Selection item	Description
Off	No moving average is calculated.
2	A moving average is calculated 2 times per sampling interval.
5	A moving average is calculated 5 times per sampling interval.
10	A moving average is calculated 10 times per sampling interval.
20	A moving average is calculated 20 times per sampling interval.
40	A moving average is calculated 40 times per sampling interval.

<Filter processing>

Filter processing performed on the GL840 is the moving average shown in the following figure.

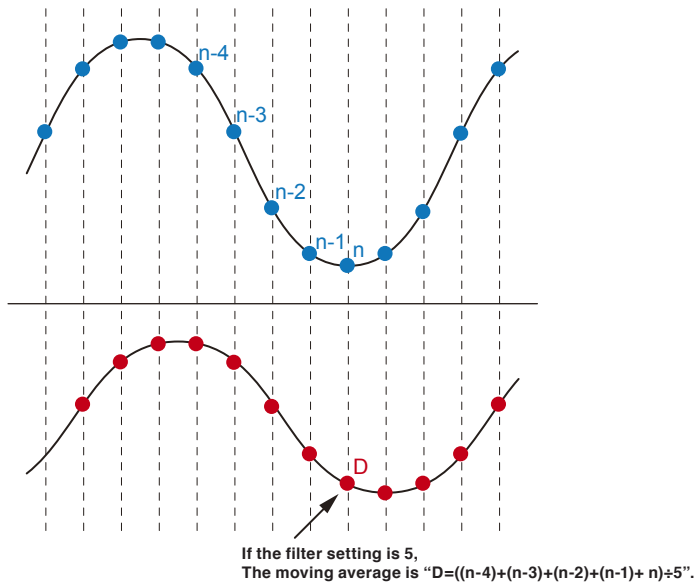


**CHECKPOINT**

If the sample interval exceeds 30 seconds, the average value of data obtained in a sub-sample (30 seconds) is used.

**(1)-5 EU (Scaling settings)**

This is used to convert the measured signals to other units.

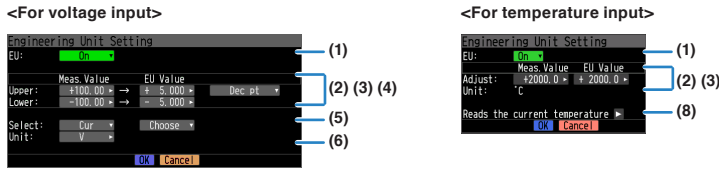

Setting	Description
(1) EU Function	Sets the scaling function to ON or OFF.
(2) Meas. Value (Upper/Lower)	Sets the upper and lower limits of values to be converted. * For temperature input, there is no distinction between upper and lower limits. See the setting examples shown below for details.
(3) EU Output Value (Upper/Lower)	Sets the upper/lower limit output values after conversion. * For temperature input, there is no distinction between upper and lower limits. See the setting examples shown below for details.
(4) Dec pt	Sets the decimal point position for an EU output value.
(5) Select	Selects a specific engineering unit classification. (The following are available.) Cur, Length, Area, Volume, Velocity, Accel, Freq, Mass, Energy, Pressure, Flow, Temp, Strain, Brightness, Concentration
(6) Unit	Selects a unit to be used after conversion. A unit displayed in this field belongs to the classification selected in "Select." To set a unit not displayed in this field, set arbitrary text in "Arbitrary unit." The setting selected in this field is displayed in "Arbitrary unit."
(7) Arbitrary Unit	Sets a unit to be used after conversion. Arbitrary text consisting of alphabetical characters and numerical values can be set as a unit. (For the character input, refer to "(8) Character string input" in "3.4 Setting Menus".) When "Select Unit" or "Unit" is specified, it is reflected in here.
(8) Reads the current temperature measurement value	Substitutes the current measurement value into (2) Measurement value and (3) EU output value. * The value is not substituted when burnout occurs or the scale is exceeded.

**CHECKPOINT**

- If a message window opens, follow the instruction in the message to change the setting value.
- The Scaling function performs calculation using a ratio of the Meas. Value and EU Output Value settings.
- The digital display shows “++++/----” when the converted value cannot be processed by the GL840.
- The span may be changed depending on the Scaling settings.
- For temperature input, the offset setting for an input value is used.

Setting example: For voltage input


	Meas. Value	EU Output Value	Dec pt	Choose
Upper limit	+5.000	+20.00	+ xx.xx	rpm
Lower limit	-5.000	-20.00		

Setting example: For temperature input

Meas. Value	EU Output Value
22.0°C	25.0°C

3°C is always added to the measurement value

(1)-6 Misc.

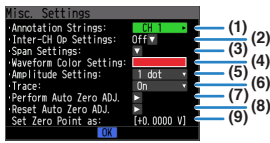


Setting object	Setting	Description
Voltage, humidity, acceleration settings	(1) Annotation Settings	Set the annotation (comment) displayed in the CH.
	(2) Inter-CH Op Settings	Sets what to do in calculation between channels. Four arithmetic operations (+, -, x, ÷) can be set as calculation between channels.
	(3) Span Settings	Sets the upper and lower limits of values of a span in which a waveform should be displayed.
	(4) Waveform Color Setting	0 to 31 for each of red, green, blue (RGB)
	(5) Amplitude Setting	1 to 8 dots
	(6) Trace	This is used to set the waveform display.
	(7) Perform Auto Zero ADJ. (Auto balance in the case of acceleration)	The current input voltage (acceleration value) is calculated as a zero point voltage value (acceleration value). Automatic adjustable voltage range is within ±10% of set range.
	(8) Reset Auto Zero ADJ.	Reset the zero point voltage value (acceleration value). * When the temperature is set, this function is not available.
	(9) [Set Zero Point as :]	The zero point voltage value (acceleration value) is displayed. * When the temperature is set, this function is not available.

When GS sensor and terminal/addapter are used

\* For the number in the setting items in the following table, refer to the voltage, humidity and acceleration settings described above.

Setting object	Setting	Description
Temperature setting	(1), (2), (3), (4), (5), (6)	Same content as the voltage.
	Accumulated reference temperature	Set the reference temperature accumulated within the range of -20 to +85°C for the temperature and humidity sensor.
	Accumulated polarity	Set High/Low accumulated polarity.
Logic setting	(5), (6)	Same content as the voltage.
Pulse setting	(4), (5), (6)	Same content as the voltage.
	Number of pulses per revolution	Set the number of pulses per revolution.
CO2 setting	(1), (2), (3), (4), (5), (6)	Same content as the voltage.
	CO2 calibration	Set the CO2 calibration.
AC clamp setting	(1), (2), (3), (4), (5), (6)	Same content as the voltage.
	Voltage (Power only)	Set the measurement voltage value to calculate the power within the range of 90 to 264V.
	Power factor (Power only)	Set the power factor to calculate the power within the range of 0.30 to 1.00.
	Auto zero adjustment	Display the input voltage after releasing the zero point voltage value.
	Zero adjustment reset	Display the zero point voltage value. (Display only)

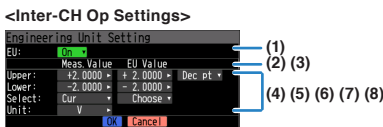

Setting	Description	
(1) Inter-CH Op Settings Function	Off, On If this setting is ON, the channel has a calculation mark in the digital display, etc. Calculation mark 	
(2) Operation	CH-X (Function) CH-Y	
	CH-X	CH1 to CH200
	Function	Four arithmetic operation functions (+, -, x, /)
	CH-Y	CH1 to CH200

Setting	Description								
(3) Scaling	<p>/1000000, /1000, ×1, ×1000, ×1000000</p> <p>Sets the scaling factor for a calculation result.</p> <p>&lt;Example&gt;</p> <table border="1"> <tr> <td>In the case of calculation result = 0.001</td> <td>In the case of calculation result = 1000</td> </tr> <tr> <td>Calculation result ×1 = 0.001</td> <td>Calculation result ×1 = 1000</td> </tr> <tr> <td>Calculation result ×1000 = 1</td> <td>Calculation result / 1000 = 1</td> </tr> <tr> <td>Calculation result ×1000000 = 1000</td> <td>Calculation result / 1000000 = 0.001</td> </tr> </table>	In the case of calculation result = 0.001	In the case of calculation result = 1000	Calculation result ×1 = 0.001	Calculation result ×1 = 1000	Calculation result ×1000 = 1	Calculation result / 1000 = 1	Calculation result ×1000000 = 1000	Calculation result / 1000000 = 0.001
In the case of calculation result = 0.001	In the case of calculation result = 1000								
Calculation result ×1 = 0.001	Calculation result ×1 = 1000								
Calculation result ×1000 = 1	Calculation result / 1000 = 1								
Calculation result ×1000000 = 1000	Calculation result / 1000000 = 0.001								
Operations span									
(4) Upper/Lower limits	Sets the upper and lower limits of values of a span in which a waveform should be displayed. The setting value is in reference to a calculation result.								
(5) Dec pt	Sets the decimal point position for a span setting.								
(6) Scaling setting	<p>Selects the unit after conversion.</p> <p>The unit displayed here is the unit selected in the "Unit select".</p> <p>When using the unit not displayed here, set any character in the "Arbitrary unit". Also, the contents set here is displayed in the "Arbitrary unit".</p>								
(7) Select	<p>Selects the unit which indicates the calculation results.</p> <p>Cur, Length, Area, Volume, Velocity, Accel, Freq, Mass, Energy, Pressure, Flow, Temp, Strain, Brightness, Concentration</p>								
(8) Unit	<p>Sets a unit to be used after conversion.</p> <p>Arbitrary text consisting of alphabetical characters and numerical values can be set as a unit. (For the character input, refer to "(8) Character string input" in "3.4 Setting Menus".)</p> <p>When "Select Unit" or "Unit" is specified, it is reflected in here.</p> <p>When "Select" or "Choose" is used, the setting is reflected in this field.</p>								


**CHECKPOINT**

- Calculation results are displayed in volts.  
 The calculation result for 100 mV + 100 mV is 0.2.  
 Use Scaling to display this result as 200 mV.
- If the sampling interval is faster than 500 ms for GS sensor, wireless sensor and remote terminal, the displayed value of inter-CH calculation on the monitor may differ from the actual captured data.


**Logic and Pulse settings**

Makes settings related to digital input.

<For Pulse>

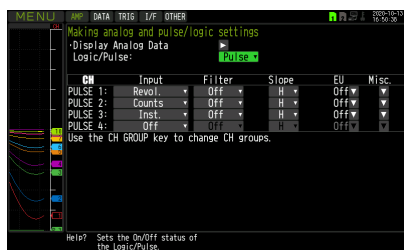

<For Logic>

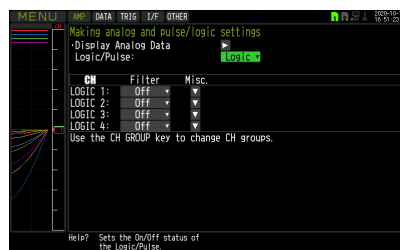

**(1)-7 Logic/Pulse**

This is used to select the processing method for digital input.

Selection item	Description
Off	Digital input measurement is disabled.
Logic	Digital input is processed as logic signals.
Pulse	Digital input is processed as pulse signals.



**(1)-8 Input**

This is used to set the pulse measurement mode. This setting is available only if Pulse is selected in (1)-7.

Selection item	Description
Off	Pulse input measurement is disabled.
Revol.	The number of pulses per sample interval is counted and converted to the number of revolutions per minute.
Counts	Captures the cumulative number of pulses for each sampling interval from the start of measurement.
Inst.	Captures the number of pulses for each sampling interval.

**(1)-9 Filter**

This is used to set the filter for input.

Selection item	Description
Off	Disables hardware filter.
On	Enables hardware filter. It is effective in a noisy environment. The filter is approximately 30 Hz (-3 dB).


**(1)-10 Pulse Slope**

This is used to set the slope (direction) to count the number of pulses. This setting is available only if Pulse is selected in (1)-7.

Selection item	Description
↑ H	Counts the rising edges of pulses.
↓ L	Counts the falling edges of pulses.

**CHECKPOINT**


- Allocation of CH number of logic and pulse data is as shown below.

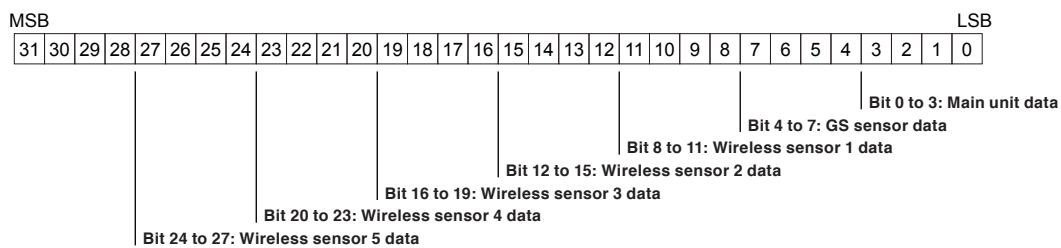

- If a remote terminal (GLT400) is connected as a remote unit of the GL840, the logic/pulse input function of the remote terminal is not available.

**(1)-11 EU (Scaling settings)**


This is used to convert the measured signals to other units. This setting is available only if Pulse is selected in (1)-7.

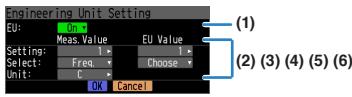


Setting	Description
(1) EU Function	Sets the scaling function to ON or OFF.
(2) Meas. Value	Sets a value to be converted.
(3) EU Value	Sets an output value after conversion.
(4) Select	Selects a specific engineering unit classification.(The following are available.) Cur, Length, Area, Volume, Velocity, Accel, Freq, Mass, Energy, Pressure, Flow , Temp, Strain, Brightness, Concentration
(5) Unit	Selects a unit to be used after conversion. A unit displayed in this field belongs to the classification selected in "Select." To set a unit not displayed in this field, set arbitrary text in "Arbitrary unit." The setting selected in this field is displayed in "Arbitrary unit."
(6) Choose	Sets a unit to be used after conversion. Arbitrary text consisting of alphabetical characters and numerical values can be set as a unit. (For the character input, refer to "(8) Character string input" in "3.4 Setting Menus".) When "Select Unit" or "Unit" is specified, it is reflected in here. When "Select" or "Unit" is used, the setting is reflected in this field.

**CHECKPOINT**

- If a message window opens, follow the instruction in the message to change the setting value.
- The Scaling function performs calculation using a ratio of the Meas. Value and EU Output Value settings.
- The digital display shows “++++/----” when the converted value cannot be processed by the GL840.
- The span may be varied depending on the scaling settings.

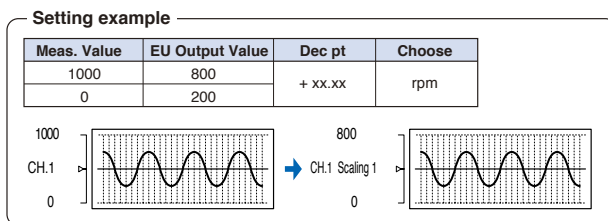

**(1)-12 Misc.**

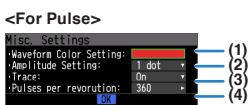


Setting	Description
(1) Waveform Color Setting	0 to 31 for each of red, green, blue (RGB)
(2) Amplitude Setting	1 to 8 dots
(3) Trace	This is used to set the waveform display.
(4) Pulse per revolution	1 to 10000 When setting the pulse input to the number of revolutions, set the number of pulses per revolution. As the number of pulses per revolution set here is 1 revolution, the number of revolutions per minute (RPM) is calculated.calculated. For example, if “100” is set, 1 rotation is judged when 100 pulses have been input.  <Calculation formula> Number of revolutions (RPM) = Pulse input frequency ÷ Number of pulses per revolution x 60 (1 minute)  <Example> Number of pulses per revolution: 100 (1 rotation is judged when 100 pulses have been input.) Pulse input: 1000 Hz (1000 pulses per sec.) Number of revolutions: 600 RPM (600 rotation per min.)

**Temperature and humidity sensor (GS-TH: optional) setting**

Performs the setting related to the input of temperature and humidity sensor.

The Setting screen is displayed at the end of the group by connecting the temperature and humidity sensor and turning On the GL840's power.

**(1)-13 Input settings**

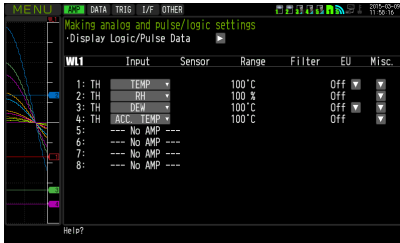

Setting	Description												
Off	The input signal is not measured. The waveform and digital display also are not performed.												
1ch TEMP	Used to measure the temperature												
2ch RH	Used to measure the humidity.												
3ch DEW	Used to measure the dew-point temperature.												
4ch ACC. TEMP	Used to measure the accumulated temperature.												
5ch to 8ch No AMP	When connecting the two GS series and terminal / addapter using a branch adapter for GS, the following combination is displayed. <table border="1" style="margin: 10px auto;"> <thead> <tr> <th>Combination</th> <th>CH1 to 4</th> <th>CH5 to 8</th> </tr> </thead> <tbody> <tr> <td>TH+LXUV</td> <td>TH</td> <td>LXUV</td> </tr> <tr> <td>TH+CO2</td> <td>TH</td> <td>CO2</td> </tr> <tr> <td>LXUV+CO2</td> <td>LXUV</td> <td>CO2</td> </tr> </tbody> </table> <p>Symbols in the table are as follows:                      TH: Temperature and humidity sensor                      LXUV: Illumination / ultraviolet sensor                      CO2: CO2 sensor</p>	Combination	CH1 to 4	CH5 to 8	TH+LXUV	TH	LXUV	TH+CO2	TH	CO2	LXUV+CO2	LXUV	CO2
Combination	CH1 to 4	CH5 to 8											
TH+LXUV	TH	LXUV											
TH+CO2	TH	CO2											
LXUV+CO2	LXUV	CO2											

**(1)-14 Range settings**

This is used to select the voltage range to be measured. The temperature range is fixed.

Setting	Description
TEMP	100°C fixed range
RH	100% fixed range

**(1)-15 EU setting**

The offset of temperature/dew point temperature only can be adjusted.

Refer to “EU Function, Meas. Value, EU Output Value, and Reads the current temperature measurement value” in “(1)-5 EU (Scaling settings)” in “3.4 Setting Menus”.

**CHECKPOINT**

Even if the scaling setting is applied to the original measured value of CH, the accumulated temperature is not reflected in the accumulated temperature CH.

**(1)-16 Other setting**

The following settings can be performed.


Setting	Description
Annotation text string	Set the annotation (comment) displayed in the CH.
Program Inter-CH calculation	Set the contents of Program Inter-CH calculation Four arithmetic operations (addition (+), subtraction (-), multiplication (x), division (÷)) can be used for the Program Inter-CH calculation
Span setting	Set the upper and lower limits of the span which the waveform is displayed.
Waveform color setting	0 to 31 for each of red, green, blue (RGB)
Thickness setting	1 to 8 dots
Trace	This is used to set the waveform display.
Reference temperature (Accumulated temperature only)	Set the reference temperature accumulated within the range of -20 to +85°C
Reference temperature polarity (Accumulated temperature only)	Set High/Low accumulated polarity.

**3-axis Acceleration / Temperature Sensor (GS-3AT: optional) setting**

Performs the setting related to the input when connecting the 3-axis acceleration / temperature sensor.

The Setting screen is displayed at the end of the group by connecting the 3-axis acceleration / temperature sensor and turning On the GL840's power.

**(1)-17 Input setting**

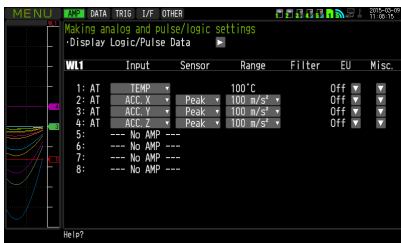

This is used to select the input conditions.

Setting	Description
Off	The input signal is not measured. The waveform and digital display also are not performed.
1ch TEMP	The temperature is measured with the fixed temperature sensor inside the sensor part.
2ch to 4ch ACC. X (Y, Z)	Measure XYZ direction of the acceleration inside the sensor part. * 2ch: X-axis, 3ch: Y-axis, 4ch: Z-axis direction
5ch to 8ch No AMP	Because the amplifier cannot be installed, the "No AMP" is displayed.

**(1)-18 Sensor setting**

This is used to select the data processing method of the acceleration sensor.

Setting	Description	
1ch	None	
2ch to 4ch	Peak	The maximum value of the data is displayed.
	Ave.	The mean value is displayed.
	RMS	The root mean square value is displayed.

**(1)-19 Range setting**

This is used to select the range to be measured. 1ch is used for temperature only, 2ch to 4ch are used for acceleration range.

Setting	Description
1ch	100°C fixed range
2ch to 4ch	2, 5, 10G; 20, 50, 100m/s <sup>2</sup>

**(1)-20 EU setting**

The offset of temperature can be adjusted. It is converted into the unit of acceleration.

In the case of Temperature, perform operations of “EU Function, Meas. Value, EU Output Value, and Reads the current temperature measurement value” in “(1)-5 EU (Scaling settings)” in “3.4 Setting Menus”.

In the case of Acceleration, refer to “<Setting example: For voltage input>”.

**(1)-21 Other setting**

The following settings can be performed.

The zero adjustment is a function to adjust the current static acceleration value to zero level. Make sure to firmly mount the sensor beforehand.


Setting	Description
Annotation text string	Set the annotation (comment) displayed in the CH.
Program Inter-CH calculation	Set the contents of Program Inter-CH calculation Four arithmetic operations (addition (+), subtraction (-), multiplication (x), division (÷)) can be used for the Program Inter-CH calculation
Span setting	Set the upper and lower limits of the span which the waveform is displayed.
Waveform color setting	0 to 31 for each of red, green, blue (RGB)
Thickness setting	1 to 8 dots
Trace	This is used to set the waveform display.
Perform Auto Zero ADJ.	The current input voltage (acceleration value) is calculated as a zero point voltage value (acceleration value). Automatic adjustable voltage range is within ±10% of set range.
Reset Auto Zero ADJ.	Reset the zero point voltage value (acceleration value). * When the temperature is set, this function is not available.
Set Zero Point as:	The zero point voltage value (acceleration value) is displayed. * When the temperature is set, this function is not available.

**4ch Voltage / Temperature Terminal (GS-4VT: optional) setting**

Performs the setting related to the input of 4ch voltage / temperature terminal.

The Setting screen is displayed at the end of the group by connecting the 4ch voltage / temperature terminal and turning On the GL840's power.

**(1)-22 Input setting**

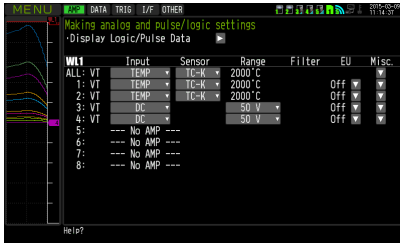

This is used to select the input conditions.

Setting	Description
1ch to 4ch Off	The input signal is not measured. The waveform and digital display also are not performed.
DC	Used to measure the direct-current voltage.
TEMP	Used to measure the temperature.
5ch to 8ch No AMP	Because the amplifier cannot be installed, the “No AMP” is displayed.

**(1)-23 Sensor setting**

This is used to select the sensor type to be used.

Setting	Description
TC-K	Set when the thermocouple to be connected is K-type.
TC-T	Set when the thermocouple to be connected is T-type

**(1)-24 Range setting**

Setting	Description
TEMP	2000°C fixed range
DC	20, 50, 100, 200, 500mV; 1, 2, 5, 10, 20, 50V; 1-5V

**(1)-25 EU setting**

This is used to unit-convert the measurement signal.


Refer to “EU Function, Meas. Value, EU Output Value, and Reads the current temperature measurement value” in “(1)-5 EU (Scaling settings)” in “3.4 Setting Menus”. In the case of Voltage, refer to “<Setting example: For voltage input>”.

**(1)-26 Other setting**

Annotation text, Inter-CH calculation, span, line width, trace, and zero point, etc. can be set.

Refer to “(1)-6 Misc.” in “3.4 Setting Menus”.

**(1)-27 Logic / Pulse setting**

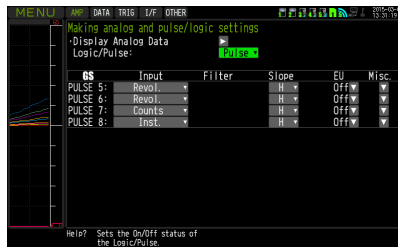

This is used to perform the setting related to the digital input to the GL840.

Refer to “(1)-7 Logic/Pulse” in “3.4 Setting Menus”.

However, for Group settings, LOGIC5 to LOGIC8 and PULSE5 to PULSE8 are displayed.

**CAUTION**

When the pulse is measured by the GL100-WL or GS sensor, the pulse measurement is executed in GL100-WL or GS sensor side.

The fastest sampling speed of the GL100-WL and GS sensor is 500 ms.


When the sampling speed of the GL840 is faster than 500 ms, there is a possibility that the error between the value captured in 500 ms by the GL100-WL and GS sensor and the pulse captured by the GL840 may occur, in order to execute the calculation processing within the sampling interval of GL840.

**4ch Thermistor Terminal (GS-4TSR: optional) setting**

Performs the setting related to the input of 4ch thermistor terminal.

The Setting screen is displayed at the end of the group by connecting the 4ch thermistor terminal and turning On the GL840’s power.

**(1)-28 Input setting**

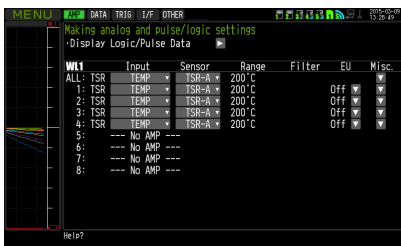

This is used to select the input conditions.

Setting	Description
1ch to 4ch Off	The input signal is not measured. The waveform and digital display also are not performed.
TEMP	Used to measure the temperature.
5ch to 8ch No AMP	Because the amplifier cannot be installed, the “No AMP” is displayed.

**(1)-29 Sensor setting**

This is used to select the sensor type to be used.

Setting	Description
TSR-A	Set when the thermistor is GS-103AT-4P.
TSR-J	Set when the thermistor is GS-103JT-4P.

**(1)-30 Range setting**

The temperature range is fixed at 200°C.

**(1)-31 EU setting**

This is used to unit-convert the measurement signal.


Refer to “EU Function, Meas. Value, EU Output Value, and Reads the current temperature measurement value” in “(1)-5 EU (Scaling settings)” in “3.4 Setting Menu”.

**(1)-32 Other settings**

Annotation text, Inter-CH calculation, span, line width, and trace, etc. can be set.

Refer to “(1)-6 Misc.” in “3.4 Setting Menu”.

**(1)-33 Logic / Pulse setting**

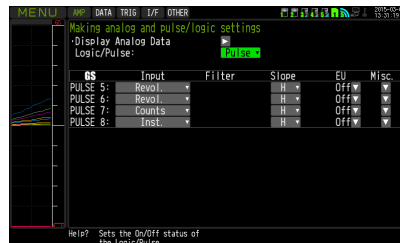

This is used to perform the setting related to the digital input to the GL840.

Refer to “(1)-7 Logic/Pulse” in “3.4 Setting Menu”.

However, for Group settings, LOGIC5 to LOGIC8 and PULSE5 to PULSE8 are displayed.

**CAUTION**

When the pulse is measured by the GL100-WL or GS sensor, the pulse measurement is executed in GL100-WL or GS sensor side.

The fastest sampling speed of the GL100-WL and GS sensor is 500 ms.

When the sampling speed of the GL840 is faster than 500 ms, there is a possibility that the error between the value captured in 500 ms by the GL100-WL and GS sensor and the pulse captured by the GL840 may occur, in order to execute the calculation processing within the sampling interval of GL840.




**Illuminance / Ultraviolet Sensor (GS-LXUV: optional) setting**

Performs the setting related to the input to the illumination / ultraviolet sensor.

The Setting screen is displayed at the end of the group by connecting the illumination / ultraviolet sensor and turning On the GL840's power.

**(1)-34 Input setting**

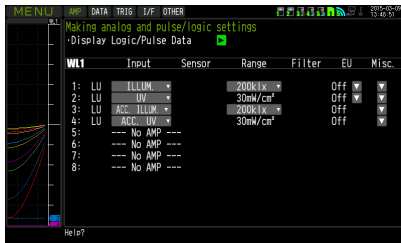

This is used to select the input conditions.

Setting	Description												
Off	The input signal is not measured. The waveform and digital display also are not performed.												
1ch ILLUM.	Used to measure the illuminance												
2ch UV	Used to measure the ultraviolet.												
3ch ACC. ILLUM.	Used to measure the accumulated illuminance.												
4ch ACC. UV.	Used to measure the accumulated ultraviolet.												
5ch to 8ch No AMP	When connecting the two GS series and terminal / addapter using a branch adapter for GS, the following combination is displayed. <table border="1" style="margin: 10px auto;"> <thead> <tr> <th>Combination</th> <th>CH1 to 4</th> <th>CH5 to 8</th> </tr> </thead> <tbody> <tr> <td>TH+LXUV</td> <td>TH</td> <td>LXUV</td> </tr> <tr> <td>TH+CO2</td> <td>TH</td> <td>CO2</td> </tr> <tr> <td>LXUV+CO2</td> <td>LXUV</td> <td>CO2</td> </tr> </tbody> </table> Symbols in the table are as follows: TH: Temperature and humidity sensor LXUV: Illumination / ultraviolet sensor CO2: CO2 sensor	Combination	CH1 to 4	CH5 to 8	TH+LXUV	TH	LXUV	TH+CO2	TH	CO2	LXUV+CO2	LXUV	CO2
Combination	CH1 to 4	CH5 to 8											
TH+LXUV	TH	LXUV											
TH+CO2	TH	CO2											
LXUV+CO2	LXUV	CO2											

**(1)-35 Range setting**

This is used to select the illuminance range to be measured. The ultraviolet and accumulated ultraviolet ranges are fixed.

Setting	Description
ILLUM.	2000, 20000lx, 200klx (operates in conjunction with 3ch)
UV	30mW/cm² fixed range
ACC. ILLUM.	2000, 20000lx, 200klx (operates in conjunction with 1ch)
ACC. UV.	30mW/cm² fixed range

**(1)-36 EU setting**

The unit of Illumination/ultraviolet is converted.

Refer to “(1)-5 EU (Scaling settings)” in “3.4 Setting Menus”.

There is no “EU Function” for accumulated illuminance and accumulated ultraviolet.

**CHECKPOINT**

Even if the scaling setting is applied to the original measured value of CH, the accumulated illuminance is not reflected in the accumulated illuminance CH.

**(1)-37 Other setting**

The following settings can be performed.


Setting	Description
Annotation text string	Set the annotation (comment) displayed in the CH.
Program Inter-CH calculation	Set the contents of Program Inter-CH calculation. Four arithmetic operations (addition (+), subtraction (-), multiplication (x), division (÷)) can be used for the Program Inter-CH calculation. * For details, refer to "<Inter-CH Op Settings>" in "(1)-6 Misc." in "3.4 Setting Menu".
Span setting	Set the upper and lower limits of the span which the waveform is displayed.
Waveform color setting	0 to 31 for each of red, green, blue (RGB)
Thickness setting	1 to 8 dots
Trace	This is used to set the waveform display.
Auto zero adjustment	The current input value is calculated as a zero point.
Zero adjustment reset	Reset the zero point.
[Zero point voltage value]	Display the zero point.

**CO2 sensor (GS-CO2: optional) setting**

Performs the setting related to the connection of CO2 sensor.

The Setting screen is displayed at the end of the group by connecting the CO2 sensor and turning On the GL840's power.

**(1)-38 Input setting**

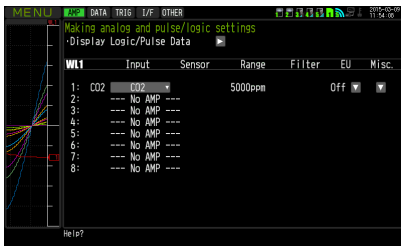

This is used to select the input conditions.

Setting	Description												
Off	The input signal is not measured. The waveform and digital display also are not performed.												
1ch CO2	Used to measure the CO2.												
2ch to 4ch No AMP	Used to measure the ultraviolet.												
5ch to 8ch No AMP	When connecting the two GS series and terminal / addapter using a branch adapter for GS, the following combination is displayed. <table border="1" style="margin-left: 20px;"> <thead> <tr> <th>Combination</th> <th>CH1 to 4</th> <th>CH5 to 8</th> </tr> </thead> <tbody> <tr> <td>TH+LXUV</td> <td>TH</td> <td>LXUV</td> </tr> <tr> <td>TH+CO2</td> <td>TH</td> <td>CO2</td> </tr> <tr> <td>LXUV+CO2</td> <td>LXUV</td> <td>CO2</td> </tr> </tbody> </table> <p>Symbols in the table are as follows:</p> <ul style="list-style-type: none"> <li>• TH: Temperature and humidity sensor</li> <li>• LXUV: Illumination / ultraviolet sensor</li> <li>• CO2: CO2 sensor</li> </ul>	Combination	CH1 to 4	CH5 to 8	TH+LXUV	TH	LXUV	TH+CO2	TH	CO2	LXUV+CO2	LXUV	CO2
Combination	CH1 to 4	CH5 to 8											
TH+LXUV	TH	LXUV											
TH+CO2	TH	CO2											
LXUV+CO2	LXUV	CO2											

**(1)-39 Range setting**

The CO2 range is fixed.

Setting	Description
CO2	5000ppm fixed range

**(1)-40 EU setting**

This is used to unit-convert the measurement signal.

Refer to “(1)-5 EU (Scaling settings)” in “3.4 Setting Menus”.

**(1)-41 Other settings**

The following settings can be performed.


Setting	Description
Annotation text string	Set the annotation (comment) displayed in the CH.
Program Inter-CH calculation	Set the contents of Program Inter-CH calculation. Four arithmetic operations (addition (+), subtraction (-), multiplication (x), division (÷)) can be used for the Program Inter-CH calculation. * For details, refer to “<Inter-CH Op Settings>” in “(1)-6 Misc.” in “3.4 Setting Menus”.
Span setting	Set the upper and lower limits of the span which the waveform is displayed.
Waveform color setting	0 to 31 for each of red, green, blue (RGB)
Amplitude Setting	1 to 8 dots
Trace	This is used to set the waveform display.
CO2 calibration	Set the CO2 calibration. In this calibration, the minimum value within a certain period of time based on the reference value should be corrected. This is useful in the environment CO2 concentration is low.

**Adapter for AC current sensor (GS-DPA-AC: optional) setting**

Performs the setting related to the input of adapter for AC current sensor.

The Setting screen is displayed at the end of the group by connecting the adapter for AC current sensor and turning On the GL840's power.

**(1)-42 Input setting**

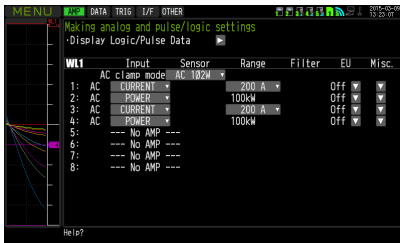

This is used to select the AC clamp mode.

Setting	Description
AC 1P2W	Set when measured with the single-phase 2-wire. * Power = Measured current x Voltage x Power factor
AC 1P3W	Set when measured with the single-phase 3-wire. * Power = (Measured current (ch1) x Measured current (ch2) x Voltage x Power factor
AC 3P3W	Set when measured with the triple-phase 3-wire. * Power = ((Measured current (ch1) + Measured current (ch2)) ÷ 2) x Voltage x√3 x Power factor

This is used to select the input conditions.

Setting	Description	
Off	The input signal is not measured. The waveform and digital display also are not performed.	
1ch Current	Used to select the CH1 current.	
2ch Power	CH1 power is displayed. The range is linked to the current.	Settable only when measured with the single-phase 2-wire. Off when measured with the single-phase 3-wire and 3-phase 3-wire.
ACC. POWER	CH1 accumulated power is displayed. The range is linked to the current.	
3ch Current	Used to select the CH2 current.	
4ch Power	CH2 power is displayed. The range is linked to the current.	
ACC. POWER	CH2 accumulated power is displayed. The range is linked to the current.	
5ch to 8ch No AMP	Because the amplifier cannot be installed, the "No AMP" is displayed.	

**(1)-43 Range setting**

Select the range of the current (power) to measure.

Setting	Description
Current	50, 100, 200A
Power	(20, 50, 100kW) It is linked to the current range.

**(1)-44 EU setting**

This is used to unit-convert the measurement signal.

Refer to "<Setting example: For voltage input>" in "(1)-5 EU (Scaling settings)" in "3.4 Setting Menus".

**CHECKPOINT**

Even if the scaling setting is applied to the original measured value of CH, the accumulated power is not reflected in the accumulated power CH.

**(1)-45 Other setting**

The following settings can be performed.

Setting	Description
Annotation text string	Set the annotation (comment) displayed in the CH.
Program Inter-CH calculation	Set the contents of Program Inter-CH calculation. Four arithmetic operations (addition (+), subtraction (-), multiplication (x), division (÷)) can be used for the Program Inter-CH calculation. * For details, refer to "<Inter-CH Op Settings>" in "(1)-6 Misc." in "3.4 Setting Menus".
Span setting	Set the upper and lower limits of the span which the waveform is displayed.
Waveform color setting	0 to 31 for each of red, green, blue (RGB)
Amplitude Setting	1 to 8 dots
Trace	This is used to set the waveform display.
Voltage value (Power only)	Set the measurement voltage value to calculate the power within the range of 90 to 264V.
Power factor (Power only)	Set the power factor to calculate the power within the range of 0.30 to 1.00.
Auto zero adjustment	The current input current value is calculated as a zero point current value. Automatic adjustable current range is within $\pm 10\%$ of set range.
Zero adjustment reset	Reset the zero point current value. * This function is not applied to power measurement.
[Zero point voltage value]	Display the zero point current value. * This function is not applied to power measurement.

**Branch adapter for GS (GS-DPA: optional) setting**

When the branch adapter for GS is used, the composite measurements with combination of three ways can be performed.

Combined GS sensor list	
Temperature and humidity sensor (GS-TH)	Illumination / ultraviolet sensor (GS-LXUV)
Temperature and humidity sensor (GS-TH)	CO2 sensor (GS-CO2)
CO2 sensor (GS-CO2)	Illumination / ultraviolet sensor (GS-LXUV)

As an example, the setting screen of temperature or humidity sensor (GS-TH) and illumination / ultraviolet sensor (GS-LXUV) is displayed.

The setting screen is displayed by connecting temperature and humidity sensor (GS-TH) or illumination / ultraviolet sensor (GS-LXUV) to the branch adapter for GS and turning On the power.

**(1)-46 Input setting**



This is used to select the input conditions.

When the two types of sensors are connected, the information that can be input to the 1ch to 4ch and 5ch to 8ch is displayed.

In this GL840, 1ch to 4ch correspond to the temperature and humidity sensor and 5ch to 8ch correspond to the illumination / ultraviolet sensor.

Setting	Description
Off	The input signal is not measured. The waveform and digital display also are not performed.
1ch TEMP	Used to measure the temperature.
2ch RH	Used to measure the humidity.
3ch DEW	Used to measure the dew-point temperature.
4ch ACC. TEMP	Used to measure the accumulated temperature.
5ch ILLUM	Used to measure the illuminance.
6ch UV	Used to measure the ultraviolet.
7ch ACC. ILLUM	Used to measure the accumulated illuminance.
8ch ACC. UV	Used to measure the accumulated ultraviolet.

The following shows the CH allocation when connecting a plurality of sensors.

For the settings for sensor, refer to "Optional \*\*\*\*\* sensor setting" described above.

\* The \*\*\*\*\* symbols indicate the abbreviation of name (model).

Combination	CH1 to 4	CH5 to 8
Temperature and humidity sensor (GS-TH) + Illumination / ultraviolet sensor (GS-LXUV)	TH (GS-TH)	LXUV (GS-LXUV)
Temperature and humidity sensor (GS-TH) + CO2 sensor (GS-CO2)	TH (GS-TH)	CO2 (GS-CO2)
CO2 sensor (GS-CO2) + Illumination / ultraviolet sensor (GS-LXUV)	LXUV (GS-LXUV)	CO2 (GS-CO2)

### Wireless sensor (GL100-WL: optional) setting

The wireless sensor (GL100-WL) can be connected as a remote unit by installing the optional wireless LAN unit (B-568). For wireless LAN setting method, refer to "3.4 Setting Menus" - "(4) Interface settings".


For the GS sensor and terminal/adaptor connecting to the GL100-WL, refer to the GL100 User's Manual.

For the operations after connecting the wireless unit, refer to "\*\*\*\*\* setting" described above.

\* The \*\*\*\*\* symbols indicate the abbreviation of name (model).

When the wireless sensor is connected, the following screen (example of GL100-WL+GS-LXUV) is displayed.

Switch the display by operating the [CH GROUP] key, and when the CH display part is indicated to the WL, it is switched to the "Wireless sensor setting" screen".

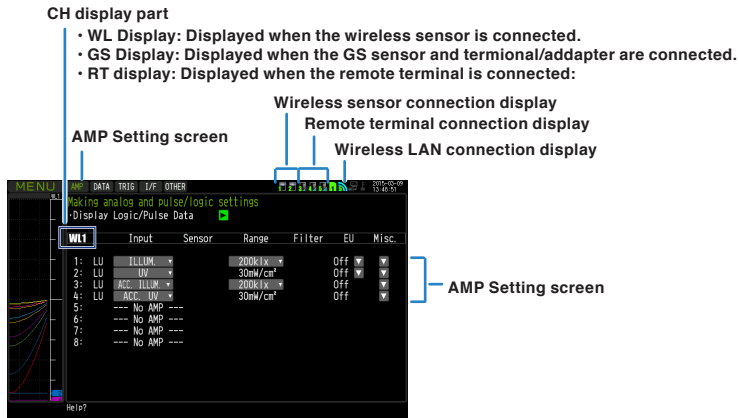

### CAUTION

The wireless sensor settings cannot be made unless the wireless sensor connection is not enabled.


Make sure that the wireless sensor to be used is in wireless LAN state by connecting the GS sensor and terminal/adaptor.

The number of units that can be connected to the GL840 as a remote unit is up to 5 including the wireless sensors (GL100-WL) and the remote terminals (GLT400).

<Description of wireless sensor display>

(1) Wireless sensor display

The 1-1 to 1-8 of WL indicates the wireless sensor No. 1. Because five wireless sensors can be connected, the fifth sensors are indicated as the 5-1 to 5-8.

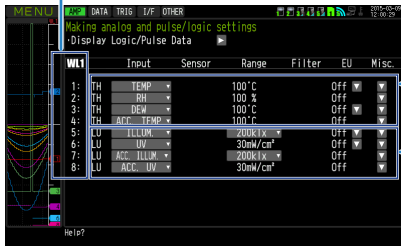

(2) Measurement module 1

The information of GS sensor and terminal/addapter connected to the GL100-WL is displayed.

(3) Measurement module 2

The information when two types of GS sensor and terminal/addapter are connected with GL100-WL+GS-DPA (Branch adapter for GS) is displayed.

The information of the Setting screen varies depending on the type of GS sensor and terminal/addapter to be connected.

**CAUTION**

When the data of GL100-WL, Standard terminal and Withstand high-voltage high-precision terminal/ Screwless terminal are captured, a few of the data may be delayed by reason of the data processing of the GL100-WL and the connected GL sensor and terminal/addapter.

Please consider the data lag when the data is tried to confirm and replay.

**CHECKPOINT**

For details on the wireless connection between the GL840 and GL100-WL, refer to “(4) Interface settings” in “3.4 Setting Menus” and the example of operating procedures.



## Remote terminal (GLT400: option) settings


The remote terminal (GLT400: option) as a remote unit can be connected to the GL840 (base unit). The connection method is as follows.

1. Wired LAN connection: The GLT400 can be connected as a remote unit by connecting the GL840 and GLT400 with a crossover LAN cable or by connecting with a LAN cable via a network hub.
2. Wireless LAN connection: The GLT400 can be connected as a remote unit by installing the optional wireless LAN unit (B-568) to each of the GL840 and GLT400. For wireless LAN connection, the number of units that can be mix-connected is up to 5 including the wireless sensors (GL100).

For wireless LAN setting methods, refer to "3.4 Setting Menus" - "(4) Interface settings".

For remote terminal (GLT400) setting method, refer to the GLT400 User's Manual.

If you switch the display with the "CH GROUP" key and the CH display is "RT", the remote terminal screen is displayed. The remote terminal settings are the same as the GL840 AMP settings, so refer to "3.4 Setting Menus" - "(1) AMP setting" for the setting method.

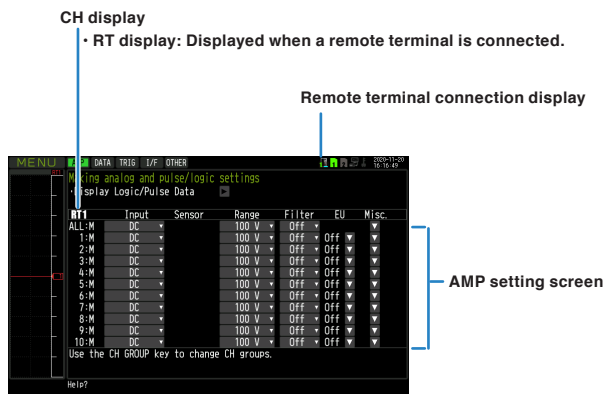

### CAUTION

If the network connection of the remote terminal is unstable, data capturing may not be performed correctly, so use it in a stable communication environment.

Because the data capturing of the GL840 and the data capturing of the remote terminal may be delayed, you should consider the data delay.

The logic/pulse input of the remote terminal (GLT400) is not available.

The alarm output of the remote terminal (GLT400) can be set for Alarm 1 only. In addition, a delay of several seconds from 500 ms may occur.

When the remote terminal (GLT400) is connected and the sampling interval is set to faster than 500 ms, the waveform display of the remote terminal is thinned out to 500 ms at the shortest.

When the remote terminal (GLT400) is connected and the sampling interval is set faster than 500ms, the waveform display of the remote terminal is thinned out to 500 ms. When the level trigger is set by the signal of the remote terminal (GLT400), the trigger is detected at the fastest interval of 500 ms.

A large deviation may occur when the sampling interval is slow, because the timing of the sampling interval is different between the GL840 and the remote terminal (GLT400).


If communication delay or disconnection to the remote terminal (GLT400) occurs due to the communication environment, the reconnect will be tried. Therefore, the sampling timing after reconnection may be shifted from the previous one.

### CHECKPOINT

For the connection settings between the GL840 and the remote terminal (GLT400), refer to "3.4 Setting Menus" - "(4) Interface settings" and the example of the operation procedure.

(2) DATA settings

This is used to specify capture-related items and calculations.

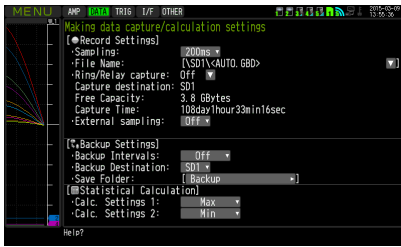

Setting	Selections available
Sampling	10, 20, 50, 100, 125, 200, 250, 500ms, 1, 2, 5, 10, 20, 30s, 1, 2, 5, 10, 20, 30min, 1h * Available sampling intervals vary depending on the input settings and the number of channels to be used. * Refer to "(2)-1 Sampling Interval" for details.
Capture destination	SD1 (Internal memory), SD2 (SD CARD)
File Name	* See the description of a captured data file name given below.
Ring/Relay capture	Off, Ring, Relay
Ring capture	Number of recording points
Relay capture	Relay capacity (100MB to 2000MB), Relay time ( 1 hour 00 minute to 24 hours 00 minutes )
External sampling	Off, On
AC Line Filter	Off, On
Backup	Backup Intervals: Off, 1, 2, 6, 12, 24 hours, or Off, By file * Refer to "(4)- 5 OTHER settings" to select each file.
Backup Destination	SD1 (Internal memory), SD2 (SD CARD), FTP
Save Folder	Folder name
Calc. Settings 1	Off, Average, Max, Min, Peak, RMS
Calc. Settings 2	Off, Average, Max, Min, Peak, RMS

Captured data file name

Setting	Selections available
Folder (File)	Capture destination : SD1 (Internal memory), SD2 (SD CARD) Folder : Text input (if the naming method is Auto) File : Text input (if the naming method is Arbitrary or Sequential number)
Name Type	Auto, Arbitrary, Sequential number
File Type	Binary (GBD), Text (CSV)

**(2)-1 Sampling interval**

This is used to set the sampling interval for data capture. The table below shows the number of measuring channels and sampling interval values that can be set. If data fluctuate due to noise, set the sampling interval to a value which enables the digital filter function.

Number of Measuring Channels*1	Allowed Sampling Interval	Sampling Interval which enables Digital Filter
1CH	10ms or slower *2	50ms or slower
2CH	20ms or slower *2	125ms or slower
3CH to 5CH	50ms or slower *2	250ms or slower
6CH to 10CH	100ms or slower	500ms or slower
11CH to 20CH	200ms or slower	1s or slower
21CH to 50CH	500ms or slower	2s or slower
51CH to 100CH	1s or slower	5s or slower
101CH to 200CH	2s or slower	10s or slower

\*1: Number of Measuring Channels is number of channels for which the input settings of the standard terminal, withstand high-voltage high-precision terminal or screwless terminal/remote terminal are set to other than OFF. (CHs in GS sensor and terminal/addapter and wireless sensor are not included.)  
 \*2: When the temperature setting is performed in 10, 20, or 50 ms sampling interval, the data capture cannot be performed.  
 \*3: The number of measuring channels of the sampling interval at which the digital filter is effective when the remote terminal is connected is the number of channels for each of the GL840 and the remote terminal.

**CAUTION**

- A large deviation may occur when the sampling interval is slow, because the timing of the sampling interval is different between the GL840 and the remote terminal (GLT400).
- If communication delay or disconnection to the remote terminal (GLT400) occurs due to the communication environment, the reconnect will be tried. Therefore, the sampling timing after reconnection may be shifted from the previous one.
- The maximum communication interval between the GL840 and the remote terminal (GLT400) is 500 ms. It may be longer than 500ms depending on the communication environment. Therefore, when the trigger or alarm function is used, the determination may be delayed.

**CHECKPOINT**

When using the digital filter, the AC power frequency to be used must be set accurately. Please perform the setting accurately in reference to “(5)-8 AC Line cycle”.

**(2)-2 Captured data file name**

This is used to select the name of a file or folder to which you want to save capture data.



Setting	Description
(1) File Type	Sets the file format used to save data. GBD : Creating a data file in Graphtec's proprietary binary format * It is not possible to change the data. CSV : Creating a data file in text format
(2) Name Type	Sets how a data file should be named. Auto : Automatically supplies the file name. Example: 20050101-123456_UG.GBD Number part : File creation date * The file is created on January 1, 2005, 12:34:56 in this example. Arbitrary : Data is captured to a file with an entered file name. Sequential number : A file is created with an arbitrary file name that has been entered, followed by a sequential number. Example: If the file name is "TEST" First file : TEST_SER1.GBD Second file : TEST_SER2.GBD Third file : TEST_SER3.GBD  * If the same file name already exists, _CP* is added to the end of a file name to prevent overwriting. The asterisk (*) represents a number. Example: TEST_CP1.GBD
(3) Folder	Specifies the file in the capture destination (or save destination. For details, refer to "(7) File box".
(4) File	Specifies the file in the capture destination (or save destination. For details, refer to "(7) File box".

**CAUTION**


The file should be saved in the folder you created. When the data files are continued to be saved in the root folder, the data file may be not saved regardless of the memory remaining capacity due to the limitations of the file system.

**CHECKPOINT**

Changing the sampling interval, capture destination, number of measuring channels (number of channels for which the input is not Off), etc. will change the Capture Space and Capture Time on the screen.

If you find that the measurement time exceeds the Capture Time, take one of the following measures:

- Change the sampling interval.
- Delete unnecessary files.
- In the case of SD CARD2, change to the SD CARD with more free space.

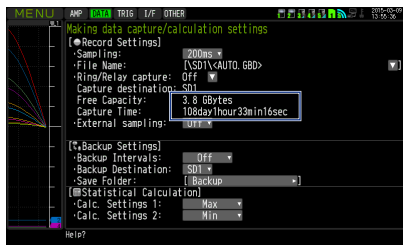

**Capture Space** : Displays the amount of memory space available for data capture.

**Capture Time** : Displays time available for at the SD CARD.

\* The Capture Time is calculated for 2 GB at the maximum.

The Capture Time more than 366 days is displayed as 366 day over.


When Relay capture is ON, the time that can be captured in the free space is displayed.

**(2)-3 Ring capture setting**


● Ring Capture Function



Setting	Description
(1) Ring/Relay capture	Set the capture function. Off: The capture function is disabled. Ring: Perform the ring recording. (For details, refer to the following figure.) Relay: Data is captured consecutively for each file of up to 2000MB continuously.
(2) Ring Capt. Pts.	To use the ring recording function, specify the number of data points per one file. (For details, refer to the following figure.)
(3) Ring Capt. Time	Display the measurement time that can be recorded in one file when the ring recording function is enabled (On).

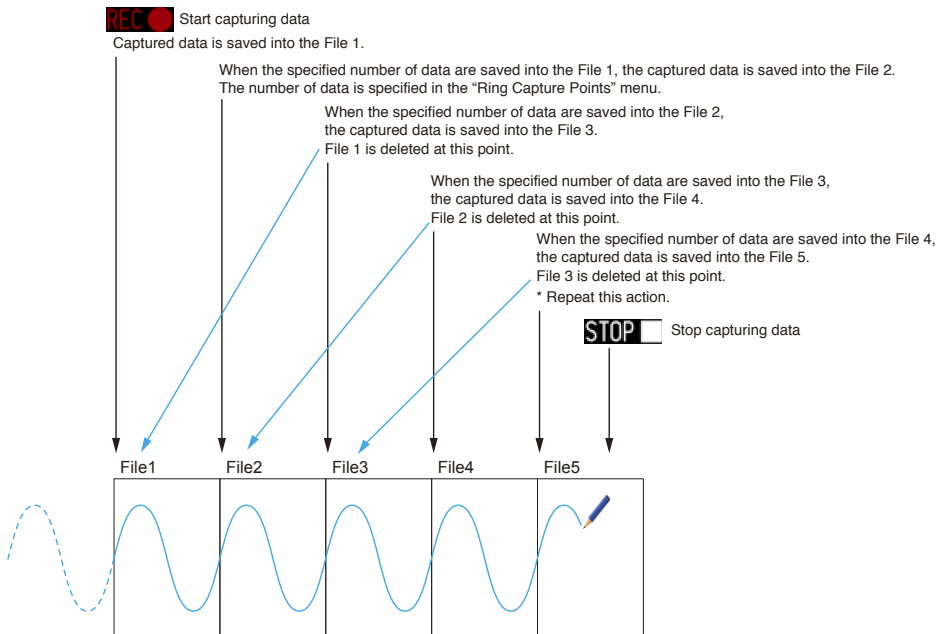

When capturing is stopped at the STOP point in the above, the File4 and the File 5 are remained. These files are consolidated into one file and it is saved. Then the ring capture is completed.

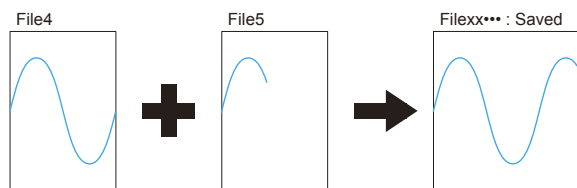

**CHECKPOINT**

Twice as many files as the Number of Ring Capture Points will be created at the maximum.

● Relay Capture Function



Setting	Description
(1) Ring/Relay capture	Set the capturing function. off: Capturing function is not used. Ring: Ring capture is performed. (For details, refer to the figure below.) Relay: Data is captured consecutively for each file of up to 2000 MB continuously. When the ring and relay functions are enabled, available sampling interval starts from 100 ms when the CSV file format is set.
(2) Relay mode	Set the mode for performing the relay processing. Time: After the set time has elapsed, the relay processing is performed. Capacity: When the file has reached the set file size, relay processing is performed.
(3) Relay time	Set the relay time when relay mode is set to "Time". 1 hour 00 minutes to 24 hours 00 minutes
(4) Relay capacity	Set the file size when relay mode is set to "Capacity". 100MB to 2000MB * Estimated time for capturing with the set file size is displayed as "Relay time".

The captured data is continuously captured by files separated for each set relay without losing data. (Maximum capture capacity in one file is 2000MB.)

**(2)-4 External sampling**

This is used to enable or disable external sampling.


When the external sampling function is enabled, data is captured at the shortest intervals and retained temporarily. This retained data is updated at the shortest intervals.

On receiving an external sampling pulse, the retained data is written to the internal memory (SD1) or SD CARD (SD2).

(See the following figure.)

Therefore, the maximum error in time between the actually captured data and the external sampling pulse is the same as the shortest interval.

\* Refer to the next section, "(2)-5 AC line filter" for details on the shortest interval.

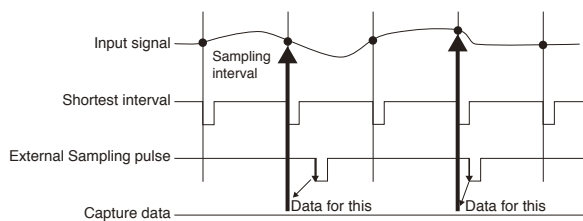

**CHECKPOINT**

- If the external sampling function is ON, the external input cannot be selected for the trigger setting. If the external input has already been set, the trigger will be set to Off.
- When you measure signals with high noise levels, set the AC line filter described in the next section to ON.
- The external sampling function cannot be enabled when a remote terminal is connected.

**(2)-5 AC line filter**

This is used to enable or disable or disables the AC line filter while external sampling is enabled. Enable this setting to enable the digital filter. When you use external sampling and measure signals with high noise levels, set the AC line filter to ON. The shortest interval is displayed under the settings.




The shortest interval is as shown in the following table:

Number of Measuring Channels *1	Shortest interval	
	AC line filter (Digital filter) OFF	AC line filter (Digital filter) ON
1CH	10ms	200ms
2CH	20ms	500ms
3CH to 5CH	50ms	1s
6CH to 10CH	100ms	1s
11CH to 20CH	200ms	2s
21CH to 50CH	500ms	5s
51CH to 100CH	1s	10s
101CH to 200CH	2s	20s

\*1 Number of Measuring Channels is number of channels for which the input settings of the standard terminal, withstand high-voltage high-precision terminal or screwless terminal/remote terminal are set to other than OFF. (The channels of the GS sensor and terminal/adaptor as well as wireless sensor and remote terminal are not included.)

**(2)-6 Backup setting**

The GL840 has a function that periodically backs up captured data. (See the figure below)

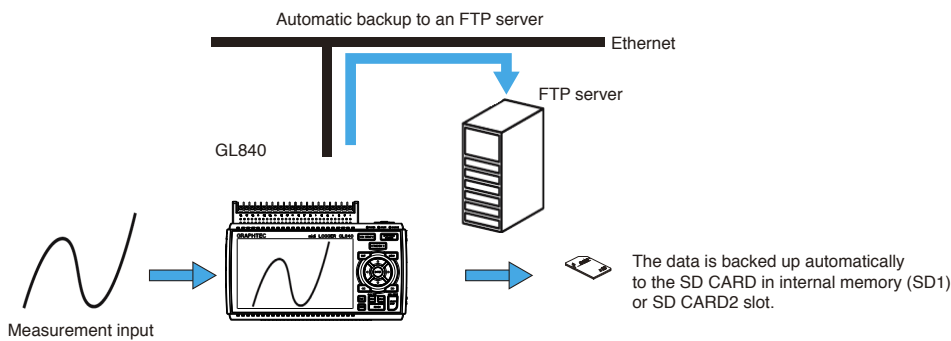

Setting	Description
Backup interval	Sets the backup interval for captured data. Off, 1, 2, 6, 12, 24 hours, or Off, By file * Refer to "(4)- 5 OTHER settings" to select each file.

Setting	Description
Backup destination	Sets the backup destination for captured data.
	SD1 (Internal memory) Backs up the captured data to the internal memory (SD1). This is used only when recording to the SD CARD 2.
	SD2 (SD CARD2) Back up the data to the SD CARD in the SD CARD2 (SD2) slot. This is used only when recording to the internal memory (SD1).
	FTP Backs up data to an FTP server on the network. *The FTP server settings must be made using the FILE menu. (Refer to "(4)-5 OTHER settings".)
Save folder	Sets the folder for saving a backup file. * This must be a folder on the internal memory (SD1), SD CARD (SD2) or an FTP server. Example: \GRAPHTEC\20091205

**CHECKPOINT**

If ring capture is On, the backup function is not available.

It takes a time for writing after recoding was stopped when many channels are recoding, when interval sampling is fast, when backup interval is long, because the backup data size becomes large.

Sometimes the backup will be failed when the backup data is saved to the FTP server via the wireless LAN by condition of Wifi communication.

When the sampling interval is faster than the 100 ms the backup of CSV format is not able to perform.

It cannot be used in 10 ms, 20 ms, and 50 ms.


When the capture in CSV format and backup function are enabled, SD CARD replacement and relay capture are not possible.

When the external sampling function is ON the backup function is not able to perform.

The media cannot be replaced when saving to an FTP server.

When using trigger repeat, the repeat interval may become long because the next capturing is started after the backup writing is completed.

If the backup fails during capturing, the "backup failure" is displayed as a status message. In that case, the status message will be cleared by executing the error clear.

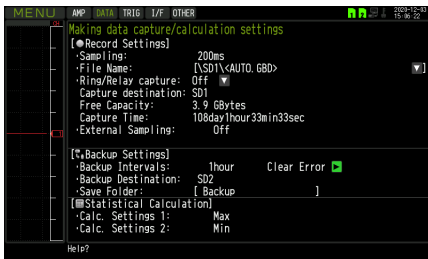



**(2)-7 Statistical calculation setting**

Two types of calculations can be performed on all channels.  
This section explains setting what to do in statistical calculation.


Setting	Description
Off	Calculation is not performed.
Average	Displays the simple average value of the data during data capture.
Max	Displays the maximum value of the data during data capture.
Min	Displays the minimum value of the data during data capture.
Peak	Displays the peak value of the data during data capture.
RMS	Displays the RMS value of the data during data capture. The calculation formula is as follows: $\text{R.M.S} = \sqrt{\sum D^2/n}$ * D: data. n: number of data

**CHECKPOINT**

- Calculation results are displayed in the Digital + Statistical Calculation Display screen. Switch to the digital screen with the "DISP" key, and set to All Mode with the ◀◀, ▶▶ keys. For details on the "All Mode", refer to "(8) FAST FORWARD key" in "3.2 Key Operation".
- At power-on, calculation is started; The result is cleared when you press the [QUIT] key or the [START/STOP] key to start measurement.
- For the statistical calculation result of the remote terminal (GLT400) when the sampling interval is slower than 500 ms, a value delayed by several samplings may be displayed.
- For the statistical calculation result of the remote terminal (GLT400) when the sampling interval is faster than 500 ms, because the calculation is based on the latest data received every fastest 500 ms, the data may be shifted for a few seconds from 500 ms depending on the communication environment.

**(3) TRIG settings**

This is used to specify trigger conditions and alarms.

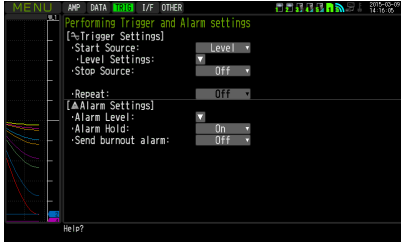

Setting		Selections available
Start Side Source Settings		Off, Level, Alarm, External Input, Time, Day, Duration
[Level]	Mode	Analog: Off, ↑ H, ↓ L, Window In, Window Out Logic: Off, ↑ H, ↓ L Pulse: Off, ↑ H, ↓ L, Window In, Window Out
	Combination	Level OR, Level AND, Edge OR, Edge AND
	Level	Set numeric value
[Alarm]	Alarm port number	1, 2, 3, 4
[Date]	Date	From 2005.1.1 to 2035.12.31
	Time	From 0:0:0 to 23:59:59
[Weekly]	Day of week	Off or On setting for each of Sunday through Saturday
	Time	From 0:0:0 to 23:59:59
[Duration]		From 0:0:1 to 9999:59:59
Stop Side Source Settings		Off, Level, Alarm, External Input, Time, Day, Duration
[Level]	Mode	Analog: Off, ↑ H, ↓ L, Window In, Window Out Logic: Off, ↑ H, ↓ L Pulse: Off, ↑ H, ↓ L, Window In, Window Out
	Combination	Level OR, Level AND, Edge OR, Edge AND
	Level	Set numeric value
[Alarm]	Alarm port number	1, 2, 3, 4
[Date]	Date	From 2005.1.1 to 2035.12.31
	Time	From 0:0:0 to 23:59:59
[Weekly]	Day of week	Off or On setting for each of Sunday through Saturday
	Time	From 0:0:0 to 23:59:59
[Duration]		From 0:0:1 to 9999:59:59
Repeated Capturing		Off, On
Alarm Level Settings	Mode	Analog: Off, ↑ H, ↓ L, Window In, Window Out Logic: Off, ↑ H, ↓ L Pulse: Off, ↑ H, ↓ L, Window In, Window Out
	Level	Set numeric value
	Output	1, 2, 3, 4
	Detection Method	Level, Edge
	Alarm Hold	Held or Not held
	Send Burnout Alarm	Sent or not sent

**(3)-1 Start side source setting**

This is used to specify trigger conditions to start data capture.

Selection item	Description
Off	Starts capturing data unconditionally when you press the [Start/Stop] key.
Level	Starts capturing data when a specified level is reached. -> When Level is selected, the condition for each channel must be set. Refer to "Trigger Level Settings/Alarm Level Settings" described below.
Alarm	Starts capturing data when an alarm is generated in the specified alarm port.
External Input	Starts capturing data when an input signal is received from an external trigger terminal. * A trigger is established at a transition from 5 V (open) to 0 V (shorted to the ground). A falling edge operation occurs.
Date	Starts capturing data when specified date and time arrives.
Weekly	Starts capturing data at the specified time on days of week for which On is set. Example: On is set for Mon, Tue, Wed, Thu, and Fri, Off is set for Sun and Sat, and 9:00 is set as the time. Starts capturing data at 9:00 on weekdays. Does not start capturing data on Sat and Sun.
Duration	Starts capturing data when a specified length of time elapses.

**(3)-2 Stop side source setting**

This is used to specify trigger conditions to stop data capture.

Selection item	Description
Off	Stops capturing data unconditionally when you press the [Start/Stop] key.
Level	Stops capturing data when a specified level is reached. -> When Level is selected, the condition for each channel must be set. Refer to "Trigger Level Settings/Alarm Level Settings" described below.
Alarm	Stops capturing data when an alarm is generated in the specified alarm port.
External Input	Stops capturing data when an input signal is received from an external trigger terminal. * A trigger is established at a transition from 5 V (open) to 0 V (shorted to the ground). A falling edge operation occurs.
Date	Stops capturing data when specified date and time arrives.
Weekly	Stops capturing data at the specified time on days of week for which On is set. Example: On is set for Mon, Tue, Wed, Thu, and Fri, Off is set for Sun and Sat, and 9:00 is set as the time. Starts capturing data at 9:00 on weekdays. Does not stop capturing data on Sat and Sun.
Duration	Stops capturing data when a specified length of time elapses.

**CHECKPOINT** 

- When External Input is used as the trigger source, no stop trigger is accepted for 50 ms after capture is started.
- When the start trigger is External Input, data is captured at sampling intervals (fixed to 30 seconds if they are more than 30 seconds) and retained temporarily.  
This retained data is refreshed at sampling intervals (fixed to 30 seconds if they are more than 30 seconds).  
Since the external trigger input operation conducts detection at 10 ms intervals asynchronously from sampling, the retained data becomes the first point when an external trigger is detected. Starting from this point, data is captured at sampling intervals.
- This retained data is refreshed at sampling intervals (fixed to 30 seconds if they are more than 30 seconds).
- When a trigger with a level value is set on the remote terminal (GLT400), it is detected at the fastest 500 ms interval. If the sampling interval faster than 500ms is set, triggers and alarms may not be detected depending on the signal cycle. The detection may be further delayed depending on the communication environment.
- If the remote terminal (GLT400) is enabled, the stop is delayed because it stops after receiving the data from the remote terminal at the time when the stop trigger is detected.

**(3)-3 Repeated capturing**

This is used to enable or disable the repeat function to conduct repeated capturing.

Selection item	Description
Off	The repeat function is disabled.
On	The repeat function is enabled. After one capture is ended, the next capture is started (If the start side source setting is not Off, the GL840 waits for a trigger). Also, when setting to the specified time, the date and time must be set. However, when the repeat function is enabled (On), the specified time is changed to the time display. It occurs the trigger once a day.

**(3)-4 Alarm level settings**

This is used to set alarm generation conditions, output destination, etc.

When the conditions specified here are met, the alarm output terminal (for which an output destination number must be specified for each channel) outputs an alarm.

For the CH condition settings, refer to “Trigger Level Settings/Alarm Level Settings” described below.

**(3)-5 Alarm hold**


If "Held" is selected here, once the established conditions have been met the alarm status will not be cleared, regardless of whether or not the conditions continue to be met (Pressing the [CURSOR] key will clear it.) (Press the [CURSOR] key to cancel it).

**(3)-6 Send burnout alarm**


The alarm is output from the alarm output terminal by selecting “Sent” when the burnout occurs (Refer to “(5)-6 Burnout) described below.

**Trigger level settings/Alarm level settings**



Specifies detailed conditions for each channel when the start and stop side source settings are Level.  
The configuration of the level trigger is as shown in the figure below.

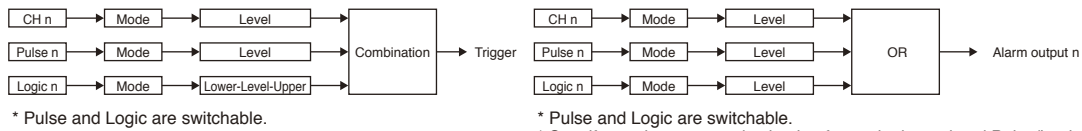


\* Pulse and Logic are switchable.  
\* Specify an alarm output destination for each channel and Pulse/Logic.  
Each of the alarms is ORed at the output destination.  
Example: If you specify 1 as the output destination of 1CH and 2CH and 2 as that of 3CH and 4CH, Alarm Output 1 occurs when one of 1CH and 2CH meets the conditions, and Alarm Output 2 occurs when one of 3CH and 4CH meets the conditions.

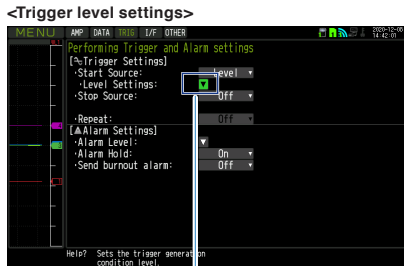

Place the cursor here and press the [ENTER] key to open the following setting screen.

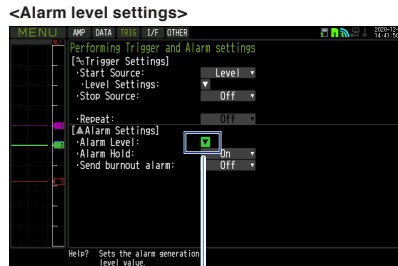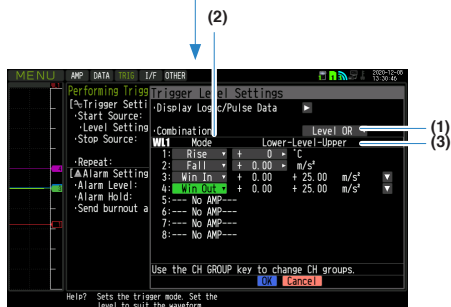

Place the cursor here and press the [ENTER] key to open the following setting screen.

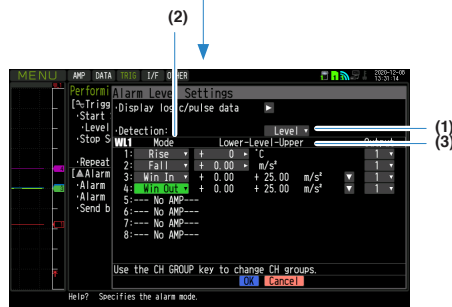

Setting	Description
(1) Combination <For Trigger>	<p>Sets a combination of trigger conditions set for each channel.</p> <p>Level OR : Starts (stops) capturing data when at least one of the specified trigger conditions is met. Each condition is Level operation.</p> <p>Level AND : Starts (stops) capturing data when all of the specified trigger conditions are met. Each condition is Level operation.</p> <p>Edge OR : Starts (stops) capturing data when at least one of the specified trigger conditions is met. Each condition is Edge operation.</p> <p>Edge AND : Starts (stops) capturing data when all of the specified trigger conditions are met. Each condition is Edge operation.</p>
Detection method <For Alarm>	<p>Level: Each condition is Level operation.</p> <p>Edge: Each condition is Edge operation.</p>
(2) Mode	<p>Sets a trigger comparison mode for each channel.</p> <p>Off : Disables triggers for the setting channel.</p> <p>↑ H (rising) : A trigger is generated when the input signal exceeds the specified level.</p> <p>↓ L (falling) : A trigger is generated when the input signal falls below the specified level.</p> <p>Win In : Used to specify the upper and lower limits for each channel. When the input signal level is (or comes) between these limits, a trigger is generated. * This setting is not available for Logic CH.</p> <p>Win Out : Used to specify the upper and lower limits for each channel. When the input signal level is (or goes) out of these limits, a trigger is generated. * This setting is not available for Logic CH.</p>
(3) Level	<p>Sets a trigger comparison level. If the mode is ↑ H (rising) or ↓ L (falling), set one comparison level.</p> <p>If the mode is Win In or Win Out, set two comparison levels.</p>



### Level and Edge operations

In the Level operation, a trigger is assumed to be generated if the trigger conditions are met when the [START] key is pressed.

In the Edge operation, a trigger is not assumed to be generated even if the trigger conditions are met when the [START] key is pressed.


A trigger is assumed to be generated when the trigger conditions, after not being met, are met again.

\* A trigger is still assumed to be generated even if the trigger conditions are met once in the Edge operation and then are no longer met.

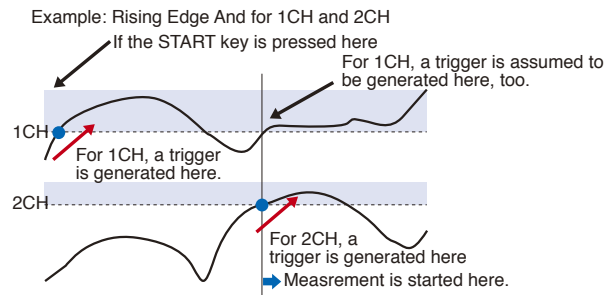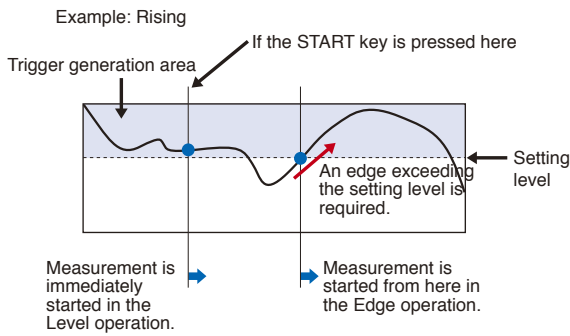


### Trigger and Alarm operations


Rising : A trigger/alarm is generated when the input signal is higher than the specified level.

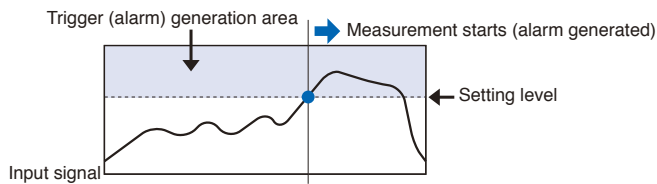


Falling : A trigger/alarm is generated when the input signal is lower than the specified level.

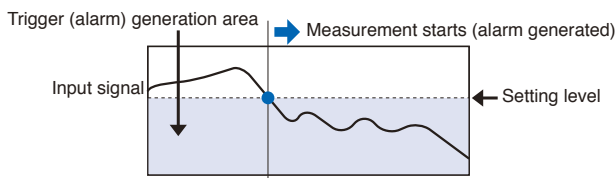

Win In : Used to specify the upper and lower limits for each channel. When the input signal level comes (or is) between these limits, a trigger/alarm is generated.

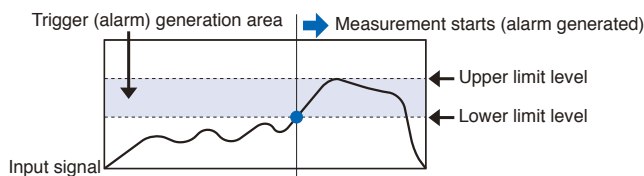


Win Out : Used to specify the upper and lower limits for each channel. When the input signal level goes (or is) out of these limits, a trigger/alarm is generated.

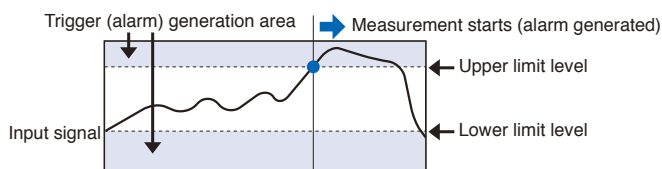


### Dead zones of trigger and alarm levels

Trigger and alarm levels are provided with a dead zone in order to prevent false detection due to noise. The following figure shows the dead zone.

<Mode: Rising>

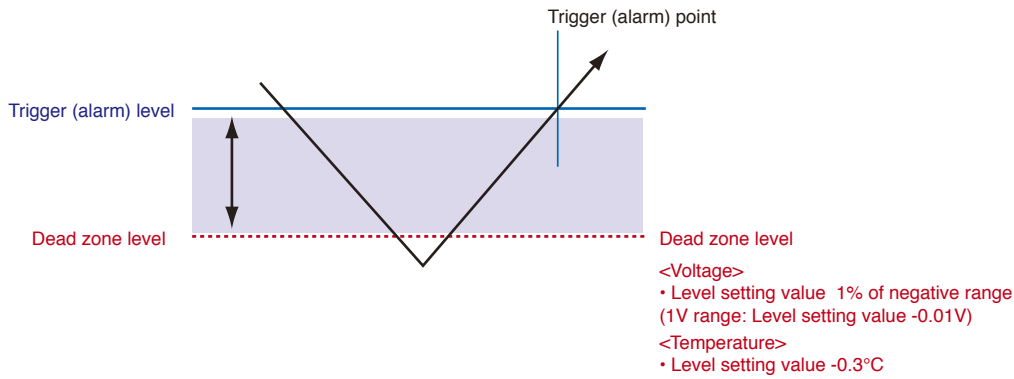

<Mode: Falling>

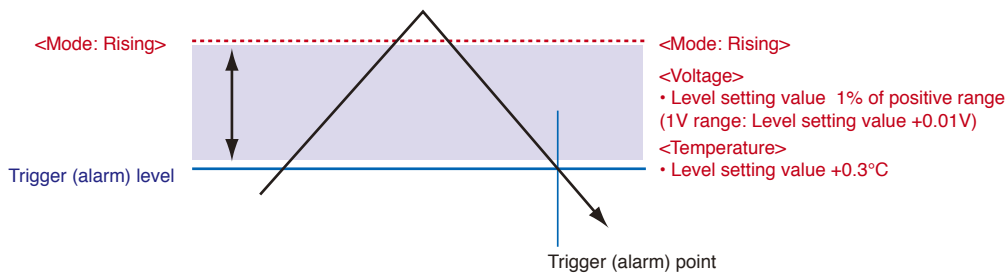

#### CHECKPOINT

- The upper limit values within the mode range and the lower limit values out of the mode range are dead zone level as well.
- When the detected alarm drops below the dead zone level, it is cleared. (When the alarm is not retained)  
 <Example> When measuring temperature, the level released after the alarm generated is shown below.
  - Rising setting: Setting value -0.3°C
  - Falling setting: Setting value +0.3°C
- In the case of pulse, dead zone is not provided.

(4) Interface settings

This menu is used to specify conditions for PC connection.



Selection item		Description			
USB settings	USB ID	0 to 9			
Wired LAN settings	IP address automatic acquisition				
	On, Off				
	IP address				
	0 to 255. 0 to 255. 0 to 255. 0 to 255 (Only when not using IP address automatic acquisition)				
	Detailed Settings	IP address	0 to 255. 0 to 255. 0 to 255. 0 to 255 (Only when not using IP address automatic acquisition)		
		Subnet mask	0 to 255. 0 to 255. 0 to 255. 0 to 255 (Only when not using IP address automatic acquisition)		
		Port number	1024 to 65535		
		Gateway	0 to 255. 0 to 255. 0 to 255. 0 to 255 (Only when not using IP address automatic acquisition)		
		Disconnect when GLT400 is not communicating			
		DNS address	0 to 255. 0 to 255. 0 to 255. 0 to 255 (Only when not using IP address automatic acquisition)		
Apply settings		▶ Execute			
Apply settings					
▶ Execute					
Wireless LAN settings * When optionally connecting to wireless LAN	Wireless LAN				
	Off, station, access point				
	Restart wireless LAN				
	▶ Execute				
	Detailed Settings	Wireless LAN			
		Off, station, access point			
		Easy Connection (WPS)	WPS system	Push button method / PIN method	
			Station settings	SSID search	Enter the character string
				SSID input	▶ Execute
				Encryption method	None, WEP, WPA-PSK/WPA2-PSK
				WEB key, Password	Enter the character string
		11n		Off, On	
		Apply settings	▶ Execute		
		Other Settings (When setting the station)	Connect/Disconnect	▶ Execute	
	ST-IP settings		Refer to Wired LAN Settings		
	Access point settings		SSID search	Enter the character string	
		Encryption method	None, WEP, WPA-PSK/WPA2-PSK		
		WEB key, Password	Enter the character string		
		Channel	1ch to 13ch		
		Stealth	Off, On		
11n		Off, On			
Apply settings		▶ Execute			
Other Settings (When setting the access point)	AP-IP settings				
	Refer to Wired LAN Settings				



Selection item		Description			
Remote unit settings	Connection I/F		Wired LAN, Wireless LAN		
	Connection remote unit		Wireless sensor, remote terminal, list		
	When setting wireless LAN	Number		WL: 1 to 5 RT: 1 to 5	
		Connect		Off, On	
		Unit name, identification name		Enter the character string	
		Search	Search execute	▶ Execute	
			List of wireless sensors, List of remote terminals	Displays the wireless sensors or the remote terminals found by search.	
		AMP1/2, Number of AMP terminals		Displays the set AMP information.	
	When making wired LAN settings	Number		RT: 1 to 5	
		Connect		Off, On	
		Identification name		Displays the set identification name.	
		Search	Search execute		▶ Execute
			Direct input	Connection destination	Identification name, IP address, domain name
				Identification name	Enter the character string
				IP address	0 to 255. 0 to 255. 0 to 255. 0 to 255
				Port number	0 to 65535
				Domain name	Enter the character string
		List of remote terminals		Displays the remote terminals found by search.	
	Number of AMP terminals		Displays the set number of amplifier terminals.		
	List	Number		RT: 1 to 5	
Connect		Off, On			
AMP		Displays the set AMP.			
Other settings	New Line Code		CR+LF, LE, CR		
	FTP client settings	FTP server		Enter the character string	
		User name		Enter the character string	
		Password		Enter the character string	
		Port number		0 to 65535 (default 21)	
		PASV mode		Off, On	
		Encryption method		Off, Explicit, Implicit	
		FTP server connection test		▶ Execute	
		Captured file when backup is successful		Leave, Delete	
	FTP server settings	Anonymous connection		Disable, Enable	
		User name		Enter the character string	
		Password		Enter the character string	
		Port number		0 to 65535 (default 21)	
	WEB server settings	Port number		0 to 65535 (default 80)	
		Basic authentication		Off, On	
		User name		Enter the character string	
Password		Enter the character string			

Selection item			Description	
Email settings	Email send setting	Destination setting	To	Enter up to 63-character string
			CC1 to CC3	Enter up to 63-character string
			Subject	Enter up to 63-character string
		Notification settings	Alarm	Off, On
			Low Battery	Off, On
			Low communication strength	Off, Onn
	Free space in SD CARD		Off, On	
	Periodic notification		Off, 1 hour, 2 hours, 3 hours, 6 hours, 12 hours, specified time	
	Email account settings	User name		Enter up to 63-character string
		Password		Enter up to 31-character string
		mail address		Enter up to 63-character string
	Email sending server settings	Sending (SMTP) server name		Enter up to 63-character string
		SMTP port number		0 to 65535
		Time zone		UTC-12:00 to UTC+13:00
		SMTP settings	SMTP authentication method	Off, POP before SMTP, SMTP-AUTH
			SMTP-AUTH	Off, PLAIN, LOGIN, CRAM-MD5
			Same as POP3	No, Yes
			SMTP user name (user ID)	Enter up to 63-character string
			SMTP password	Enter up to 31-character string
		SMTP encryption	Off, StartTLS, Over SSL	
		Test sending	▶ Execute	
	Email receiving server settings	Receiving (POP3) server name		Enter up to 63-character string
		POP3 port number		0 to 65535
		Time zone		UTC-12:00 to UTC+13:00
		POP3 settings	Inquiry interval	1 to 1440 [minutes]
			Inquiry after sending an email	Normal, Per minute
	POP3 encryption		Off, StartTLS, Over SSL	
	Immediately receiving	▶ Execute		
	Identification name			Enter up to 15-character string
	Network time setting			
	Network time			Off, On
	NTP server			Enter the character string
	Time zone			-12: 00 to +13:00 (in 1-hour unit)
Sync time			0:00 to 23:59	
Sync mode			Synchronize at once, Synchronize gradually	
Connection test			▶ Execute	

**(4)-1 USB settings**

Sets the USB ID number of GL840.

Specify a number from 0 to 9 (default value: 0).

To control more than one GL840 unit with one PC, assign a unique USB ID to each of them.

**(4)-2 Wired LAN settings**

This is the settings for connecting the GL840 to Ethernet unit.

Selection item	Description
Auto IP Address Acquisition	Set whether the IP address should be manually set or automatically acquired. * If auto acquisition is enabled, the auto acquisition operation (performed when the power is turned on or the settings are reflected) may take a few seconds to around one minute.
IP Address	Sets the IP address of the GL840. (0-255.0-255.0-255)
Subnet Mask	Sets the subnet mask of the GL840. (0-255.0-255.0-255)
Port Number	Sets the IP port number of the GL840 (1024-65535).
Gateway	Sets the gateway address of the GL840. (0-255.0-255.0-255)
DNS Address	Sets the DNS address of the GL840. (0-255.0-255.0-255)
Keep Alive	Used to set the function to detect the non-communication time and automatically disconnect the socket connection. For details, refer to "Keep Alive".
Reflect Settings	Reflects the TCP-IP settings immediately (without turning off and on the power). * Connections are forcibly disconnected when the settings are reflected. * Reflecting the settings may take a few seconds to around one minute.

 **CAUTION**

- If the Automatic IP Address Acquisition fails, the manual settings for IP address, etc. are used. In this case, the settings including the IP address may not be consistent with your network. Disable the Automatic IP Address Acquisition and make the settings one by one.
- After you changed the Wired LAN settings, turn off and on the power or apply the settings. (The connection will be forcibly disconnected).
- When you want to use the Automatic IP Address Acquisition function, the DHCP server must be operating separately within the searchable network.

**Keep Alive**

Detects no-communication time and automatically disconnects the socket connection.


Selection item	Description
OFF	Disconnection is not performed.
10 seconds to 1 hour	Disconnects the socket connection if no-communication status continues longer than the specified time. Generate some kind of communication within the setting time. Note that, while the supplied application software is used, no-communication status continues during the replay of captured data. (This function is effective only for the command port. The Web server function or FTP server function is not influenced.)

**(4)-3 Wireless LAN setting**


This is used to set the conditions when connecting the GL840 to wireless LAN.

This screen is not displayed unless the wireless unit is installed to the GL840.

Station settings

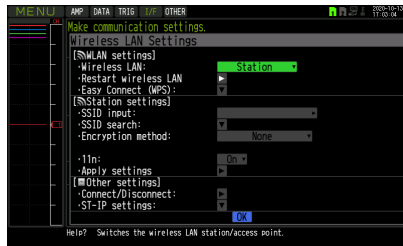

Access point settings

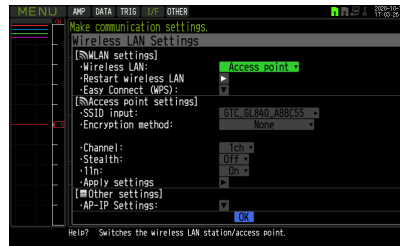

(1) Perform the wireless LAN settings.

Selection item	Description
Off	The wireless LAN is not used.
Station	The GL840 is set to wireless LAN remote unit.
Access point	The GL840 is set to wireless LAN base unit.

(2) Restart the wireless LAN.

When restarting after selecting the wireless LAN, the information of the station or the access point is displayed.

It takes some time to display.

**CHECKPOINT**

• Access point (operated as base unit)

This is the settings for connecting between the GL840 and the separately sold Petit LOGGER GL100-WL (up to 5 units) via wireless LAN.

• Station (operated as remote unit)

This is the settings for controlling from a PC and transferring data to a PC after connecting to the separately sold wireless LAN base unit.

• After executing "Wireless LAN restart" once, the wireless LAN cannot be selected. When the wireless LAN selection is changed, the restart is enabled.

• "Disconnect" → "Wireless LAN restarting" → "TCP-IP restarting" are executed.

## **Easy Connection (WPS)**

Easy Connection (WPS) is the standards for easily making wireless LAN unit settings. It can be set by either the push button method or the PIN code method. The name of WPS may vary depending on the wireless LAN router on the market.

### **< Operation procedure >**

#### **Push button method**

The connection is completed by selecting "WPS execute" in the "Easy Connection (WPS)" screen and pressing the button corresponding to the WPS of the wireless LAN unit to be connected.

#### **PIN code method**

- When GL840 is set to access point:

Obtain the PIN code of the wireless LAN remote unit and enter it in the "PIN code" field on the "Easy connection (WPS)" screen and then select "WPS execute".

- When GL840 is set to station:

Enter the PIN code of the wireless LAN base unit in the "PIN code" field on the "Easy connection (WPS)" screen and select "WPS execute".

## Station settings

When connecting to the commercially available wireless LAN base unit and controlling multiple GL840s from PC, the e-mail send/receive function of the GL840 and Internet connection are available. (The following conditions is required to use them.)

- PC connectable to Wireless LAN.
- Wireless LAN base unit (Wi-Fi-authenticated devices equipped with wireless LAN base unit functions)
- Internet connection environment when connecting to the Internet.  
(Internet provider's contracts and mobile carrier's contract, etc.)

Internet connection and e-mail send and receive environments when sending and receiving the e-mail.

(E-mail and Web mail must be able to send and receive in the SMTP and POP3 via the Internet provider.)

Each station function must be set when the GL840 operates as a remote unit.

When the station is selected in the wireless LAN settings and the wireless LAN is restarted, the following screen is displayed.



Selection item		Description
Station setting	SSID input	Perform the GL840 SSID (access point identification name) setting. Up to 32 characters of the alphanumeric characters and symbols can be entered.
	SSID search	The list of the wireless connections is displayed by searching the SSID. When the wireless connection is selected from the list, it is displayed in the SSID input.
	Encryption method	Perform the encryption setting. WEP: Set the WEP key to 10 digits alphanumeric characters and symbols for the WEP64 and to 26 digits alphanumeric characters for the WEP128. WPA-PSK/WPA2-PSK: Set the password in 8 to 63 alphanumeric characters and symbols.
	WEP key	This is displayed when the encryption was set. Perform the key setting.
	11n	Select whether or not to use the 11ch.
	Apply settings	Reflect the settings of the encryption method, WEP key, and password.
Other setting	Connect / Disconnect	Perform the connection or disconnection to/from the base unit.
	ST-IP settings	Perform the IP address automatic acquisition of the station or the IP address manual setting of the station. After setting, press the "Apply settings" (▼ Key) to restart. The setting is completed.

### <Operation procedure>

- (1) Select the station, and then execute the wireless LAN restart.

The "Wireless LAN restarting" is displayed and the restart is executed by the station setting.

- (2) Set the SSID.

Enter in accordance with the procedure of "(8) Character string input" described below.

Also, to enter the SSID, follow the procedure in "(8) Character string input". Also, after searching the SSID in the following (3), you can select it from the list.

(3) Search the SSID.

Press the ▼ key. The searched SSID list is displayed after searching the SSID.



In Step (2), when the SSID is selected from this list, the SSID will be automatically reflected.

(4) Set the encryption method.

WEP or WPA-PSK/WPA2-PSK settings can be performed. When this setting is selected, the “WEP key” is displayed. Enter in accordance with the procedure of "(8) Character string input" described below.

(5) Set the wireless standard 11n.

When the IEEE802.11n is used, set to "ON".

(6) When the above settings are finished, press the ► key to execute the "Apply settings".

The settings are saved.

(7) The wireless LAN is enabled by executing the “Connect/Disconnect” in the “Other settings”.



**Other settings when setting the station**

When connecting to the wireless LAN after setting the station, by pressing the [Connect/Disconnect] key, the “Restart TCP-IP” is displayed and then the connection is established.

To disconnect the wireless LAN during the connection, press the [Connect/Disconnect] key again.

When you want to change the connection conditions, perform the "ST-IP setting".

- When the “IP Addr Auto Acq.” is used, select the “On”.
- When the “IP Addr Auto Acq.” is not used, select the “Off” and then set the IP address, Subnet mask, and Port number, etc.


After the above setting, press the ► Key of "Apply settings" in the “ST-IP setting”. The “Restart TCP-IP” is displayed and the setting operation is completed.

## Access point setting

The GL840 can be connected to wireless sensor (GL100-WL) or remote terminal (GLT400).

In the access point setting, this function must be set when the GL840 operates as a base unit.

When selecting the wireless LAN as a station and then restarting the wireless LAN, the following screen is displayed.

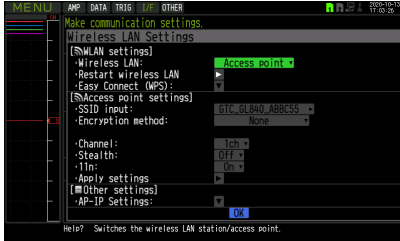

Selection item		Description
Access point setting	SSID input	Set the SSID (access point identification name) of the GL840. Up to 32 characters of the alphanumeric characters and symbols can be entered.
	Encryption method	Perform the encryption setting. WEP: Set the WEP key to 10 digits alphanumeric characters and symbols for the WEP64 and to 26 digits alphanumeric characters for the WEP128. WPA-PSK/WPA2-PSK: Set the password in 8 to 63 alphanumeric characters and symbols.
	WEP key	This is displayed when the encryption was set. Perform the key setting.
	Channel	Perform 1ch to 12ch settings.
	Stealth	Set the SSID concealment mode.
	11n	Select whether or not to use the 11n.
	Apply settings	Reflect the settings of the encryption method, WEP key, and password.
Other setting	AP-IP setting	Perform the TCP-IP setting. After setting, restart to reflect the settings.

### <Operation procedure>

#### (1) Set the SSID.

Enter in accordance with the procedure in "(8) Character string input" described below.

By default, the identification name automatically generated from the GL840 name is displayed.

#### (2) Set the encryption method.

WEP or WPA-PSK/WPA2-PSK settings can be performed.

When the WEP system is selected, the [WEP] key is displayed.

When the WPA-PSK/WPA2-PSK system is selected, the "Password" is displayed. Then, enter in accordance with the procedure in "(8) Character string input" described below.

#### (3) Set the wireless LAN channel to be used to one of 1ch to 12ch.

#### (4) Set the stealth.

This is used to set as so to not be able to search the SSID from the other terminal. Enter directly the SSID name to the device to be connected.

#### (5) Set the 11n.

When the IEEE802.11n is used, set to "ON".

Select the "Apply settings" with the ► key when the above settings are finished.


The "Wireless LAN restarting" message is displayed and the main unit is re-started to reflect the settings.



**(4)-4 Remote unit settings**

Make the settings for connecting the wireless sensor (GL100-WL) and the remote terminal (GLT400) as a remote unit of the GL840. Up to 5 remote units, including the wireless sensor (GL100-WL) and remote terminal (GLT400), can be connected.

The maximum number of channels on the remote terminal (GLT400) is 200 channels, including the number of analog channels on the GL840. Even if the channel inputs are switched to Off, the channels are included in the total number of channels.

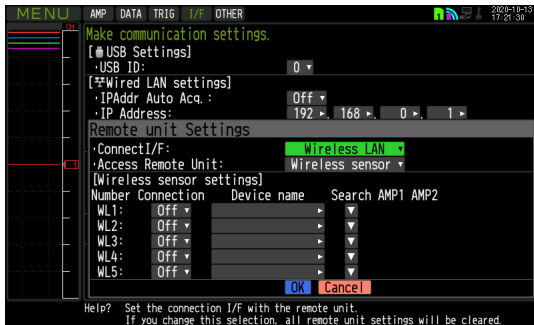

Selection item		Description
Connect I/F		Select the interface for connecting the remote unit. Wireless LAN: The wireless sensor (GL100-WL) and the remote terminal (GLT400) equipped with a wireless LAN unit can be connected. Wired LAN: Connect via the wired LAN. Only the remote terminal (GLT400) can be connected.
Access Remote Unit		Switch the connected remote unit display. Wireless sensor: Switches to the wireless sensor setting screen. Remote terminal: Switches to the remote terminal setting screen. List: Displays a list of both wireless sensors and remote terminals. Up to 5 wireless sensors (GL100-WL) and remote terminals (GLT400) can be connected in total.
Wireless sensor settings	Number	The wireless sensor can be connected to any number from WL1 to WL5.
	Connection	The wireless sensor is enabled by setting the connection to On with any number from WL1 to 5. Up to 5 wireless sensors and remote terminals can be set to On in total.
	Device name	If you know the unit name to be connected, you can set by directly entering it with a character string.
	Search	After searching for the connected wireless sensors, they are displayed in the wireless sensor list. Select the unit to connect from the displayed wireless sensors. Because the search is performed by broadcasting, the wireless sensors connected to networks beyond the segment cannot be searched.
	AMP1, AMP2	Displays the AMP information of the recognized wireless sensor.
Remote terminal settings	Number	The remote terminal can be connected to any number from RT1 to 5.
	Connection	The remote sensor is enabled by setting the connection to On with any number from RT1 to 5. Up to 5 remote terminals and wireless sensors can be set to On in total.
	Identification name	The identification name is displayed.
	Register	You can search for a connected remote terminal and register by directly entering the identification name, IP address, and domain name. Because the search is performed by broadcasting, the remote terminals connected to the network beyond the segment cannot be searched. To connect the remote terminal connected to the network beyond the segment, search by the IP address or domain name that you entered directly.
	AMP terminals	Displays the AMP information of the recognized remote terminal.
List display	Number, Device name, AMP	Displays a list of the connected wireless sensors and the remote terminals.

**CAUTION**

- When connecting the remote unit via wireless LAN, the wireless sensor cannot be connected unless the wireless LAN remote unit is connected to the wireless LAN base unit in advance.
- When connecting wirelessly, the performance may not be satisfied depending on the wireless environment. In that case, improve the wireless environment or make the settings to reduce the wireless load (reduce the number of channels, slow down the sampling interval, etc.).

<Example of operation procedure>: Example of wireless LAN connection to wireless sensor (GL100-WL)

The wireless connection method when setting the GL840 to "Access Point" and the GL100 to "Station" is described.


[WLAN setting]

- (1) Set the wireless LAN to "Access point".
- (2) Then, select the "Restart the wireless LAN".

When the  is displayed and the restart is completed, the following screen is displayed.



- (3) Set the SSID of the GL840.  
Enter the "GTC\_GL840\_01".  
For details on entering the characters, refer to "(8) Character string input".
- (4) Set the other items.  
Encryption method: None, Channel: 1ch, Stealth: Off, 11n: On
- (5) After setting the above items, be sure to select the "Apply settings" ("▶" key) to reflect them.  
The "Wireless LAN restart" is automatically executed and then the settings is reflected.
- (6) Make sure the IP address of wireless LAN. When the "AP-IP setting" is selected, the following dialog is displayed.

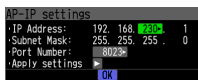


Set the segment of IP address and select the "Apply settings". The settings of subnet mask and port number other than the segment are fixed.

\* Do not set the same segment as the wired LAN set in the "I/F" MENU.

- (7) Then, set the [I/F] of the GL100-WL.

- Wireless LAN mode: Station
- DHCP: On
- SSID: GTC\_GL840\_01
- Security: Off

<Example of GL100-WL screen setting>

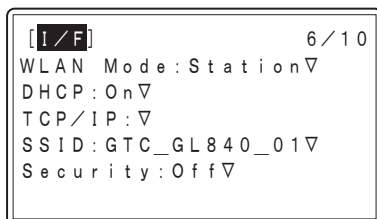

Set the GL100-WL settings in reference to GL100-WL User's Manual.


(8) Search for the sensors which connected in "Remote unit settings".

- Connection I/F: Wireless LAN
- Connection remote unit: Wireless sensor
- Connection: Set WL1 to On

After setting the above, search for WL1.

If the GL100-WL is found, the unit names that can be connected are displayed. If the wireless sensor list is not displayed, repeat until you find it.

\* Search may not be possible depending on the radio wave condition. If the LAN display of the GL100-WL is not displayed, check the power status and settings.

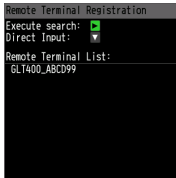


Then, when the unit name to be connected is selected from the displayed wireless sensor list, the unit name is automatically registered.



After checking the AMP1 (AMP2) in which the unit name and the contents of the connected GS sensor and terminal/adaptor are indicated, be sure to press "OK" to apply the settings.

After completing the settings, turn off the power of the GL840 and then turn on the power of the GL840. When the connection is completed, the following is displayed and the connection is completed.

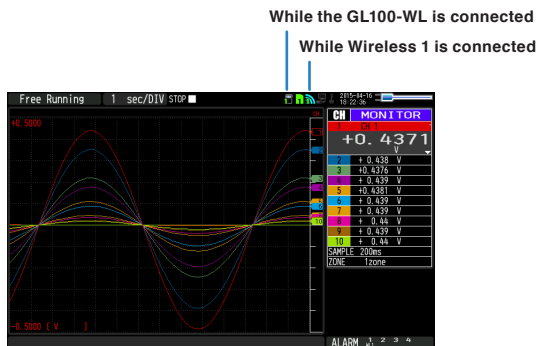

**CAUTION**

- Comparing data capture with GL100-WL and data capture with standard terminal or withstand high-voltage high-precision terminal, 2-3 data are delayed due to data processing of GL100-WL and connected GS sensor and terminal/adaptor.
- When checking or replaying the data, you should consider the data delay.

<Example of operation procedure>: Example of wired LAN connection to remote terminal (GLT400)

This section describes how to connect the GL840 and GLT400 via a wired LAN.

It is assumed that the GL840 and GLT400 are connected to the same network hub with a LAN cable in advance.

[Wired LAN settings]

(1) Set the IP address automatic acquisition to "Off".

(2) Set the IP address etc. as follows:

- IP address: 192.168.0.1
- Subnet mask: 255.255.255.0
- Port number: 8023
- Gateway: 0.0.0.0
- DNS address: 0.0.0.0
- Non-communication disconnection: Off


After setting, apply the settings.

(3) Then, make the GLT400 settings. Set the mode switch of GLT400 to "Remote" and then turn on the power of GLT400.

(4) Connect between the GLT400 and the PC with a USB cable and install "GLT400 Setting App" which is the setting software of GLT400. Use the GLT400 Setting App to set the following:

- IP address: 192.168.0.2
- Subnet mask: 255.255.255.0
- Port number: 8023
- Gateway: 0.0.0.0
- DNS address: 0.0.0.0

< Example of GLT400 Setting App setting >

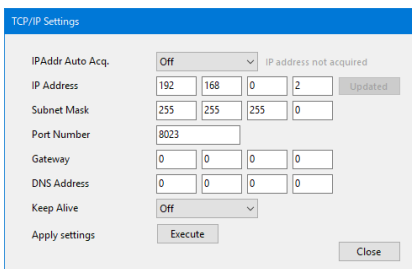

For the settings of GLT400 and GLT400 Setting App, refer to the GLT400 User's Manual.


(5) Search for the sensors which connected in "Remote unit settings".

- Connection I/F: Wired LAN
- Connection remote unit: Remote terminal
- Connection: Set RT1 to On


After setting the above, search for RT1.

If GLT400 is found, the unit names that can be connected are displayed. If the remote terminal list is not displayed, repeat until you find it.

\* If the list is not displayed, check the settings.

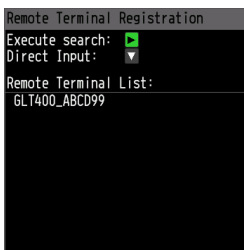


Then, when the unit name to be connected is selected from the displayed remote sensor list, the unit name is automatically registered.

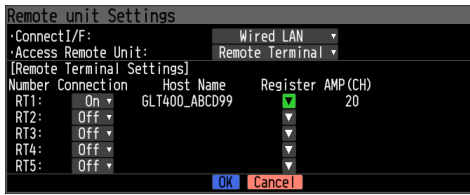

After confirming the unit name and the number of AMP terminals, press "OK" to apply the settings.

After completing the settings, turn off the power of the GL840 and then turn on the power of the GL840. When the connection is completed, the following is displayed and the connection is completed. While the GL840 is loading the GLT400 settings, the remote terminal icon shows the loading progress rate.

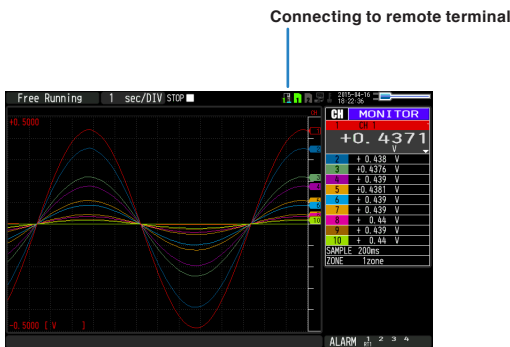

**CAUTION**

- Because the data capturing of the GL840 and the data capturing of the remote terminal (GLT400) may be delayed, when checking or replaying the data, you should consider the data delay.
- If the network connection of the remote terminal is unstable, the data capturing may not be performed correctly, so use it in a stable communication environment.
- When connecting to the GL840 as a remote terminal, the GLT400 logic pulse input is not available.
- When connecting to the GL840 as a remote terminal, only the Alarm 1 output of the GLT400 can be set.
- When outputting the alarm to the remote terminal, a delay of several seconds from 500 ms may occur.
- When the remote terminal is connected and the sampling interval is set faster than 500ms, the waveform display is thinned out.
- When connecting to a remote terminal, the trigger on the remote terminal side is checked at fastest intervals of 500ms, so the trigger detection may be delayed.

If the sampling interval faster than 500ms is set, triggers and alarms may not be detected depending on the signal cycle.

- If communication delay or disconnection to the remote terminal (GLT400) occurs due to the communication environment, the reconnect will be tried. Therefore, the sampling timing after reconnection may be shifted from the previous one.

The wireless sensor (GL100-WL) and the remote terminal (GLT400) can be connected up to 5 in total. You can check the connection state with the remote unit icon.



Device access display (when connecting to wireless LAN)  
When connecting to the wireless LAN with the remote unit, if the radio wave strength display of the base unit is set to the base unit, the number of the remote units (wireless sensor/remote terminal) connected to the GL840 is displayed.

Remote unit icon (wireless sensor/remote terminal)  
Displays when the GL100-WL and GLT400 are connected wirelessly.

**(4)-5 Other settings**

Set the network-related settings in the other settings.


**New Line code**


Specifies the line feed code.

Selection item	Description
CR+LF	Starts a new line with CR+LF code (default value).
LF	Starts a new line with LF code.
CR	Starts a new line with CR code.

**FTP client settings**

This is used to perform the FTP server setting of backup destination.

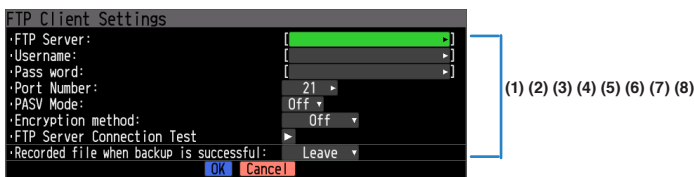

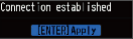	Description
(1) FTP Server	Enter the domain name or IP address of the FTP server. (Up to 127 characters)
(2) User Name	Enter the user name of the FTP account. (Up to 31 characters)
(3) Password	Enter the password of the FTP account. (Up to 31 characters)
(4) Port Number	Enter the port number used for FTP. (0 to 65535) Set the following according to the encryption method. Off: 21 Explicit: 21 Implicit: 990
(5) PASV Mode	Make the PASV mode setting. ON : Should be set for communication with an external FTP server in a firewall environment. OFF : Should be set for communication with an FTP server in a normal network environment.
(6) Encryption method	Data sent and received by FTP is encrypted. Off: Not encrypted Explicit: Explicit mode. Encryption starts after the connection. Implicit: Implicit mode. Encrypted communication is performed from the time of connection.
(7) FTP Server Connection Test	Press right ► key to execute (Performs connection test to the FTP server.) When the connection test is performed, a message is displayed. If connection cannot be established, check the settings and perform the connection test again. * If the connection test is passed, the following message is displayed. 
(8) Recorded file when backup is successful	When backup to the FTP server is successful, you should be selected "Leave" or "Delete" the captured file. By setting to "Delete", the SD CARD can have enough capacity and can capture for a long time.

### FTP server settings

Make the settings to make the GL840 function as an FTP server.



	Description
(1) Anonymous connection	Set whether to allow Anonymous connection. Disable: Do not allow Anonymous connection. Enable: Allows Anonymous connection.
(2) User Name	Enter the user name of the FTP account. (Up to 31 characters) The default is "GL840".
(3) Password	Enter the password of the FTP account. (Up to 31 characters) The default is "GL840".
(4) Port Number	Enter the port number of a port to be used for FTP. It is normally 21. (0 to 65535)

### WEB server settings

Make the settings to make the GL840 function as a WEB server.



	Description
(1) Port Number	Enter the port number used for the WEB. Usually, this number is 80. (65535)
(2) Basic authentication	When connecting to the WEB server, it can be restricted by user name and password. Off: Basic authentication is disabled. On: Basic authentication is enabled and restricts access by username and password.
(3) User Name	Enter the user name of the basic authentication. (Up to 31 characters) The default is "GL840".
(4) Password	Enter the password of the basic authentication. (Up to 31 characters) The default is "GL840".


## E-mail settings

Perform the settings to send the e-mail from the GL840.

The e-mail with the notification setting information (Alarm, Low Battery, Low communication strength, Free space in the internal memory (SD1) or SD CARD (SD2) (only when data capturing) is sent. In addition, when setting to the Periodic notification, the e-mail will be sent in the set time.




### (1) <Outgoing mail settings>

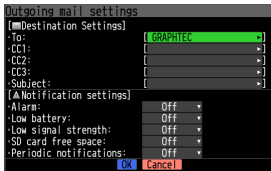

Selection item		Description	
Outgoing mail settings	E-mail address settings	TO	Set the e-mail address of the e-mail destination. (Up to 63 characters)
		CC1 to CC3	Up to three e-mail addresses can be set as CC (carbon copy). (Up to 63 characters)
		Subject	The e-mail subject can be registered in the character string entering. (Up to 63 characters)
	Notification settings	Alarm	When it is set to On, the occurrence of alarm is notified.
		Low battery	When it is set to On, the low battery information is notified.
		Low signal strength	When it is set to On, the low signal strength information is notified.
		SD card free space	When setting to On, free space information of the capturing destination memory is notified.
	Periodic notifications	Set the time to send the notification setting information with the e-mail to any address.	


### (2) <E-mail account setting>

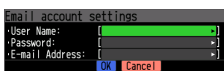

Selection item		Description
E-mail account setting	User name	Set the e-mail account. (Up to 63 characters)
	Password	Set the e-mail password. (Up to 31 characters)
	E-mail address	Set the e-mail address of the sender. (Up to 63 characters)




(3) <Outgoing mail server settings>

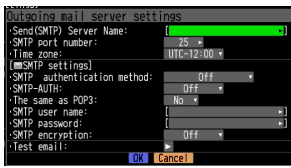

Selection item		Description	
Outgoing mail server settings	Sending (SMTP) server name		
	SMTP port number		
	Time zone		
	SMTP settings	SMTP authentication method	Set the SMTP authentication method from Off, POP before SMTP, or SMTP-AUTH.
		SMTP-AUTH	Set the SMTP-AUTH authentication method from Off, PLAIN, LOGIN, or CRAM-MD5.
		The same as POP3	Set the SMTP authentication information to the same settings as POP3.
		SMTP user name	Set the user name for the SMTP authentication. (Up to 63 characters)
		SMTP password	Set the password for the SMTP authentication. (Up to 31 characters)
	SMTP encryption	Set the SMTP encryption from Off, StartTLS, and Over SSL.	
Test email		Run the e-mail sending test.	

(4) <Incoming mail server settings>

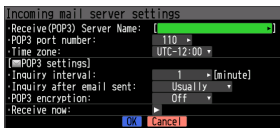

Selection item		Description	
Incoming mail server settings	Receiving (POP3) server name		
	POP3 port number		
	Time zone		
	POP3 settings	Inquiry interval	Set the e-mail receiving interval in the range of 1 to 1440 [min.].
		Inquiry after email sent	Set whether or not to perform temporarily the e-mail receiving per 1 minute after sending e-mail.
		POP3 encryption	Set the POP3 encryption from Off, StartTLS, or Over SSL.
Receive now		The e-mail is received immediately.	

**CAUTION**

When the mail is received, the mail is deleted from the mail server.

In order not to delete important mails, please use a dedicated e-mail account (e-mail address).

## Identification name

Set the identification name as a remote unit name or name for recognition by the supplied application software.

The initial value has been set to GL840\_ <last 6 digits of the wired LAN MAC address>.

\* This identification name is not a general computer name (NETBIOS name) or a name for DNS.

## Network Time Setting

Alternatively, if the Network Time setting is used, the GL840 clock can be automatically adjusted via the network. Refer to the next section, "Network Time Setting" for details.

### <Network Time Setting>



This GL840 has the ability to synchronize the time of the clock server via Ethernet.

Perform the settings for using this function.

#### (1) Internet Time

Enables or disables this function.

Off : This function is disabled. Time adjustment is not performed.

On : This function is enabled to perform time adjustment.

#### (2) NTP Server

Sets the domain name of a NTP server to be used.

#### (3) Time Zone

Sets the time zone of an area in which the GL840 is to be used. (Japan: +09:00)

#### (4) Synchronized Time

Sets the time at which the GL840 synchronizes to the NTP server. When the specified time comes, time synchronization operation is performed using a method specified in Synchronization Mode.

#### (5) Adjust Mode

Synchronize at once, Synchronize gradually

Sets the mode in which the GL840 synchronizes to the NTP server.

Synchronize at once: When the synchronization time comes, the GL840 synchronizes to the time server at once.

Synchronize gradually : Even when the synchronization time comes, the GL840 does not synchronize at once.

It synchronizes to the time of the NTP server gradually.

The rate of adjustment is about 43 seconds per day

(equivalent to around 10 ms per 20 seconds).

#### (6) Connection Test

Performs connection test to the NTP server.

When the connection test is performed, a message is displayed.

If connection cannot be established, check the settings and perform the connection test again.

\* If the connection test is passed, the following message is displayed.




### CAUTION

Synchronization is not performed if the time difference with the NTP server is 500 ms or less.remote

## (5) OTHER settings

Various conditions can be set.

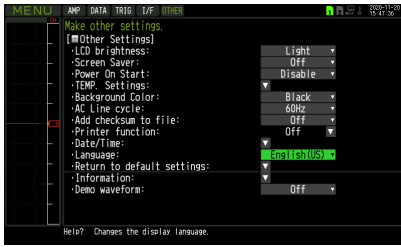

Setting		Selections available
LCD brightness		Bright, Middle, Dark
Screen Saver		Off, 10, 30 (sec.), 1, 2, 5, 10, 30, 60 (min.)
Power On Start		Disable, Enable
TEMP. Settings	Date/Time	Internal, External
	Temp. Unit	°C, °F
	Burnout	Off, On
Background Color		Black, White
AC Line cycle		50/60Hz
Add checksum to file		Off, On
Date/Time	Date/Time	Date From 2005.1.1 to 2035.12.31
		Time From 0:0:0 to 23:59:59
Language		Japanese, English (US), English (UK), French, German, Chinese, Korean, Russian, Spanish
Return to default settings		▶ Press right key to execute.
Information		▼ Down button to display information
Demo Waveform		Off, On

### (5)-1 LCD brightness

Set the brightness (three stages of bright, middle, and dark) of the LCD backlight.

### (5)-2 Screen Saver

Select the time (eight stages of 10 s to 60 min.) you want to specify. The screen is switch to Off state automatically when the non-operation state continues for a predetermined period.

Turns off the display if not operated for some time to extend the service life of the LCD screen.

If the GL840 runs on a battery pack (B-569, option), the use of this function prolongs the drive time.

**(5)-3 Power On Start**

Sets the feature which initiates measurement as soon as the GL840 is turned on.

Selection item	Description
Disable	When turning On the power, the capture is started automatically.
Enable	Even when turning On the power, the capture is not started automatically.

**CHECKPOINT**

When turned On the power, it may take some time until the wireless sensor is recognized.

If the data capture is started despite the wireless sensor has not been recognized, the captured data is displayed as the “\*\*\*\*\*” until the wireless sensor is recognized.

**(5)-4 Room temperature compensation**

Selection item	Description
Internal	The room temperature compensation in the GL840 is enabled. (Please usually select the "Internal".)
External	This is used to execute the room temperature compensation through external device.

**(5)-5 Temp. Unit**

Toggles the temperature unit between °C (Centigrade) and °F (Fahrenheit) for temperature settings.

When °F (Fahrenheit) is selected, calculation is performed using the following formula:

$$^{\circ}\text{F (Fahrenheit)} = ^{\circ}\text{C (Centigrade)} \times 1.8 + 32$$

Calculate the accuracy as: Centigrade accuracy x 1.8.

**(5)-6 Burnout**

Sets a feature which checks sensor burnout in a thermocouple.

Selection item	Description
Off	Burnout check is disabled.
On	Periodical burnout check is conducted.

**CAUTION**

During a burnout check, voltage is applied to the GL840. Therefore, set Burnout to “Off” when GL840 is connected in parallel with other devices to avoid any effect from these voltages.

**(5)-7 Background Color**

Sets the background colors of the waveform display area and the digital display area.

### (5)-8 AC Line cycle

Select the frequency of the AC line used.

Selection item	Description
50Hz	For an area with a power supply frequency of 50 Hz
60Hz	For an area with a power supply frequency of 60 Hz

#### CAUTION

In this setting, select a frequency for noise removal using the digital filter. Note that no noise in the power supply can be removed if this setting is wrong. For the the sampling speed where this unit's digital filter becomes effective, refer to "(2)-1 Sampling interval".

### (5)-9 Add checksum to file

The checksum is used to check the consistency of the data file.

If the contents of the file are changed, checksum confirmation does not match the checksum, so you can see that the file was changed.

The checksum function adds a checksum to the data file.

Selection item	Description
Off	The checksum is not added to the data file.
On	The checksum is added to the data file.

\* The checksum is also added to the backup file, ring / relay file, data save file.

For the checksum confirmation function, refer to "3.4 Setting Menus" - "(9) Data replay menu".

#### CHECKPOINT

The checksum is available only for GBD format.

When saving a file with software etc, checksum does not match.

### (5)-10 Date/Time

Makes settings related to the GL840 clock.

The internal clock (date and time) of the GL840 can be set.

### (5)-11 Language

Set the display language (9 languages of Japanese, English (US), English (UK), French, German, Chinese, Korean, Spanish and Russian).

### (5)-12 Return to default settings

Returns all the settings to the factory defaults. When initialized, setting conditions to return to the factory default settings.

In the operation settings, the settings other than the communication settings are reset to the factory default settings.

In the communication settings, the communication settings set in the I/F menu are reset to the factory default settings.

**(5)-13 Information**

Displays system information.

**(5)-14 Demo Waveform**

This parameter displays demo waveforms without analog signal input.

Selection item	Description
Off	The demo waveform is not displayed.
On	The demo waveform is displayed.

(6) FILE menu


The operations for file can be performed by pressing the [FILE] key.

The display items vary depending on the operation mode of free-running, replaying, and capturing.



(6)-1 File Operation

In Free Running and operation modes during replaying, the files in the internal memory (SD1) or SD CARD (SD2) can be manipulated.

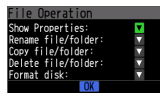


Operation mode	Operations
Show Properties	The detailed file and folder information (file name, date, and time) are displayed.
Rename file/folder	Change the file name or folder name. The name can be changed by selecting the capture file or folder. Refer to "(8) Character string input" to operate the file and folder names.
Copy file/folder	Copy the file or folder. Select the capture file or folder (Multiple files/folders can be selected) you want to copy, and then select the copy destination (another folder, etc.), operate the Select/Execute of the copy destination.
Delete file/folder	Delete the file or folder. Select the capture file or folder (Multiple files/folders can be selected) you want to delete and then operate the Delete Execute.
Format disk	Initialize the internal memory (SD1) or SD CARD (SD2).

<Example of operation procedure>

Example of file/folder delete procedure is described.

(1) Select the file/folder you want to delete.

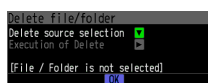


Move the cursor to the file or folder you want to delete and then press the [ENTER] key. The "√" mark is displayed in the checkbox. (Multiple files/folders can be selected)

Press the [ENTER] key again to cancel it.


When it is cancelled, the "√" mark will disappear.

The selection is completed by pressing the [QUIT] key.

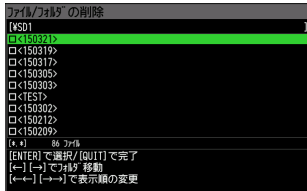


(2) Enable the deletion.

The message of "Delete the file. All the data will be lost. Are you sure?" is displayed.



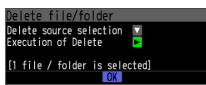


The files are deleted by operating the [ENTER] key again.

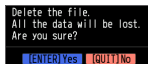

**(6)-2 Data Save**

During replaying the data, the displayed data can be saved in the internal memory (SD1) or SD CARD (SD2) by selecting the Data Save in the File Menu.

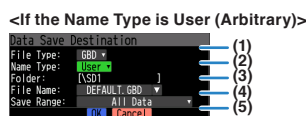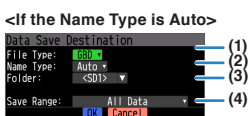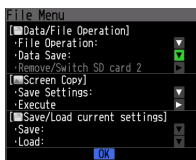

Setting	Description
(1) File Type	Sets the file format used to save data. GBD: Creating a data file in Graphtec's proprietary binary format. * Data tampering can be prevented. CSV: Creating a data file in text format.
(2) Name Type	Sets how a data file should be named. Auto : Automatically supplies the file name. Example : 20150201-123456.GBD Number part : File creation date * The file is created on February 1, 2015, 12:34:56 in this example. GBD : Data format GBD (Binary data) CSV (Text format) User : Data is captured to a file with an entered file name. Sequential number : A file is created with an arbitrary file name that has been entered, followed by a sequential number.
(3) Folder	Specify a folder to which you want to capture (or save) data. For details, refer to "(7) File box".
(4) Save Range	Set the data range to be saved. All data : All of the data is saved regardless of the cursor operation. Data between cursors : Only the data in the range between cursors A and B is saved.
(5) File	Specify a folder to which you want to capture (or save) data. For details, refer to "(7) File box".





**(6)-3 Remove / replace SD CARD**

The SD CARD can be replaced during saving the data in the SD CARD. Perform the card replacement according to the following procedure.

- (1) Press the [FILE] key to open the FILE menu.
- (2) Press the [ENTER] key in “Remove/Switch SD CARD 2”.





- (3) Make sure that the message is displayed and then remove the SD CARD.

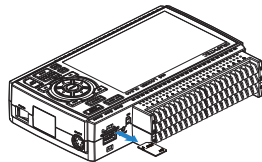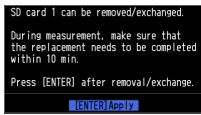

**CAUTION**

Do not remove the SD CARD until this message is displayed.  
Data may become corrupt and inaccessible.

- (4) Insert the new SD CARD.

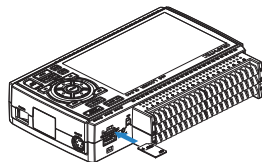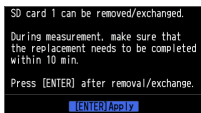

- (5) Make sure that the SD CARD2 (SD2) access indicator turn green and then press the [ENTER] key.  
For access to SD CARD, refer to “3.1 Window names and functions”.

**CAUTION**

Please perform the replacement operation within the displayed time in the message.  
When the data capturing in CSV format and the backup function are enabled, the SD CARD cannot be replaced.

**CHECKPOINT**

Every time you replace the SD CARD, “\_CHG” number is added to the file name.



(Example) When the data is captured in the file name "TEST.GBD"

First SD CARD: TEST.GBD

Second SD CARD: TEST\_CHG1.GBD

**(6)-4 Specify Save Destination (Screen Copy)**

Saves the data that is replaying on the screen in the internal memory (SD1) or SD CARD (SD2) as an image file.

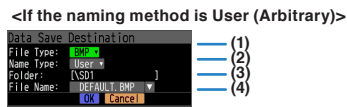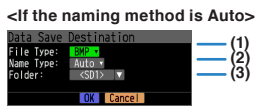

Setting	Description
(1) File Type	Sets the file format used to save data. BMP : Saves data in bitmap file format PNG : Saves data in ping format
(2) Name Type	Set how a data file should be named. Auto : Automatically supplies the file name. Example : 20150201-123456.BMP Number part : File creation date * The file is created on February 1,2015, 12:34:56 in this example. BMP : Data format BMP : Bitmap file format PNG : Ping format User : Data is captured to a file with an entered file name. Sequential number : A file is created with an arbitrary file name that has been entered, followed by a sequential number.
(3) Folder	Specify the save destination folder. Refer to "(7) File box" for details..
(4) File Name	Specify the save destination folder. Refer to "(7) File box" for details.



**(6)-5 Execute (Screen Copy)**

Executes screen copy and saves it to an image file.

\* Refer to "(6)-4 Specify Save Destination (Screen Copy)" for details on specifying the save destination.

**(6)-6 Save**

Saves the setting conditions of the GL840.

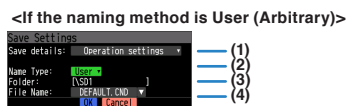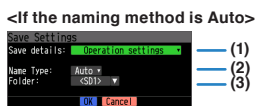

Setting	Description
(1) Save details	Set the details of saved data setting. Operation setting: Settings related to the operation of this device are saved. Communication setting: Settings related to the communication are saved.
(2) Name Type	Set how a data file should be named. Auto : Automatically supplies the file name. Example : 20150201-123456.CND Number part : File creation date * The file is created on February 1,2015, 12:34:56 in this example. CND : Data format (GL840 setting file format) User : Data is captured to a file with an entered file name. Sequential number : A file is created with an arbitrary file name that has been entered, followed by a sequential number.
(3) Folder	Specify the save destination folder. Refer to "(7) File box" for details.
(4) File Name	Specify the save destination folder. Refer to "(7) File box" for details.

**(6)-7 Load Settings**

Loads and reflects the GL840 setting conditions from a file.



Setting	Description
(1) Folder	Specify the save destination folder. Refer to "(7) File box" for details.
(2) File Name	Specify the save destination folder. Refer to "(7) File box" for details..

(7) File box


The file box used to set captured data files using the DATA menu or for disk operations accessed using the FILE menu is operated as follows.

<File box by disk operations>



Key	Description
◀ ▶	Moves between folders. ◀ : Move up one folder. ▶ : Move down one folder.
◀◀ ▶▶	The display order can be changed.
ENTER	Finalize the operation.
QUIT	Close the file box.

<New folder creation>

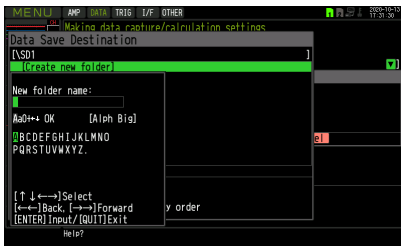


Key	Description
⬆ ⬇ ⬇ ⬆	Used to move the cursor when selecting the operation or text/symbol.
◀◀ ▶▶	Used to move left and right in the selected character.
ENTER	Finalize the operation.
QUIT	Close the file box.

<Example of operation procedure>

The following shows an operation example where a folder named "TEST" is created for captured data and automatically saved.


<Data capture setting menu>

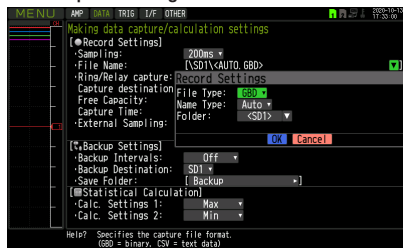

- (1) Select the DATA menu.
- (2) Open the capturing setting menu by pressing the [ENTER] key on the "Capture destination file name" in the Record Settings  
 In this menu, set as follows:  
 File format : GBD  
 Name Type : Auto
- (3) Then, open the data saving destination menu by pressing the [ENTER] key on the "FOLDER" to specify a data saving destination and create a folder.
- (4) Create a "New folder" in the file box.  
 \* For the careation of new folder, refer to "(8) Character string input" described below.  
 Then, select the folder you created and press the [ENTER] key.

(8) Character string input


Related to text input operations such as annotation, EU (scaling) unit and captured data file name input.

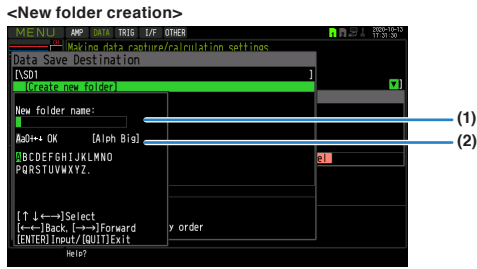

Operation mode	Description		Operation method
(1) Selecting operation	A	Upper case alphabet mode	When the cursor key is moved to the uppermost part, operation can be selected using the left/right key (◀▶). After selecting an operation, use the down key (▼) to move the cursor to the desired character. Use the Fast forward left and right (◀◀▶▶) keys to move the cursor on the selected characters.
	a	Lower case alphabet mode	
	0	Numeric mode	
	ア	One-byte katakana mode	
	+	Symbol mode	
	←	Delete mode	
	↓	Insert mode	
	OK	Finalize mode	
(2) Text input		Text used for each operation	When you bring the cursor to a character and press [ENTER] key, the character is entered. After you finish entering characters, move the cursor to OK and then press [ENTER] key.

<Setting example>

Example of operation procedure to enter the "TEST01" to create the new file name is described.

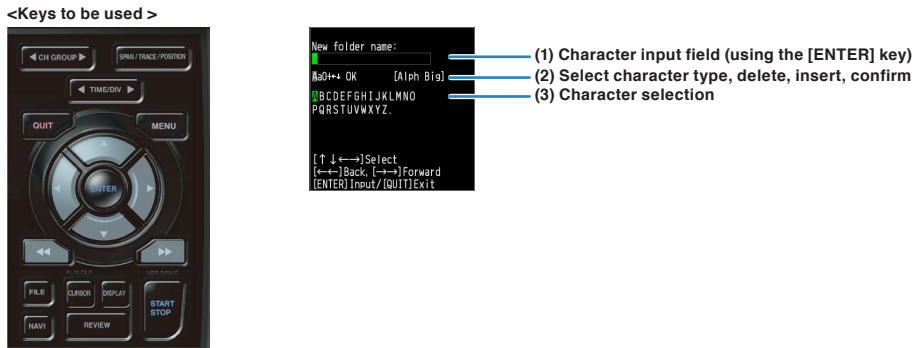

- Set the "(1) Selecting operation" to "A" (Uppercase alphabet mode).
- Select the [TEST] in the "(2) Text input".
- Set the "(1) Selecting operation" to "0" (Numeric mode).
- Select the "01" in the "(2) Text input".


If you make a mistake to enter the character, move the cursor on the character you want to delete with Fast forward key and (1) place in the position of the ◀◀▶▶ in the operation mode and then press the [ENTER] key to delete the one character.

- After completing character input, confirm by setting operation selection to [OK] and then pressing the [ENTER] key.

\* When setting the display language to language other than Japanese, Half-width Kana mode cannot be used in "(1) Operation selection".

(9) Data replay menu

Select the data you want to replay from the “Data replay source” by pressing the [REV1EW] key and replay the captured data.


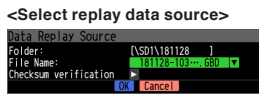


Select items	Description
File Name	Specify the file in the capture destination (save destination).
Checksum verification	Verifying checksum The checksum confirmation result is displayed in the dialog. When checksums match: "Checksum matched" In case of checksum mismatch: "Checksum mismatched"


**CAUTION**

For CSV-formatted data, only the data captured by this GL840 can be replayed.

"Checksum verification" is displayed only when selecting a GBD file to which a checksum is attached. For details on how to add a checksum, refer to "3.4 Setting Menu" - "(5)-9 Add checksum to file".

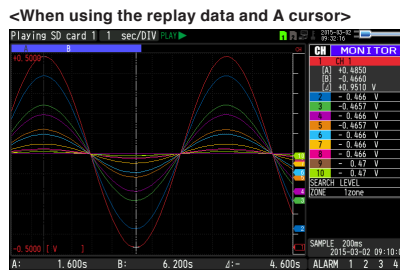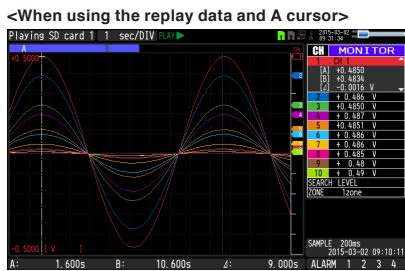

Data replay menus are displayed by pressing the [MENU] key during replay.

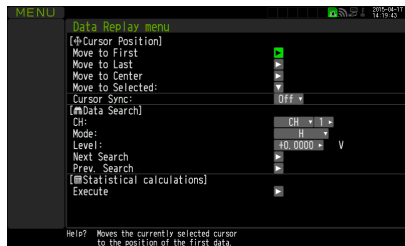

Setting		Selections available	
Cursor Position	Move to First Data	▶ Press right key to execute.	
	Move to Last Data	▶ Press right key to execute.	
	Move to Center	▶ Press right key to execute.	
	Move to Selected Position	Method:	Position, Time
		[Position]	Position 0 to end of data For example, if the sampling interval is 100 ms, capture destination is the built-in RAM, and the number of capture points is 10000, settings up to 999.9 ms are available.
		[Time]	Date Date from the start to end of the data Time from the start to end of the data
Cursor Synch	Off, On		

Setting		Selections available	
Data search	CH	CH1 to 200, Logic, Pulse, Alarm * Logic and Pulse are displayed only if the Logic Pulse function is On in the AMP settings.	
		[CH1 to CH200]/GS/WL	CH1-200, GS1 to 8, WL1-1 to WL5-8
		[Logic]	Logic1-28
		[Pulse]	Pulse1-28
	Mode	[Alarm]	Alarm1-10, WL1-5
		[CH1 to CH200]/GS/WL	↑H, ↓L
		[Logic]	↑H, ↓L
		[Pulse]	↑H, ↓L
	Level	[Alarm]	Both, ↑H, ↓L
		[CH1 to CH200]/GS/WL	Set numeric value
	[Pulse]	Set numeric value	
	Find Next	▶ Press right key to execute.	
	Find Previous	▶ Press right key to execute.	
Statistical calculation between cursors	Function	Off, Average, Max, Min, Peak, RMS	
	Execute	▶ Press right key to execute.	

**(9)-1 Move to First Data**

Executing this option moves the currently selected cursor (A or B) to the start of the data.

**(9)-2 Move to Last Data**



Executing this option moves the currently selected cursor (A or B) to the end of the data.

**(9)-3 Move to Center**

Executing this option moves the currently selected cursor (A or B) to the center of the data.

**(9)-4 Move to Selected Position**

Sets a position (relative position in time) or time and moves the currently selected cursor (A or B) to this position or time.

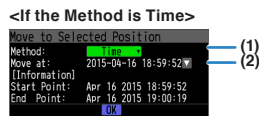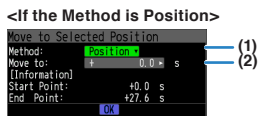

Setting	Selections available
(1) Method	Sets the method for specifying the position to move the cursor to. Select Position or Time.
(2) Move to	Sets the position to move the cursor to. Specify how far down you want to move the cursor from the capture start position assumed as 0. Only positions down to the end of the data can be set. Check the setting range in the (A) part.
(3) Time	Sets the position to move the cursor to using a date and time. Only positions from the start to the end of the data can be set. Check the setting range in the (B) part.



**(9)-5 Cursor Sync**

Sets up the function that moves two cursors in synchronization.

Selection item	Description
Off	Cursors are not synchronized. Only the specified one cursor moves.
On	Two cursors move in synchronization. Cursor A is always the fulcrum.

\* Cursor Synch is turned Off when you move a cursor using Move to Selected Position or perform Data Search.

**(9)-6 Date Search**

Sets the search conditions to be used in the next sections (9)-7 "Find Next" and (9)-8 "Find Previous").

The operation is Edge operation.

Selection item	Description
CH	Sets the channel to be used for search. CH1-200, GS1-8, WL1-1 to WL5-8 : The specified analog channel is used for search. Logic1-28 : The specified logic channel is used for search. Pulse1-28 : The specified pulse channel is used for search. Alarm1-10, WL1-5 : The specified alarm output is used for search.
Mode	Sets the search mode. Both : Detects an edge at which alarm output changes from generation to cancellation or vice versa when Alarm is selected. ↑H : Detects a rising edge of an analog signal or an edge at which alarm output changes from cancellation to generation ↓L : Detects a falling edge of an analog signal or an edge at which alarm output changes from generation to cancellation.
Level	Sets a voltage level to be searched for when the search channel is an analog or pulse channel.

**(9)-7 Find Next**

Executing this option moves the cursor to a next position where the search conditions are met, down from the current cursor position. (Specify the search conditions as described in (9)-6 "Data Search.")

**(9)-8 Find Previous**

Executing this option moves the cursor to a previous position where the search conditions are met, up from the current cursor position. (Specify the search conditions as described in (9)-6 "Data Search.")


**(9)-9 Execute (Calculation)**

Executes calculation between cursors. Executing this option opens a window to display calculation results. For description of the calculation results, see the table below. Pressing the [FILE] key opens a window for saving statistical calculation results. Specify a save destination and select OK to save statistical calculation results in text (CSV) format.

- \* The specifying method of storage location and file name is the same as the file specifying method of captured data. For details, refer to “(7) File box” described above.
- \* [CH GROUP] key is effective. CH11 and later can be checked by pressing the [CH GROUP] key.

CH	Average	Max	Min	P-P	RMS
1	-0.0231	+0.4411	-0.4861	+0.9242	+0.3340 V
2	-0.0267	+0.4442	-0.486	+0.928	+0.335 V
3	-0.0267	+0.4408	-0.4860	+0.9268	+0.3342 V
4	-0.0268	+0.442	-0.486	+0.927	+0.335 V
5	-0.0266	+0.4405	-0.4859	+0.9264	+0.3345 V
6	-0.031	+0.442	-0.486	+0.927	+0.335 V
7	-0.032	+0.441	-0.485	+0.926	+0.335 V
8	-0.03	+0.44	-0.49	+0.93	+0.34 V
9	-0.035	+0.440	-0.486	+0.926	+0.335 V
10	-0.04	+0.44	-0.49	+0.93	+0.34 V

Select [FILE] to save CSV / [QUIT] to return

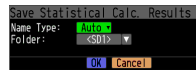

Selection item	Description
Average	Displays the simple average value of the data during data capture.
Max	Displays the maximum value of the data during data capture.
Min	Displays the minimum value of the data during data capture.
Peak	Displays the peak value of the data during data capture.
RMS	Displays the RMS value of the data during data capture. The calculation formula is as follows: $R.M.S = \sqrt{\sum D^2/n}$ * D: data n: number of data

**(10) Integrated bar graph display**

By capturing after connecting the integrated CH display possible GS sensor to this GL840 midi LOGGER (or after wireless-connecting to the GL100 that the GS sensor has been connected), the captured data can be displayed on the Integrated Bar Graph screen.

Normally, the waveforms that has been piled up from the capture start are displayed in the Replay display. But in the Integrated Bar Graph display, the increment of the specified period of time can be displayed.

In addition, the pile up bar graph that piled up a plurality of same kind of integrated data can be displayed.

The integrated CH display possible GS sensors are as follows;

For details on use of each GS sensor/GL100, please refer to the instruction manual supplied with the each GS sensor/GL100.

Display possible sensor	Input	Unit
GS-TH	Integrated temperature	°Ch
GS-DPA-AC	Integrated power	kWh
GS-LXUV	Integrated illuminance	Lxh or klxh
	Integrated ultraviolet	mW/cm <sup>2</sup> h

**CAUTION**


When the data without integrated CH, or the external sampling is selected, the integrated bar graph is not displayed.

The CH data calculated between CHs is not displayed in the integrated bar graph.

**(10)-1 Screen display**


<CH select mode>

The CH is displayed individually.

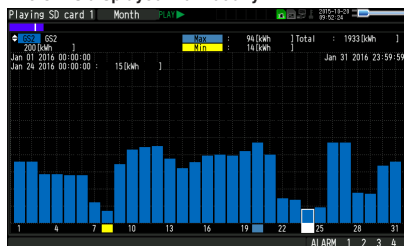

<Pile up select mode>

The data is displayed as a single graph after adding the same kind of CH.

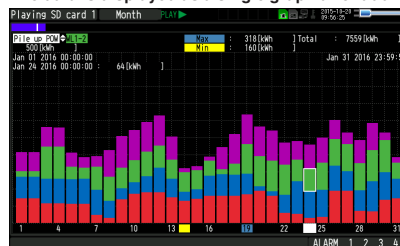


**CAUTION**

The pile up display can be selected only when the same kind of integrated CH exists two or more.


For details on ALARM function, please refer to “3.1 Window names and functions”.

Data detailed display area

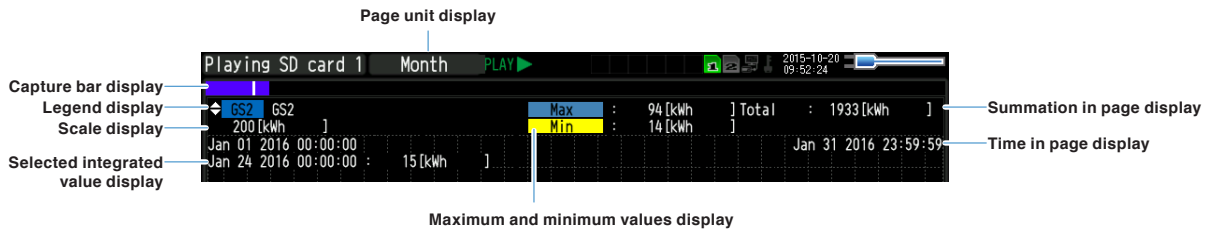

Setting items	Description																								
Page unit display	<p>The bar graph is displayed in page unit.</p> <table border="1"> <thead> <tr> <th>Page unit</th> <th>Selection range</th> <th>Bar unit</th> <th>Display range (Horizontal axis direction)</th> </tr> </thead> <tbody> <tr> <td>Year</td> <td>2000-2099</td> <td>Month</td> <td>Jan.-Dec.</td> </tr> <tr> <td>Month</td> <td>2000-2099 Jan.-Dec.</td> <td>Week</td> <td>1-31 Day (Month with less than 31 days is similarly fixed to 31.)</td> </tr> <tr> <td>Week</td> <td>2000-2099 1-54 Week</td> <td>Day</td> <td>Sun./Mon./Tue./Wed./Thu./Fri./Sat.</td> </tr> <tr> <td>Day</td> <td>2000-2099 Jan.-Dec. 1-31 Day</td> <td>Hour</td> <td>0-23 Hour</td> </tr> <tr> <td>Hour</td> <td>2000-2099 Jan.-Dec. 1-31 Day 0-23 Hour</td> <td>Minute</td> <td>0-59 Minute</td> </tr> </tbody> </table> <p>* When the sampling is slower than 1min, the page unit cannot be selected by the hour.</p>	Page unit	Selection range	Bar unit	Display range (Horizontal axis direction)	Year	2000-2099	Month	Jan.-Dec.	Month	2000-2099 Jan.-Dec.	Week	1-31 Day (Month with less than 31 days is similarly fixed to 31.)	Week	2000-2099 1-54 Week	Day	Sun./Mon./Tue./Wed./Thu./Fri./Sat.	Day	2000-2099 Jan.-Dec. 1-31 Day	Hour	0-23 Hour	Hour	2000-2099 Jan.-Dec. 1-31 Day 0-23 Hour	Minute	0-59 Minute
Page unit	Selection range	Bar unit	Display range (Horizontal axis direction)																						
Year	2000-2099	Month	Jan.-Dec.																						
Month	2000-2099 Jan.-Dec.	Week	1-31 Day (Month with less than 31 days is similarly fixed to 31.)																						
Week	2000-2099 1-54 Week	Day	Sun./Mon./Tue./Wed./Thu./Fri./Sat.																						
Day	2000-2099 Jan.-Dec. 1-31 Day	Hour	0-23 Hour																						
Hour	2000-2099 Jan.-Dec. 1-31 Day 0-23 Hour	Minute	0-59 Minute																						
Capture bar display	<p>The following figure shows the display position, cursor position, and trigger position.</p> <p>* When the background color is changed to white, the coloration of the cursor position is black.</p>																								
Legend display	The CH number and CH annotation are displayed.																								
Scale display	From 0 to the upper limit are displayed. * Scale value is auto scale. Maximum upper limit is up to 100000.																								
Selected integrated value display	The time and integrated value of the bar graph (The pile up elements at the time of Pile up select mode) selected by the cursor are displayed.																								
Maximum and minimum values display	The maximum and minimum values in the displayed page are displayed.																								
Summation in page display	The summation of the integrated data in page is displayed.																								
Time in page display	The period during which the replayed data exists in the page is displayed. When the page unit is Week, "Week number/Day of the week" is displayed. * The week number is what January 1 is included in the first week of the year (USA system).																								

Bar graph display area

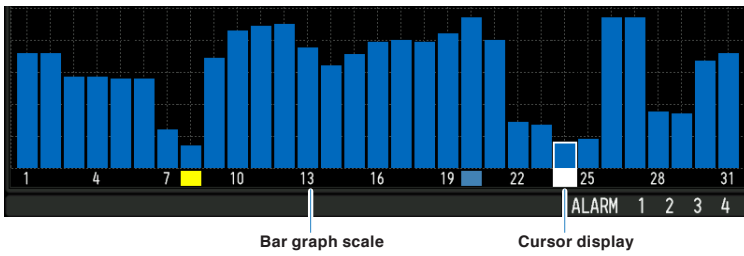


Setting items	Description
Bar graph display	The integrated data is displayed in bar graph. The number of displayed bars depends on the page unit.
Bar graph scale	The scale of the time axis is displayed. The scales of the maximum and minimum values in the page are filled in the following colors. Maximum value: Light blue Minimum value: Yellow * When there is more than one maximum/minimum value, the maximum/minimum value that appeared in the earliest time is displayed.
Cursor display	The selected point is displayed in the white frame. The entire bar graph for CH select mode and each element for Pile up select mode can be selected. * When the background color is changed to white, the coloration of the cursor is black.

(10)-2 Key operation

Main operation possible in the integrated bar graph screen


Bar graph select	Using [◀] and [▶] keys, the bar graph (CH select mode) or pile up graph (Pile up select mode) can be selected.
Ch select	Using [▲] and [▼] keys, the displayed CH (CH select mode) or pile up CH (Pile up select mode) can be selected.
Page forward/back	Using [◀◀] and [▶▶] keys, the page can be moved.
Page unit switch	Using [TIME/DIV] key, the page unit is switched.
Display switch	Using [CURSOR] key, the CH select mode and Pile up select mode can be switched. (When Pile up CH is selected)
Menu during data replay (Integrated bar graph)	Using [MENU] key, the display switch and information can be confirmed. (The dedicated menu is displayed during the normal replay only. The "Setting Menu" is displayed while the replaying during capture is executing.)
File operation	Using [FILE] key, the file-related operations can be performed. (CSV save)

**(10)-3 Menu screen display**

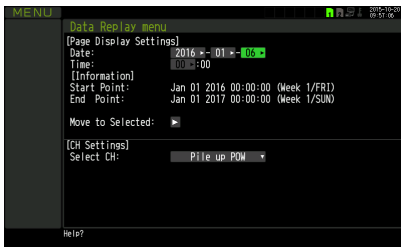

Setting items		Description
Page Display Settings	Date Time	Select the page you want to display. Settable range is page unit. When the page unit is "Week", use the week number to search the week.
Information	Start point End point	The start time and end time of captured data, and week number and day of the week are displayed.
	Move to Selected	▶ Move to the page set in the Display Setting page.
CH Settings	Select CH	GS, WL1-WL5 The integrated CH and pile up CH (when there are the pile up CHs) are displayed.
	GS-TH	GS4 (Integrated temperature), Pile up temperature
	GS-DPA-AC	GS2 (Integrated power), GS4 (Integrated power), Pile up power
	GS-LXUV	GS3 (Integrated illuminance), GS4 (Integrated illuminance), Pile up illuminance, Pile up ultraviolet

**(10)-4 CSV save**

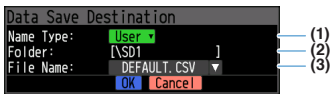

The data that is being displayed can be saved from "Data Save" in "File Menu" while displaying the integrated bar graph screen.

Save range is page unit (fixed).

Setting items	Description
(1) Name Type	Set the naming type of data file Auto: The file name is attached automatically. Example) 20150201-123456BAR.CSV Number... File creation date and time * Example) 2015, February 1, 12:34:56 CSV... Data format (text format) User: The data is captured in the file name you entered. Serial number: The file is created in the file name that you entered arbitrarily plus the serial number.
(2) Folder	Specify the save destination folder. For details, please refer to the "(7) File box".
(3) File Name	Specify the destination file. For details, please refer to the "(7) File box". This setting screen is displayed when setting the Name Type to "User" or "Serial number".


**CAUTION**

Since the saved file in the integrated bar graph is rounded off after the decimal point of the captured data, the value of the actual captured data might be slightly different.

The "Rates" column in the data can be input by dedicated software. But, it cannot be input when the data is saved in CSV format in this GL840 midi LOGGER.

(11) NAVI menu

The “MENU” screen is displayed by pressing the [NAVI] key during free-running. When you operate in accordance with the instructions displayed on the screen, the capturing, trigger, and wireless LAN, etc. can be set.

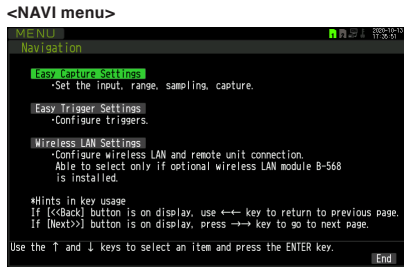


Setting items	Description
Easy Capture Settings	The conditions (input, sensor, range, and sapling) for data measurement and data capture can be set in accordance with the instructions displayed on the screen.
Easy Trigger Settings	The settings (trigger) for data capture can be set in accordance with the instructions displayed on the screen.
Wireless LAN Settings	This is displayed when optional wireless unit is installed. The wireless LAN settings and the wireless sensor (GL100-WL + GS sensor and terminal/adapter/ remote terminal (GLT400)) connection settings can be set in accordance with the operation procedure displayed on the screen.


<Example of operation procedure>

An example of the operation procedure for easy capture setting is described below.


1. Select the “Easy Capture Settings” and then press the [ENTER] key to display the following menu screen.

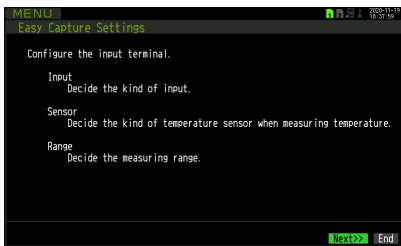

2. When the settings (input, sensor, and range) are satisfied, select the "Next>>" and then press the [ENTER] key. The “Input, Sensor, and Range, etc.” screens are displayed. Set the necessary items.

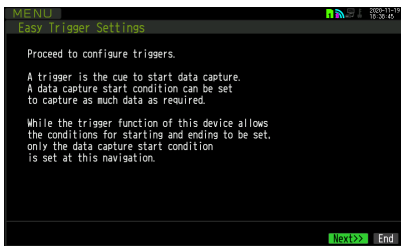

3. After setting, when you the "Next>>" is selected and then the [ENTER] key is pressed, the “Sampling, Interval, Capture Destination” screens are displayed. Set the necessary items.

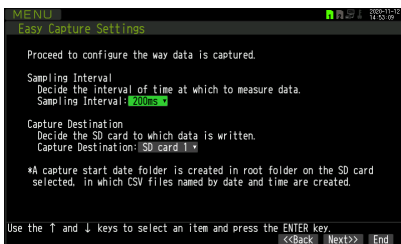

4. After setting, when the "Next >>" is selected and then the [ENTER] key is pressed, the setting information and notes on measurement are displayed.

When the "Finished" is displayed, the operation exits by pressing the [ENTER] key.

When you want to finish the operation in the middle, the operation can be finished by pressing the [NAVI] or [QUIT] key.

The basic work flow to perform "Easy Capture Settings" is as above.

The setting procedure varies depending on the other setting item. However, you can set them by operating in accordance with the instructions displayed on the menu.

---


**CHECKPOINT**

To connect the wireless sensor or the remote terminal to the GL840, you must turn off the power of the GL840. Follow the following procedure to connect it.

(1) Turn off the power of the GL840 once.


(2) Turn on the power of the GL840 and wait for it to start up completely.

(3) Check whether the GL840 has recognized the wireless sensor or the remote terminal with the remote unit icon at the top of the GL840's display.

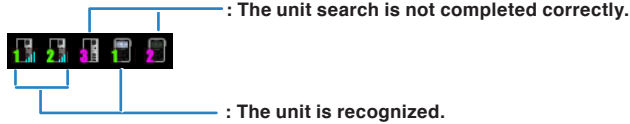



(12) Quick settings

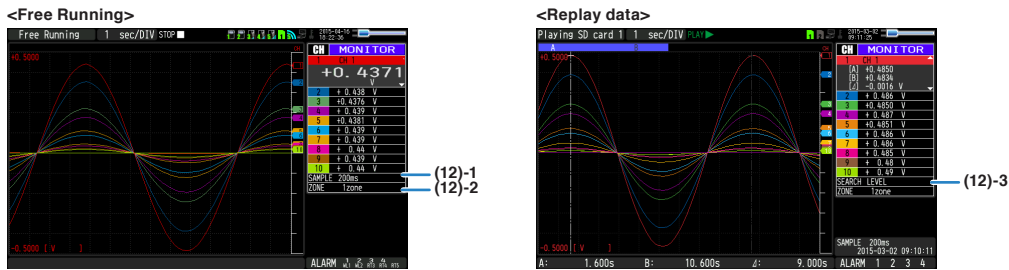

Screen	Operation mode	Sign	Description
Waveform	Free Running	SAMPLE	Using the ◀▶ key, change the sampling interval.
		ZONE	Using the ◀▶ key, change the zone division.
	Capturing	ZONE	Using the ◀▶ key, change the zone division.
	Replaying during capture	ZONE	Using the ◀▶ key, change the zone division.
	Replaying	SERCH	Using the ◀▶ key, perform the search. ◀ : Search the past waveform. ▶ : Search the future waveform.
		ZONE	Using the ◀▶ key, change the zone division..

**(12)-1 SAMPLE**

Set the sampling interval of the measurement data before free Running or capturing.  
For the sampling interval, refer to “(2)-1 Sampling interval” described above.

**(12)-2 ZONE**

The waveform display can be switched to 1, 2, 5 or 10-divided display.

1-divided: 10ch full scale display

2-divided: The display is divided into two screens. 1, 3, 5, 7, 9-ch and 2, 4, 6, 8, 10-ch are displayed in the 2-divided screens separately.

5-divided: The display is divided into five screens. 1/6ch, 2/7ch, 3/8ch, 4/9ch, 5/10ch are displayed in the 5-divided screens separately.

10-divided: The display is divided into ten screens. 1-10ch is displayed in a single screen separately.

**(12)-3 SERCH**

Search the alarm generated position in the replayed data.

**(13) To cancel key lock by password**

A password can be set to GL840 to cancel the key lock.

(No password is set at factory default.)

<Operation flow>

1. Set the password.

Press the ◀, ▶, and ENTER keys at the same time to display the password setting screen shown below. Specify a 4 digit password.



Use the ◀, ▶, ▲, ▼ keys to select numbers. Press the [ENTER] key to confirm the password.

Specifying 0000 will disable password operation.

In case you forgot your password, please contact us to acquire the master password.

2. Set the password.

Hold down the ◀◀ and ▶▶ keys together for at least two seconds.

3. Cancel the key lock.

Hold down the ◀◀ and ▶▶ keys together again for at least two seconds.

The password setting screen shown below will be displayed. Set a password.



Entering an incorrect password will not cancel key lock.

Key lock state will be retained when power is turned off.

## 3.5 WEB Server Function

This function allows operating and monitoring GL840 via a Web browser.

- Supported Web browsers
  - Google Chrome
  - Microsoft Edge
  - Firefox
- \* Web browser may not work properly due to its version upgrade. In that case, please try using a different web browser.
- Available functions using a Web browser
  - Operating GL840
  - Monitoring GL840 display screen
  - Enlarging GL840 display screen
  - Linking to FTP (This function may not be available due to restrictions on the web browser.)
  - Linking to our Web site
- Setting the URL

The URL (Uniform Resource Locator) must be correctly set according to your network environment.

When the port number is changed, enter the following:

http://(IP address): (Port number)/index.html

- http ..... Protocol to access the server.  
 HTTP (Hyper Text Transfer Protocol)
- IP address ..... Enter in the IP address of the GL840 to monitor.
- Port number ..... Specify the port number.  
 The port number is the number set to the GL840 main unit, or router, etc.
- Index.html ..... This is the file name. This file name is fixed to index.html.

### CHECKPOINT

- **The port number can be omitted. In this case, the port number is 80.**  
 http://IP address : 80/index.html
- **It is not possible to simultaneously WEB connection from multiple browsers. Please use a single browser for one GL840 main unit.**

### • Procedure


1. Open the Web browser.



2. Type in the URL (http://IP address/Index.html) in the address input field.

When Basic Authentication is set to On, you need to enter the user name and password you set.

3. The following pages are displayed.

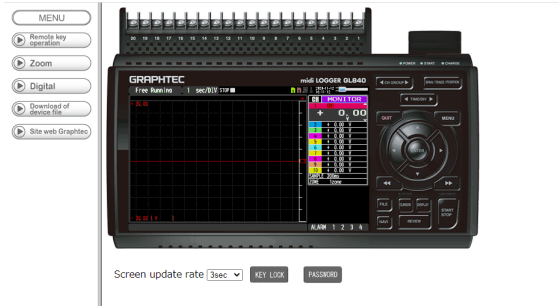

Remote key operation .....Allows GL840 operation.


Zoom ..... Enlarges only the LCD screen of GL840.

Digital ..... Displays the GL840 measured value digitally.

Download of device file .....Allows data captured with GL840 to be downloaded to your PC via FTP.  
(This function may not be available due to restrictions on the web browser.)

Site web Graphtec ..... Accesses to our Web site.

### Remote key operation

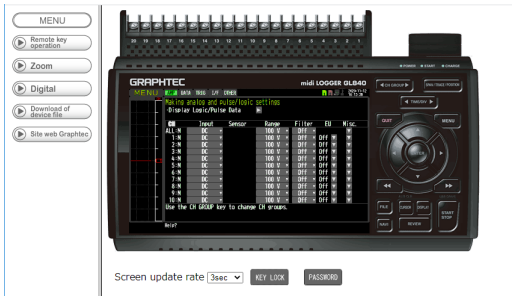

KEY LOCK ..... Sets and cancels key lock.

PASSWORD ..... Sets and cancels a password.

Screen update rate ..... Sets an update rate of the screen.


The screen update rate can be set either to 2, 3, 5, 10 seconds.

## Zoom



- CH GROUP ..... Digital values for 10 channels are displayed on a single screen.  
Press this key to display the next group consisting of 10 channels.
- DISPLAY ..... Switches the display mode.  
Press this key to switch among Waveform + Digital, Expanded Waveform, and Digital screens.
- SPAN/TRACE/POSITION ..... Switches the display in the digital display area.  
Press this key to switch among MONITOR, SPAN, POSITION, and TRACE.
- ▲▼◀▶ ..... Cursor keys
- Screen update speed ..... Specifies the speed in which the screen is updated.  
Available update speeds are 2, 3, 5, 10 seconds.


## Digital

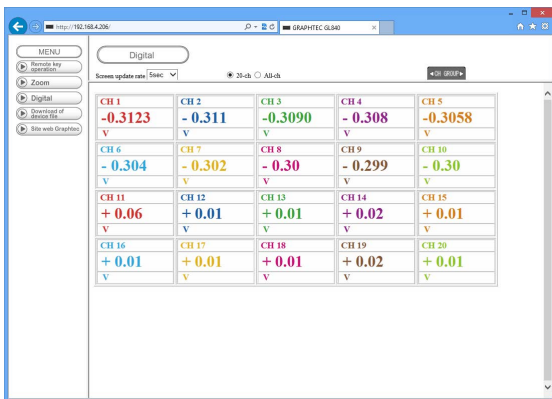


- Screen update speed ..... Specifies the speed in which the screen is updated.  
Available update speeds are 2, 5, 10, 20, 30 seconds, 1, 5, 10, 20, 30 minutes, 1 hour

### Download of device file

The captured data in the internal memory (SD1) or SD CARD (SD2) of the GL840 can be downloaded to the PC.

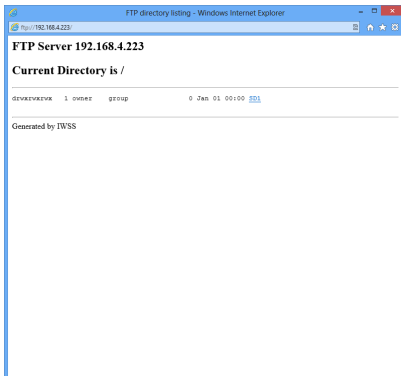

To display the FTP site in the Explorer from the figure above, press the Alt key and click the "View" and then click the "Open FTP site with Explorer". The following screen is displayed.

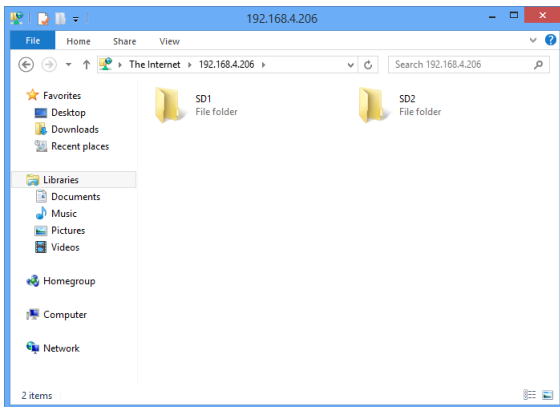

#### <About the FTP server function>

To connect to FTP server with an Internet browser, please set the user name and password as follows. If you omit entering the user name and password, you will be automatically logged in with Anonymous account, so operations will be restricted to read-only. If "(4)-5 Other settings" - "Anonymous connection" in "FTP server settings" is set to "Disable", you will need to set a user name and password.

ftp://<username>:<password>@<FTP server name>

#### <Example of settings>

FTP server name: 192.168.0.1

User name: GL840

Password: abcd

URL: ftp://GL840:abcd@192.168.0.1

The following operations cannot be performed for read-only files:

- Upload file
- Delete file/folder
- Create file/folder
- Change file name/folder name

To write the data to the GL840, the login account name must be changed.

Refer to the following for the initial value for each anonymous connection settings.

<b>Anonymous connection</b>	<b>User name</b>	<b>Password</b>	<b>Restrictions</b>
Disable	GL840	GL840	None
Enable	anonymous	Any	Read-only

---

 **CAUTION**

When connecting to the FTP server with an Internet browser, it may be prohibited depending on the Internet browser software. If you cannot connect to the FTP server with the used Internet browser, please use Explorer.

---

## 3.6 List of Error Codes

If an error code is displayed on the GL840, please handle errors in reference to the table below.

Error code	Description
-1	Unexpected error
1	Please contact us.
2	File not found. The operation target is not a folder.
3	Hardware error There is a possibility that the hardware has failed. Please contact us.
5	There is a possibility that the internal memory (SD1) or SD CARD (SD2) has failed.
8	Please contact us.
9	Please contact us.
12	Please contact us.
13	Write Protected state. Please check the write-protect switch of the SD CARD.
16	Please contact us.
17	File/folder already exists. The error code is displayed when you created a folder with the folder name that already exists.
21	The target is not a file. You tried to perform the file operation for a folder.
22	The path name is too long.
23	Please contact us.
24	Please contact us.
27	Please contact us.
28	Please contact us.
46	Please contact us.
88	The disc format is not supported.
90	The target directory is not empty.
100	Please contact us.
101	Please contact us.
102	Please contact us.



# ***CHAPTER 4 Specification***

---

This chapter describes the basic specifications for the GL840.

## **PRODUCT SUMMARY**

**4.1 *Standard Specifications***

**4.2 *Function Specifications***

**4.3 *Accessories/Optional Accessories***

**4.4 *External Dimensions***

## 4.1 Standard Specifications

### Standard Specifications

Item		Description																																																					
Number of analog channel		Maximum 200ch available for 20ch/1 terminal or extension unit																																																					
Analog terminal unit type		<ul style="list-style-type: none"> <li>• Standard terminal</li> <li>• Screwless terminal</li> <li>• Withstand high-voltage high-precision terminal</li> <li>• GL860 Standard 20CH screw terminal</li> <li>• GL860 Standard 20CH screwless terminal</li> </ul>																																																					
GS sensor and terminal/adapter connection terminal		One module * Optional (GS sensor and terminal / adapter ) connections only																																																					
Data backup functions		Setup conditions: EEPROM; Clock: Lithium battery																																																					
Clock accuracy (23°C environment)		±0.002% (accurate within about 50 seconds per month)																																																					
Operating environment		0 to 45°C, 5 to 85% RH (0 to 40°C when operated in batteries/15 to 35°C when battery is charging)																																																					
Withstand voltage	Standard terminal	Between each input ch and GND terminal: 350Vp-p 1 minute Between each input terminals: 350Vp-p 1 minute																																																					
	Withstand high-voltage high-precision terminal	Between each input ch and GND terminal: 2300VACrms 1 minute Between each input terminals: 600Vp-p																																																					
Power supply		<ul style="list-style-type: none"> <li>• AC adapter : 100 to 240 VAC, 50 to 60 Hz</li> <li>• DC input : 8.5 to 24 VDC (26.4 V max.)</li> <li>• Battery pack (option) : 7.2 VDC (2900 mAh), two packs can be mounted</li> </ul>																																																					
Power consumption		<p>AC power consumption (when using the AC adapter provided as a standard accessory)</p> <table border="1"> <thead> <tr> <th>No.</th> <th>Condition</th> <th>Power supply</th> <th>Normal</th> <th>During recharging battery</th> </tr> </thead> <tbody> <tr> <td rowspan="2">1</td> <td rowspan="2">When the LCD is on</td> <td>AC100V</td> <td>24VA</td> <td>38VA</td> </tr> <tr> <td>AC240V</td> <td>35VA</td> <td>55VA</td> </tr> <tr> <td rowspan="2">2</td> <td rowspan="2">When the screen saver is operating</td> <td>AC100V</td> <td>19VA</td> <td>33VA</td> </tr> <tr> <td>AC240V</td> <td>27VA</td> <td>49VA</td> </tr> </tbody> </table> <p>DC current consumption</p> <table border="1"> <thead> <tr> <th>No.</th> <th>DC voltage</th> <th>Condition</th> <th>Normal</th> <th>During recharging battery</th> </tr> </thead> <tbody> <tr> <td>1</td> <td rowspan="2">+24V</td> <td>When the LCD is on</td> <td>0.36A</td> <td>0.65A</td> </tr> <tr> <td>2</td> <td>When the screen saver is operating</td> <td>0.27A</td> <td>0.56A</td> </tr> <tr> <td>3</td> <td rowspan="2">+12V</td> <td>When the LCD is on</td> <td>0.70A</td> <td>Recharging not possible</td> </tr> <tr> <td>4</td> <td>When the screen saver is operating</td> <td>0.50A</td> <td>Recharging not possible</td> </tr> <tr> <td>5</td> <td rowspan="2">+8.5V</td> <td>When the LCD is on</td> <td>1.00A</td> <td>Recharging not possible</td> </tr> <tr> <td>6</td> <td>When the screen saver is operating</td> <td>0.70A</td> <td>Recharging not possible</td> </tr> </tbody> </table> <p>* Normal condition: LCD brightness is set to MAX.</p>	No.	Condition	Power supply	Normal	During recharging battery	1	When the LCD is on	AC100V	24VA	38VA	AC240V	35VA	55VA	2	When the screen saver is operating	AC100V	19VA	33VA	AC240V	27VA	49VA	No.	DC voltage	Condition	Normal	During recharging battery	1	+24V	When the LCD is on	0.36A	0.65A	2	When the screen saver is operating	0.27A	0.56A	3	+12V	When the LCD is on	0.70A	Recharging not possible	4	When the screen saver is operating	0.50A	Recharging not possible	5	+8.5V	When the LCD is on	1.00A	Recharging not possible	6	When the screen saver is operating	0.70A	Recharging not possible
No.	Condition	Power supply	Normal	During recharging battery																																																			
1	When the LCD is on	AC100V	24VA	38VA																																																			
		AC240V	35VA	55VA																																																			
2	When the screen saver is operating	AC100V	19VA	33VA																																																			
		AC240V	27VA	49VA																																																			
No.	DC voltage	Condition	Normal	During recharging battery																																																			
1	+24V	When the LCD is on	0.36A	0.65A																																																			
2		When the screen saver is operating	0.27A	0.56A																																																			
3	+12V	When the LCD is on	0.70A	Recharging not possible																																																			
4		When the screen saver is operating	0.50A	Recharging not possible																																																			
5	+8.5V	When the LCD is on	1.00A	Recharging not possible																																																			
6		When the screen saver is operating	0.70A	Recharging not possible																																																			
External dimensions (approximate) [WxDxH]	Standard terminal	240×158×52.5mm (not including protruding parts)																																																					
	Withstand high-voltage high-precision terminal	240×166×52.5mm (not including protruding parts)																																																					
	Screwless terminal	240×158×52.5mm (not including protruding parts)																																																					

Item		Description
Weight (approximate) *1	Standard terminal	1010g
	Withstand high-voltage high-precision terminal	1035g
	Screwless terminal	1010g
Vibration- tested conditions		Equivalent to Equivalent to Automobile parts Type 1 Class A

\*1 AC adapter and battery are not included.

### Memory devices

Item	Description
Memory capacity	GL840-M/GL840-WV: Internal memory (SD1): Approx. 8GB, SD CARD slot: 1 slot <sup>*1, *2</sup> GL840-SDM/GL840-SDWV: SD CARD slot: 2 slots <sup>*1, *2</sup> <sup>*1</sup> 1 file is up to 2GB. <sup>*2</sup> SDHC compatible, maximum approx, 32GByte memory is available, Compatible with FAT / FAT32 format only
Memory contents	<ul style="list-style-type: none"> <li>• Setup conditions</li> <li>• Measured data</li> <li>• Screen copy</li> </ul>

### PC I/F

Item	Description
Interface types	Ethernet (10BASE-T/100BASE-TX) USB 2.0
Functions	Data transfer to the PC (realtime, Internal memory (SD1) or SD CARD (SD2) data) PC control of the GL840 Control of wireless sensor GL100GL100-WL, Data capture (only when connected to the wireless LAN: up to 5 units)
Ethernet functions (10BASE-T/100BASE-TX)	Web server functions: Displays the screen image of the GL840 with a browser, and operates the GL840. FTP server function: Transfer and delete the captured data in the internal memory (SD1) or SD CARD (SD2). FTP client function: Back up the captured data to the FTP server. NTP client function: Time-synchronize the NTP server. DHCP client function: IP address automatic acquisition DHCP server function : IP address automatic distribution: (Wireless LAN/In access point mode only) E-mail function: Send and receive the e-mail
USB functions	USB drive mode: Transfer and delete the captured data in the internal memory (SD1) or SD CARD (SD2).
Realtime data transfer speed *1	10 msec/1 ch maximum

\*1 The transfer speed depends on the number of channels.

### Monitor

Item	Description
Display	7-inch TFT color LCD (WVGA: 800 x 480 dots)
Displayed languages	Japanese, English, French, German, Chinese, Korean, Russian, Spanish
Backlight life	50,000 hrs (when brightness is down to 50%), depends on operation environment
Backlight	Screen saver function provided (10, 30 sec., 1, 2, 5, 10, 30, 60 min.)

GL840-M: B-564 / B-564SL

Item		Description																														
Number of input channels	Standard terminal	20 channels (Up to 200 channels when using with the expansion terminal base) * Between GL840 and terminal and between terminals can be direct-connected or with an expansion terminal connection cable (sold separately)																														
	Screwless terminal	20 channels (Up to 200 channels when using with the expansion terminal base) * Between GL840 and terminal and between terminals can be direct-connected or with an expansion terminal connection cable (sold separately)																														
Input terminal type	Standard terminal	M3 screw type terminals (Rectangular flat washer)																														
	Screwless terminal	Screwless terminal																														
Input method	Photo MOS relay scanning system All channels isolated, balanced input * Terminal b to be used to connect the resistance bulb is shorted within all channels.																															
Scan speed	10 ms/1 ch maximum																															
Measurement ranges	Voltage: 20, 50, 100, 200, 500 mV; 1, 2, 5, 10, 20, 50, 100 V; 1-5 V F.S.																															
	Temperature Thermocouples : K, J, E, T, R, S, B, N, C (WRe5-26) Resistance bulb : Pt100, JPt100, Pt1000 (IEC751) Temperature range : 100°C, 500°C, 2000°C (In the case of Fahrenheit: 150°F, 750°F, 3000°F)																															
	Humidity: 0 to 100% (voltage 0 to 1 V scaling conversion) fixed																															
Measurement accuracy (23°C ±5°C) • When 30 minutes or more have elapsed after power was switched on • Sampling 1 s/20 ch • Filter ON (10) • GND connected	Voltage: 0.1% of F.S. Temperature • Thermocouple																															
	<table border="1"> <thead> <tr> <th>Thermocouple</th> <th>Measurement Temperature Range (°C)</th> <th>Measurement Accuracy</th> </tr> </thead> <tbody> <tr> <td>R/S</td> <td>0 ≤ TS ≤ 100°C 100 &lt; TS ≤ 300°C R : 300 &lt; TS ≤ 1600°C S : 300 &lt; TS ≤ 1760°C</td> <td>±5.2°C ±3.0°C ± (0.05% of rdg +2.0°C) ± (0.05% of rdg +2.0°C)</td> </tr> <tr> <td>B</td> <td>400 ≤ TS ≤ 600°C 600 &lt; TS ≤ 1820°C</td> <td>±3.5°C ± (0.05% of rdg +2.0°C)</td> </tr> <tr> <td>K</td> <td>-200 ≤ TS ≤ -100°C -100 &lt; TS ≤ 1370°C</td> <td>± (0.05% of rdg +2.0°C) ± (0.05% of rdg +1.0°C)</td> </tr> <tr> <td>E</td> <td>-200 ≤ TS ≤ -100°C -100 &lt; TS ≤ 800°C</td> <td>± (0.05% of rdg +2.0°C) ± (0.05% of rdg +1.0°C)</td> </tr> <tr> <td>T</td> <td>-200 ≤ TS ≤ -100°C -100 &lt; TS ≤ 400°C</td> <td>± (0.1% of rdg +1.5°C) ± (0.1% of rdg +0.5°C)</td> </tr> <tr> <td>J</td> <td>-200 ≤ TS ≤ -100°C -100 &lt; TS ≤ 100°C 100 &lt; TS ≤ 1100°C</td> <td>±2.7°C ±1.7°C ± (0.05% of rdg +1.0°C)</td> </tr> <tr> <td>N</td> <td>-200 ≤ TS &lt; 0°C 0 ≤ TS ≤ 1300°C</td> <td>± (0.1% of rdg +2.0°C) ± (0.1% of rdg +1.0°C)</td> </tr> <tr> <td>C (W)</td> <td>0 ≤ TS ≤ 2000°C</td> <td>± (0.1% of rdg +1.5°C)</td> </tr> <tr> <td colspan="2">Reference contact compensation accuracy</td> <td>±0.5°C</td> </tr> </tbody> </table>		Thermocouple	Measurement Temperature Range (°C)	Measurement Accuracy	R/S	0 ≤ TS ≤ 100°C 100 < TS ≤ 300°C R : 300 < TS ≤ 1600°C S : 300 < TS ≤ 1760°C	±5.2°C ±3.0°C ± (0.05% of rdg +2.0°C) ± (0.05% of rdg +2.0°C)	B	400 ≤ TS ≤ 600°C 600 < TS ≤ 1820°C	±3.5°C ± (0.05% of rdg +2.0°C)	K	-200 ≤ TS ≤ -100°C -100 < TS ≤ 1370°C	± (0.05% of rdg +2.0°C) ± (0.05% of rdg +1.0°C)	E	-200 ≤ TS ≤ -100°C -100 < TS ≤ 800°C	± (0.05% of rdg +2.0°C) ± (0.05% of rdg +1.0°C)	T	-200 ≤ TS ≤ -100°C -100 < TS ≤ 400°C	± (0.1% of rdg +1.5°C) ± (0.1% of rdg +0.5°C)	J	-200 ≤ TS ≤ -100°C -100 < TS ≤ 100°C 100 < TS ≤ 1100°C	±2.7°C ±1.7°C ± (0.05% of rdg +1.0°C)	N	-200 ≤ TS < 0°C 0 ≤ TS ≤ 1300°C	± (0.1% of rdg +2.0°C) ± (0.1% of rdg +1.0°C)	C (W)	0 ≤ TS ≤ 2000°C	± (0.1% of rdg +1.5°C)	Reference contact compensation accuracy		±0.5°C
	Thermocouple	Measurement Temperature Range (°C)	Measurement Accuracy																													
	R/S	0 ≤ TS ≤ 100°C 100 < TS ≤ 300°C R : 300 < TS ≤ 1600°C S : 300 < TS ≤ 1760°C	±5.2°C ±3.0°C ± (0.05% of rdg +2.0°C) ± (0.05% of rdg +2.0°C)																													
B	400 ≤ TS ≤ 600°C 600 < TS ≤ 1820°C	±3.5°C ± (0.05% of rdg +2.0°C)																														
K	-200 ≤ TS ≤ -100°C -100 < TS ≤ 1370°C	± (0.05% of rdg +2.0°C) ± (0.05% of rdg +1.0°C)																														
E	-200 ≤ TS ≤ -100°C -100 < TS ≤ 800°C	± (0.05% of rdg +2.0°C) ± (0.05% of rdg +1.0°C)																														
T	-200 ≤ TS ≤ -100°C -100 < TS ≤ 400°C	± (0.1% of rdg +1.5°C) ± (0.1% of rdg +0.5°C)																														
J	-200 ≤ TS ≤ -100°C -100 < TS ≤ 100°C 100 < TS ≤ 1100°C	±2.7°C ±1.7°C ± (0.05% of rdg +1.0°C)																														
N	-200 ≤ TS < 0°C 0 ≤ TS ≤ 1300°C	± (0.1% of rdg +2.0°C) ± (0.1% of rdg +1.0°C)																														
C (W)	0 ≤ TS ≤ 2000°C	± (0.1% of rdg +1.5°C)																														
Reference contact compensation accuracy		±0.5°C																														
* Thermocouple diameters T - K: 0.32 φ, others: 0.65 φ																																
• Resistance bulb																																
<table border="1"> <thead> <tr> <th>Type</th> <th>Measurement Temperature Range (°C)</th> <th>Applied current</th> <th>Measurement</th> </tr> </thead> <tbody> <tr> <td>Pt100</td> <td>-200 to 850°C (FS=1050°C)</td> <td>1mA</td> <td>±1.0°C</td> </tr> <tr> <td>JPt100</td> <td>-200 to 500°C (FS=700°C)</td> <td>1mA</td> <td>±0.8°C</td> </tr> <tr> <td>Pt1000</td> <td>-200 to 500°C (FS=700°C)</td> <td>0.3mA</td> <td>±0.8°C</td> </tr> </tbody> </table>		Type	Measurement Temperature Range (°C)	Applied current	Measurement	Pt100	-200 to 850°C (FS=1050°C)	1mA	±1.0°C	JPt100	-200 to 500°C (FS=700°C)	1mA	±0.8°C	Pt1000	-200 to 500°C (FS=700°C)	0.3mA	±0.8°C															
Type	Measurement Temperature Range (°C)	Applied current	Measurement																													
Pt100	-200 to 850°C (FS=1050°C)	1mA	±1.0°C																													
JPt100	-200 to 500°C (FS=700°C)	1mA	±0.8°C																													
Pt1000	-200 to 500°C (FS=700°C)	0.3mA	±0.8°C																													
* 3-wire system																																

Item	Description																																																				
	<p>● Temperature range</p> <table border="1"> <thead> <tr> <th>Type</th> <th>Temperature range</th> <th>Resolution</th> <th>Measurement Range</th> </tr> </thead> <tbody> <tr> <td rowspan="3">R/S</td> <td>100°C F.S.</td> <td>0.01°C</td> <td>0 to 100°C</td> </tr> <tr> <td>500°C F.S.</td> <td>0.05°C</td> <td>0 to 500°C</td> </tr> <tr> <td>2000°C F.S.</td> <td>0.1°C</td> <td>R : 0 to 1600°C S : 0 to 1760°C</td> </tr> <tr> <td rowspan="2">B</td> <td>500°C F.S.</td> <td>0.05°C</td> <td>400 to 500°C</td> </tr> <tr> <td>2000°C F.S.</td> <td>0.1°C</td> <td>500 to 1820°C</td> </tr> <tr> <td rowspan="4">K/E/T/J/N</td> <td>100°C F.S.</td> <td>0.01°C</td> <td>-100 to 100°C</td> </tr> <tr> <td>500°C F.S.</td> <td>0.05°C</td> <td>K/E/J/N : -200 to 500°C T : -200 to 400°C</td> </tr> <tr> <td rowspan="2">2000°C F.S.</td> <td rowspan="2">0.1°C</td> <td>K : -200 to 1370°C E : -200 to 800°C</td> </tr> <tr> <td>T : -200 to 400°C J : -200 to 1100°C N : -200 to 2000°C</td> </tr> <tr> <td rowspan="3">C (W)</td> <td>100°C F.S.</td> <td>0.01°C</td> <td>0 to 100°C</td> </tr> <tr> <td>500°C F.S.</td> <td>0.05°C</td> <td>0 to 500°C</td> </tr> <tr> <td>2000°C F.S.</td> <td>0.1°C</td> <td>0 to 2000°C</td> </tr> <tr> <td rowspan="3">Pt</td> <td>100°C F.S.</td> <td>0.01°C</td> <td>-100 to 100°C</td> </tr> <tr> <td>500°C F.S.</td> <td>0.05°C</td> <td>-200 to 500°C</td> </tr> <tr> <td>2000°C F.S.</td> <td>0.1°C</td> <td>Pt100 : -200 to 850°C JPt100/Pt1000 : -200 to 500°C</td> </tr> </tbody> </table> <p>* Measurement accuracy does not change due to the temperature range.</p>	Type	Temperature range	Resolution	Measurement Range	R/S	100°C F.S.	0.01°C	0 to 100°C	500°C F.S.	0.05°C	0 to 500°C	2000°C F.S.	0.1°C	R : 0 to 1600°C S : 0 to 1760°C	B	500°C F.S.	0.05°C	400 to 500°C	2000°C F.S.	0.1°C	500 to 1820°C	K/E/T/J/N	100°C F.S.	0.01°C	-100 to 100°C	500°C F.S.	0.05°C	K/E/J/N : -200 to 500°C T : -200 to 400°C	2000°C F.S.	0.1°C	K : -200 to 1370°C E : -200 to 800°C	T : -200 to 400°C J : -200 to 1100°C N : -200 to 2000°C	C (W)	100°C F.S.	0.01°C	0 to 100°C	500°C F.S.	0.05°C	0 to 500°C	2000°C F.S.	0.1°C	0 to 2000°C	Pt	100°C F.S.	0.01°C	-100 to 100°C	500°C F.S.	0.05°C	-200 to 500°C	2000°C F.S.	0.1°C	Pt100 : -200 to 850°C JPt100/Pt1000 : -200 to 500°C
Type	Temperature range	Resolution	Measurement Range																																																		
R/S	100°C F.S.	0.01°C	0 to 100°C																																																		
	500°C F.S.	0.05°C	0 to 500°C																																																		
	2000°C F.S.	0.1°C	R : 0 to 1600°C S : 0 to 1760°C																																																		
B	500°C F.S.	0.05°C	400 to 500°C																																																		
	2000°C F.S.	0.1°C	500 to 1820°C																																																		
K/E/T/J/N	100°C F.S.	0.01°C	-100 to 100°C																																																		
	500°C F.S.	0.05°C	K/E/J/N : -200 to 500°C T : -200 to 400°C																																																		
	2000°C F.S.	0.1°C	K : -200 to 1370°C E : -200 to 800°C																																																		
			T : -200 to 400°C J : -200 to 1100°C N : -200 to 2000°C																																																		
C (W)	100°C F.S.	0.01°C	0 to 100°C																																																		
	500°C F.S.	0.05°C	0 to 500°C																																																		
	2000°C F.S.	0.1°C	0 to 2000°C																																																		
Pt	100°C F.S.	0.01°C	-100 to 100°C																																																		
	500°C F.S.	0.05°C	-200 to 500°C																																																		
	2000°C F.S.	0.1°C	Pt100 : -200 to 850°C JPt100/Pt1000 : -200 to 500°C																																																		
Reference contact compensation accuracy	Internal/External switching																																																				
A/D converter	Method : $\Delta\Sigma$ method Resolution : 16-bit (Effective resolution: About 1/40000 of the +/- range)																																																				
Temperature coefficient	Gain : 0.01% of F.S./°C Zero : 0.02% of F.S./°C * Zero occurs at the sampling intervals of 10, 20, and 50 ms.																																																				
Input resistance	1M $\Omega$ $\pm$ 5%																																																				
Allowable signal source resistance	Within 300 $\Omega$																																																				
Maximum permissible input voltage	Between +/- terminals : 20mV to 2V range (60Vp-p) 5V to 100V range (110Vp-p) Between input terminal/input terminal : 60 Vp-p Between input terminal/GND : 60 Vp-p																																																				
Withstand voltage	Between input terminal/input terminal : 350 Vp-p 1 minute Between input terminal/GND : 350 Vp-p 1 minute																																																				
Insulation resistance	Between input terminal/GND : 50M $\Omega$ or more (at 500 VDC)																																																				
Common mode rejection ratio	90 dB or more (50/60 Hz; signal source 300 $\Omega$ or less)																																																				
Noise	48 dB or more (with +/- terminals shorted)																																																				
Filter	Off, 2, 5, 10, 20, 40 Filter operation is on a moving average basis. The average value of the set sampling count is used. If the sample interval exceeds 30 seconds, the average value of data obtained in a sub-sample (30 seconds) is used.																																																				

**GL840-WV: B-565**

Item	Description																																																																										
Number of input channels	20ch (200ch available when used with the extension terminal base) * Possible to direct-connect or connect with the extension terminal connection cable (sold separately) between the GL840 and terminal base, or between terminal bases.																																																																										
Input terminal type	M3 screw type terminals (Rectangular flat washer)																																																																										
Input method	Photo MOS relay scanning system All channels isolated, balanced input * Terminal b to be used to connect the Resistance bulb is shorted within all channels.																																																																										
Scan speed	10 ms/1 ch maximum																																																																										
Measurement ranges	Voltage: 20, 50, 100, 200, 500 mV; 1, 2, 5, 10, 20, 50, 100 V; 1-5 V F.S. Temperature Thermocouples : K, J, E, T, R, S, B, N, C (WRe5-26) Resistance bulb : Pt100, JPt100, Pt1000 (IEC751) Temperature range: 100°C, 500°C, 2000°C (In the case of Fahrenheit: 150°F, 750°F, 3000°F) Humidity: 0 to 100% (voltage 0 V to 1 V scaling conversion) fixed																																																																										
Measurement accuracy (23°C ±5°C) • When 30 minutes or more have elapsed after power was switched on • Sampling 1 s/20 ch • Filter ON (10) • GND connected	<p>Voltage: ± (0.05% of F.S. + 10µV) Temperature • Thermocouple</p> <table border="1"> <thead> <tr> <th>Thermocouple</th> <th>Measurement Temperature Range (°C)</th> <th>Measurement Accuracy</th> </tr> </thead> <tbody> <tr> <td rowspan="4">R/S</td> <td>0 ≤ TS ≤ 100°C</td> <td>±4.5°C</td> </tr> <tr> <td>100 &lt; TS ≤ 300°C</td> <td>±3.0°C</td> </tr> <tr> <td>R : 300 &lt; TS ≤ 1600°C</td> <td>±2.2°C</td> </tr> <tr> <td>S : 300 &lt; TS ≤ 1760°C</td> <td>±2.2°C</td> </tr> <tr> <td rowspan="2">B</td> <td>400 ≤ TS ≤ 600°C</td> <td>±3.5°C</td> </tr> <tr> <td>600 &lt; TS ≤ 1820°C</td> <td>±2.5°C</td> </tr> <tr> <td rowspan="2">K</td> <td>-200 ≤ TS ≤ -100°C</td> <td>±1.5°C</td> </tr> <tr> <td>-100 &lt; TS ≤ 1370°C</td> <td>±0.8°C</td> </tr> <tr> <td rowspan="2">E</td> <td>-200 ≤ TS ≤ -100°C</td> <td>±1.0°C</td> </tr> <tr> <td>-100 &lt; TS ≤ 800°C</td> <td>±0.8°C</td> </tr> <tr> <td rowspan="2">T</td> <td>-200 ≤ TS ≤ -100°C</td> <td>±1.5°C</td> </tr> <tr> <td>-100 &lt; TS ≤ 400°C</td> <td>±0.6°C</td> </tr> <tr> <td rowspan="3">J</td> <td>-200 ≤ TS ≤ -100°C</td> <td>±1.0°C</td> </tr> <tr> <td>-100 &lt; TS ≤ 100°C</td> <td>±0.8°C</td> </tr> <tr> <td>100 &lt; TS ≤ 1100°C</td> <td>±0.6°C</td> </tr> <tr> <td rowspan="2">N</td> <td>-200 ≤ TS &lt; 0°C</td> <td>±2.2°C</td> </tr> <tr> <td>0 ≤ TS ≤ 1300°C</td> <td>±1.0°C</td> </tr> <tr> <td>C (W)</td> <td>0 ≤ TS ≤ 2000°C</td> <td>±1.8°C</td> </tr> <tr> <td colspan="2">Reference contact compensation accuracy</td> <td>±0.3°C</td> </tr> </tbody> </table> <p>* Thermocouple diameters T - K: 0.32 φ, others: 0.65 φ</p> <p>• Resistance bulb</p> <table border="1"> <thead> <tr> <th>Type</th> <th>Measurement Temperature Range (°C)</th> <th>Applied current</th> <th>Measurement</th> </tr> </thead> <tbody> <tr> <td rowspan="3">Pt100</td> <td>-200 ≤ TS ≤ 100°C</td> <td rowspan="3">1mA</td> <td>±0.6°C</td> </tr> <tr> <td>100 &lt; TS ≤ 500°C</td> <td>±0.8°C</td> </tr> <tr> <td>500 &lt; TS ≤ 850°C</td> <td>±1.0°C</td> </tr> <tr> <td rowspan="2">JPt100</td> <td>-200 ≤ TS ≤ 100°C</td> <td rowspan="2">1mA</td> <td>±0.6°C</td> </tr> <tr> <td>100 &lt; TS ≤ 500°C</td> <td>±0.8°C</td> </tr> <tr> <td rowspan="2">Pt1000</td> <td>-200 ≤ TS ≤ 100°C</td> <td rowspan="2">0.3mA</td> <td>±0.6°C</td> </tr> <tr> <td>100 &lt; TS ≤ 500°C</td> <td>±0.8°C</td> </tr> </tbody> </table> <p>* 3-wire system</p>	Thermocouple	Measurement Temperature Range (°C)	Measurement Accuracy	R/S	0 ≤ TS ≤ 100°C	±4.5°C	100 < TS ≤ 300°C	±3.0°C	R : 300 < TS ≤ 1600°C	±2.2°C	S : 300 < TS ≤ 1760°C	±2.2°C	B	400 ≤ TS ≤ 600°C	±3.5°C	600 < TS ≤ 1820°C	±2.5°C	K	-200 ≤ TS ≤ -100°C	±1.5°C	-100 < TS ≤ 1370°C	±0.8°C	E	-200 ≤ TS ≤ -100°C	±1.0°C	-100 < TS ≤ 800°C	±0.8°C	T	-200 ≤ TS ≤ -100°C	±1.5°C	-100 < TS ≤ 400°C	±0.6°C	J	-200 ≤ TS ≤ -100°C	±1.0°C	-100 < TS ≤ 100°C	±0.8°C	100 < TS ≤ 1100°C	±0.6°C	N	-200 ≤ TS < 0°C	±2.2°C	0 ≤ TS ≤ 1300°C	±1.0°C	C (W)	0 ≤ TS ≤ 2000°C	±1.8°C	Reference contact compensation accuracy		±0.3°C	Type	Measurement Temperature Range (°C)	Applied current	Measurement	Pt100	-200 ≤ TS ≤ 100°C	1mA	±0.6°C	100 < TS ≤ 500°C	±0.8°C	500 < TS ≤ 850°C	±1.0°C	JPt100	-200 ≤ TS ≤ 100°C	1mA	±0.6°C	100 < TS ≤ 500°C	±0.8°C	Pt1000	-200 ≤ TS ≤ 100°C	0.3mA	±0.6°C	100 < TS ≤ 500°C	±0.8°C
Thermocouple	Measurement Temperature Range (°C)	Measurement Accuracy																																																																									
R/S	0 ≤ TS ≤ 100°C	±4.5°C																																																																									
	100 < TS ≤ 300°C	±3.0°C																																																																									
	R : 300 < TS ≤ 1600°C	±2.2°C																																																																									
	S : 300 < TS ≤ 1760°C	±2.2°C																																																																									
B	400 ≤ TS ≤ 600°C	±3.5°C																																																																									
	600 < TS ≤ 1820°C	±2.5°C																																																																									
K	-200 ≤ TS ≤ -100°C	±1.5°C																																																																									
	-100 < TS ≤ 1370°C	±0.8°C																																																																									
E	-200 ≤ TS ≤ -100°C	±1.0°C																																																																									
	-100 < TS ≤ 800°C	±0.8°C																																																																									
T	-200 ≤ TS ≤ -100°C	±1.5°C																																																																									
	-100 < TS ≤ 400°C	±0.6°C																																																																									
J	-200 ≤ TS ≤ -100°C	±1.0°C																																																																									
	-100 < TS ≤ 100°C	±0.8°C																																																																									
	100 < TS ≤ 1100°C	±0.6°C																																																																									
N	-200 ≤ TS < 0°C	±2.2°C																																																																									
	0 ≤ TS ≤ 1300°C	±1.0°C																																																																									
C (W)	0 ≤ TS ≤ 2000°C	±1.8°C																																																																									
Reference contact compensation accuracy		±0.3°C																																																																									
Type	Measurement Temperature Range (°C)	Applied current	Measurement																																																																								
Pt100	-200 ≤ TS ≤ 100°C	1mA	±0.6°C																																																																								
	100 < TS ≤ 500°C		±0.8°C																																																																								
	500 < TS ≤ 850°C		±1.0°C																																																																								
JPt100	-200 ≤ TS ≤ 100°C	1mA	±0.6°C																																																																								
	100 < TS ≤ 500°C		±0.8°C																																																																								
Pt1000	-200 ≤ TS ≤ 100°C	0.3mA	±0.6°C																																																																								
	100 < TS ≤ 500°C		±0.8°C																																																																								

Item	Description																																																				
	<p>• Temperature range</p> <table border="1"> <thead> <tr> <th>Type</th> <th>Temperature range</th> <th>Resolution</th> <th>Measurement Range</th> </tr> </thead> <tbody> <tr> <td rowspan="3">R/S</td> <td>100°C F.S.</td> <td>0.01°C</td> <td>0 to 100°C</td> </tr> <tr> <td>500°C F.S.</td> <td>0.05°C</td> <td>0 to 500°C</td> </tr> <tr> <td>2000°C F.S.</td> <td>0.1°C</td> <td>R : 0 to 1600°C S : 0 to 1760°C</td> </tr> <tr> <td rowspan="2">B</td> <td>500°C F.S.</td> <td>0.05°C</td> <td>400 to 500°C</td> </tr> <tr> <td>2000°C F.S.</td> <td>0.1°C</td> <td>500 to 1820°C</td> </tr> <tr> <td rowspan="4">K/E/T/J/N</td> <td>100°C F.S.</td> <td>0.01°C</td> <td>-100 to 100°C</td> </tr> <tr> <td>500°C F.S.</td> <td>0.05°C</td> <td>K/E/J/N : -200 to 500°C T : -200 to 400°C</td> </tr> <tr> <td rowspan="2">2000°C F.S.</td> <td rowspan="2">0.1°C</td> <td>K : -200 to 1370°C E : -200 to 800°C</td> </tr> <tr> <td>T : -200 to 400°C J : -200 to 1100°C N : -200 to 2000°C</td> </tr> <tr> <td rowspan="3">C (W)</td> <td>100°C F.S.</td> <td>0.01°C</td> <td>0 to 100°C</td> </tr> <tr> <td>500°C F.S.</td> <td>0.05°C</td> <td>0 to 500°C</td> </tr> <tr> <td>2000°C F.S.</td> <td>0.1°C</td> <td>0 to 2000°C</td> </tr> <tr> <td rowspan="3">Pt</td> <td>100°C F.S.</td> <td>0.01°C</td> <td>-100 to 100°C</td> </tr> <tr> <td>500°C F.S.</td> <td>0.05°C</td> <td>-200 to 500°C</td> </tr> <tr> <td>2000°C F.S.</td> <td>0.1°C</td> <td>Pt100 : -200 to 850°C JPt100/Pt1000 : -200 to 500°C</td> </tr> </tbody> </table> <p>* Measurement accuracy does not change due to the temperature range.</p>	Type	Temperature range	Resolution	Measurement Range	R/S	100°C F.S.	0.01°C	0 to 100°C	500°C F.S.	0.05°C	0 to 500°C	2000°C F.S.	0.1°C	R : 0 to 1600°C S : 0 to 1760°C	B	500°C F.S.	0.05°C	400 to 500°C	2000°C F.S.	0.1°C	500 to 1820°C	K/E/T/J/N	100°C F.S.	0.01°C	-100 to 100°C	500°C F.S.	0.05°C	K/E/J/N : -200 to 500°C T : -200 to 400°C	2000°C F.S.	0.1°C	K : -200 to 1370°C E : -200 to 800°C	T : -200 to 400°C J : -200 to 1100°C N : -200 to 2000°C	C (W)	100°C F.S.	0.01°C	0 to 100°C	500°C F.S.	0.05°C	0 to 500°C	2000°C F.S.	0.1°C	0 to 2000°C	Pt	100°C F.S.	0.01°C	-100 to 100°C	500°C F.S.	0.05°C	-200 to 500°C	2000°C F.S.	0.1°C	Pt100 : -200 to 850°C JPt100/Pt1000 : -200 to 500°C
Type	Temperature range	Resolution	Measurement Range																																																		
R/S	100°C F.S.	0.01°C	0 to 100°C																																																		
	500°C F.S.	0.05°C	0 to 500°C																																																		
	2000°C F.S.	0.1°C	R : 0 to 1600°C S : 0 to 1760°C																																																		
B	500°C F.S.	0.05°C	400 to 500°C																																																		
	2000°C F.S.	0.1°C	500 to 1820°C																																																		
K/E/T/J/N	100°C F.S.	0.01°C	-100 to 100°C																																																		
	500°C F.S.	0.05°C	K/E/J/N : -200 to 500°C T : -200 to 400°C																																																		
	2000°C F.S.	0.1°C	K : -200 to 1370°C E : -200 to 800°C																																																		
			T : -200 to 400°C J : -200 to 1100°C N : -200 to 2000°C																																																		
C (W)	100°C F.S.	0.01°C	0 to 100°C																																																		
	500°C F.S.	0.05°C	0 to 500°C																																																		
	2000°C F.S.	0.1°C	0 to 2000°C																																																		
Pt	100°C F.S.	0.01°C	-100 to 100°C																																																		
	500°C F.S.	0.05°C	-200 to 500°C																																																		
	2000°C F.S.	0.1°C	Pt100 : -200 to 850°C JPt100/Pt1000 : -200 to 500°C																																																		
Reference contact compensation accuracy	Internal/External switching																																																				
A/D converter	Method : $\Delta\Sigma$ method Resolution : 16-bit (Effective resolution: About 1/40000 of the +/- range)																																																				
Temperature coefficient	Gain : 0.01% of F.S./°C Zero : 0.02% of F.S./°C * Zero occurs at the sampling intervals of 10, 20, and 50 ms.																																																				
Input resistance	1M $\Omega$ $\pm$ 5%																																																				
Allowable signal source resistance	Within 100 $\Omega$																																																				
Maximum permissible input voltage	Between +/- terminals : 20mV to 2V (60Vp-p) 5V to 100V (110Vp-p) Between input terminal/input terminal : 600 Vp-p Between input terminal/GND : 300 Vp-p																																																				
Withstand voltage	Between input terminal/input terminal : 600 Vp-p Between input terminal/GND : 2300 VACrms 1 minute																																																				
Insulation resistance	Between input terminal/GND : 50M $\Omega$ or more (at 500 VDC)																																																				
Common mode rejection ratio	90 dB or more (50/60 Hz; signal source 300 $\Omega$ or less)																																																				
Noise	48 dB or more (with +/- terminals shorted)																																																				
Filter	Off, 2, 5, 10, 20, 40 Filter operation is on a moving average basis. The average value of the set sampling count is used. If the sample interval exceeds 30 seconds, the average value of data obtained in a sub-sample (30 seconds) is used.																																																				

**B-563/B-563SL Specifications**

Item		Description
Number of input channels	GL860 Standard 20CH screw terminal	20 channels (Up to 200 channels when using with the expansion terminal base) * Between GL840 and terminal and between terminals can be directly connected or with an expansion terminal connection cable (sold separately)
	GL860 Standard 20CH screwless terminal	20 channels (Up to 200 channels when using with the expansion terminal base) * Between GL840 and terminal and between terminals can be directly connected or with an expansion terminal connection cable (sold separately)
Input terminal type	GL860 Standard 20CH screw terminal	M3 screw-type terminals (Rectangular flat washer)
	GL860 Standard 20CH screwless terminal	Screwless terminal
Input method	Photo MOS relay scanning system All channels isolated, balanced input	
Scan speed	10 ms/1 ch maximum	
Measurement ranges	Voltage: 20, 50, 100, 200, 500 mV, 1, 2, 5, 10, 20, 50, 100 V, 1-5 V F.S.	
	Temperature Thermocouples: K, J, E, T, R, S, B, N, C (W: WRe5-26) Temperature range: 100°C, 500°C, 2000°C (In the case of Fahrenheit: 150°F, 750°F, 3000°F)	
	Humidity: 0 to 100% (voltage 0 to 1 V scaling conversion) fixed	
Measurement accuracy (23°C ±5°C) • When 30 minutes or more have elapsed after power was switched on • Sampling 1 s/10 ch • Filter ON (10) • GND connected	Voltage: 0.1% of F.S. Temperature • Thermocouple	
	<b>Thermocouple</b>	<b>Measurement Temperature Range (°C)</b>
	R/S	0 ≤ TS ≤ 100°C 100 < TS ≤ 300°C R : 300 < TS ≤ 1600°C S : 300 < TS ≤ 1760°C
	B	400 ≤ TS ≤ 600°C 600 < TS ≤ 1820°C
	K	-200 ≤ TS ≤ -100°C -100 < TS ≤ 1370°C
	E	-200 ≤ TS ≤ -100°C -100 < TS ≤ 800°C
	T	-200 ≤ TS ≤ -100°C -100 < TS ≤ 400°C
	J	-200 ≤ TS ≤ -100°C -100 < TS ≤ 100°C 100 < TS ≤ 1100°C
	N	-200 ≤ TS < 0°C 0 ≤ TS ≤ 1300°C
	C (W)	0 ≤ TS ≤ 2000°C
Reference contact compensation accuracy		±0.5°C

\* Thermocouple diameters T, K: 0.32 φ, others: 0.65 φ



Item	Description																																												
	<p>• Temperature range</p> <table border="1"> <thead> <tr> <th>Type</th> <th>Temperature range</th> <th>Resolution</th> <th>Measurement Range</th> </tr> </thead> <tbody> <tr> <td rowspan="3">R/S</td> <td>100°C F.S.</td> <td>0.01°C</td> <td>0 to 100°C</td> </tr> <tr> <td>500°C F.S.</td> <td>0.05°C</td> <td>0 to 500°C</td> </tr> <tr> <td>2000°C F.S.</td> <td>0.1°C</td> <td>R: 0 to 1600°C S: 0 to 1760°C</td> </tr> <tr> <td rowspan="2">B</td> <td>500°C F.S.</td> <td>0.05°C</td> <td>400 to 500°C</td> </tr> <tr> <td>2000°C F.S.</td> <td>0.01°C</td> <td>500 to 1820°C</td> </tr> <tr> <td rowspan="4">K/E/T/J/N</td> <td>100°C F.S.</td> <td>0.01°C</td> <td>-100 to 100°C</td> </tr> <tr> <td rowspan="2">500°C F.S.</td> <td rowspan="2">0.05°C</td> <td>K/E/J/N : -200 to 500°C</td> </tr> <tr> <td>T: -200 to 400°C</td> </tr> <tr> <td rowspan="3">2000°C F.S.</td> <td rowspan="3">0.1°C</td> <td>K: -200 to 1370°C</td> </tr> <tr> <td>E: -200 to 800°C</td> </tr> <tr> <td>T: -200 to 400°C</td> </tr> <tr> <td rowspan="3">C (W)</td> <td>100°C F.S.</td> <td>0.01°C</td> <td>0 to 100°C</td> </tr> <tr> <td>500°C F.S.</td> <td>0.05°C</td> <td>0 to 500°C</td> </tr> <tr> <td>2000°C F.S.</td> <td>0.1°C</td> <td>0 to 2000°C</td> </tr> </tbody> </table> <p>* Measurement accuracy does not change due to the temperature range.</p>	Type	Temperature range	Resolution	Measurement Range	R/S	100°C F.S.	0.01°C	0 to 100°C	500°C F.S.	0.05°C	0 to 500°C	2000°C F.S.	0.1°C	R: 0 to 1600°C S: 0 to 1760°C	B	500°C F.S.	0.05°C	400 to 500°C	2000°C F.S.	0.01°C	500 to 1820°C	K/E/T/J/N	100°C F.S.	0.01°C	-100 to 100°C	500°C F.S.	0.05°C	K/E/J/N : -200 to 500°C	T: -200 to 400°C	2000°C F.S.	0.1°C	K: -200 to 1370°C	E: -200 to 800°C	T: -200 to 400°C	C (W)	100°C F.S.	0.01°C	0 to 100°C	500°C F.S.	0.05°C	0 to 500°C	2000°C F.S.	0.1°C	0 to 2000°C
Type	Temperature range	Resolution	Measurement Range																																										
R/S	100°C F.S.	0.01°C	0 to 100°C																																										
	500°C F.S.	0.05°C	0 to 500°C																																										
	2000°C F.S.	0.1°C	R: 0 to 1600°C S: 0 to 1760°C																																										
B	500°C F.S.	0.05°C	400 to 500°C																																										
	2000°C F.S.	0.01°C	500 to 1820°C																																										
K/E/T/J/N	100°C F.S.	0.01°C	-100 to 100°C																																										
	500°C F.S.	0.05°C	K/E/J/N : -200 to 500°C																																										
			T: -200 to 400°C																																										
	2000°C F.S.	0.1°C	K: -200 to 1370°C																																										
E: -200 to 800°C																																													
T: -200 to 400°C																																													
C (W)	100°C F.S.	0.01°C	0 to 100°C																																										
	500°C F.S.	0.05°C	0 to 500°C																																										
	2000°C F.S.	0.1°C	0 to 2000°C																																										
Reference contact compensation accuracy	Internal/External switching																																												
A/D converter	Method: $\Delta\Sigma$ method Resolution: 16-bit (Effective resolution: About 1/40000 of the +/- range)																																												
Temperature coefficient	Gain: 0.01% of F.S./°C Zero: 0.02% of F.S./°C * Zero occurs at the sampling of 5, 10, 20, and 50 ms.																																												
Input resistance	1M $\Omega$ $\pm$ 5%																																												
Allowable signal source resistance	Within 300 $\Omega$																																												
Maximum permissible input voltage	Between +/- terminals: 20mV to 2V range (60Vp-p) 5V to 100V range (110Vp-p) Between input terminal/input terminal: 60 Vp-p Between input terminal/GND: 60 Vp-p																																												
Withstand voltage	Between input terminal/input terminal: 350 Vp-p 1 minute Between input terminal/GND: 350 Vp-p 1 minute																																												
Insulation resistance	Between input terminal/GND: 50M $\Omega$ or more (at 500 VDC)																																												
Common mode rejection ratio	90 dB or more (50/60 Hz; signal source 300 $\Omega$ or less)																																												
Noise	48 dB or more (with +/- terminals shorted)																																												
Filter	Off, 2, 5, 10, 20, 40 Filter operation is on a moving average basis. The average value of the number of set samples is used. If the sample interval exceeds 30 seconds, the average value of data obtained in a sub-sample (30 seconds) is used.																																												

## 4.2 Function Specifications

### Function Specifications

Item	Description
Display screen	Waveform + Digital screen, All Waveform screen, Digital + Calculation Display screen, Expanded digital screen, Integrated bar graph screen * Can be switched using the dedicated key (toggle operation) * For the Expanded Digital screen, the number of channels and the display channel must be specified * The waveform is not rewritten due to the change of the TIME / DIV.
Sampling interval	10 ms/1 ch maximum (GBD/CSV-formatted) 10, 20, 50, 100, 125, 200, 250, 500 ms; 1, 2, 5, 10, 20, 30 sec.; 1, 2, 5, 10, 20, 30 min.; 1 hour; External * The settings of 125 ms or below can be used depending on the input settings and the measuring channel.
EU (scaling function)	<ul style="list-style-type: none"> <li>• 4 points can be set for each channel</li> <li>• The temperature range scaling function is available.</li> </ul>
Functions during capture	<ul style="list-style-type: none"> <li>• Confirmation of the captured data</li> <li>• Saving of data between cursors</li> <li>• Replacement of the SD CARD</li> </ul>
Data save function	Capture destination: Internal memory (SD1) or SD CARD (SD2) Captured data: Settings, Screen data, Measurement data, Integrated bar graph data (page)
Capture function	Function: OFF, Ring recording, Relay recording
Ring recording	Number of recording points: 1000 to 2000000 * When ring capture is ON, the memory space that can be used for capture is one-third of the free space or less.
Relay recording	Relay capacity : 100MB to 2000MB Relay time : 1 hour 00 minute to 24 hours 00 minutes The captured data is continuously captured by files separated in the set relay unit without losing data.
Replaying data	GBD/CSV-formatted data file (only data captured in this GL840)
Calculation between CHs	Calculation type: Four arithmetic operations (+, -, ×, ÷) Target input: Analog CH1 to CH200 GS sensor and terminal/adaptor: CH1 to CH8 Wireless sensor: CH1-1 to CH5-8
Statistical calculation	Statistical calculation type: Average value, peak value, maximum value, minimum value, root mean square value Number of calculations: Two arithmetic operations can be set to each channel. Calculation method: Real-time calculation and specified between cursors (during replay) * Real-time calculation results are displayed on the Digital screen + Calculation Display screen.
Search functions	Function : Search the captured data for the required number of points Search type : Channel, Pulse, Logic, Level, Alarm search
Annotation input function	Function : A comment can be entered for each channel Input table characters : Alphanumerics Number of characters : 31 (The number of characters can be displayed on the screen is up to eight characters.)
Navigation function	Easy capture measurement, easy trigger setting, wireless LAN setting functions

### Trigger/Alarm Functions

Item	Description
Repeat Trigger	Off, On
Trigger types	Start: Data capture starts when a trigger is generated. Stop: Data capture stops when a trigger is generated.
Trigger conditions	Start: Off, level, alarm, external, time Stop: Off, level, alarm, external, time

Item	Description
Alarm judgment modes	Combination: Analog, Logic or "AND" / "OR" of pulse Analog judgment: H (↑), L (↓), Window In, Window Out Logic judgment: Pattern Pulse judgment: H (↑), L (↓), Window In, Window Out

## External Input/Output Functions

Item	Description
Input/output types	<ul style="list-style-type: none"> <li>• Trigger input (1 ch) or External sampling input (1 ch)</li> <li>• Logic input (4 ch) or Pulse input (4 ch)</li> <li>• Alarm output (4 ch)</li> </ul> * Switch between Logic and Pulse * Switch between Trigger and External sampling. * The Input/output cable for GL B-513 (option) is required to use the external output function.
Input specifications	Input voltage range : 0 to +24 V (single-ended ground input) Input signal : No-voltage contact (a-contact, b-contact, NO, NC), Open collector, Voltage input Input threshold voltage : Approx. +2.5 V Hysteresis : Approx. 0.5 V (+2.5 to + 3 V) * Refer to "2.6 Logic Alarm Cable Connection and Functions" for details on the input circuit.
Alarm output specifications	Output format: Open collector output (5 V, pull-up resistance 10K $\Omega$ ) <Maximum ratings of output transistor> <ul style="list-style-type: none"> <li>• Collector-GND voltage : 30 V</li> <li>• Collector current : 0.5 A</li> <li>• Collector dissipation : 0.2 W</li> </ul> * Refer to "2.6 Logic Alarm Cable Connection and Functions" for details on the output circuit. Output conditions: Level judgment, window judgment, logic pattern judgment, pulse judgment
Pulse input	Revolutions mode (engines, etc.) Function : This mode counts the number of pulses per sampling interval, and then converts them by multiplying the scaling factor to the RPM. Settable the number of pulses per revolution during revolution Spans : 50, 500, 5000, 50 k, 500 k, 5 M, 50 M, 500 M PRM/F.S. Counts mode (electric meters, etc.) Function : Displays a count of the number of pulses for each sampling interval from the start of measurement. Spans : 50, 500, 5000, 50 k, 500 k, 5 M, 50 M, 500 M C/F.S. Inst. mode Function : Counts the number of pulses for each sampling interval. Resets the count value after each sampling interval. Spans : 50, 500, 5000, 50 k, 500 k, 5 M, 50 M, 500 M C/F.S. Maximum number of pulse inputs Maximum input frequency : 50kHz Maximum number of count : 50kC/sampling (16-bit counter)
Connectable sensor, terminal, adapter (Generic name: GS sensor and terminal/adapter)	Number of GS sensors and terminals/adapter connection terminals: 1 GS-TH: Temperature and humidity sensor GS-4TSR: 4CH thermistor terminal GS-LXUV: Illuminance / ultraviolet sensor GS-DPA: Branch adapter for GS GS-DPA-AC: Adapter for AC current sensor GS-CO2: CO2 sensor GS-3AT: 3-axis acceleration / temperature sensor GS-4VT: 4CH voltage / temperature terminal * The items above are optional accessories. Sampling: 500 ms to 1 hour * Specific setting is not required. It is synchronized to the setting of the GL840.

## 4.3 Accessories/Optional Accessories

### Control Software

Item	Description
Compatible operating system	Windows 11 / Windows 10 * Meet system requirements of the OS.
Function	Main unit control, realtime data capture, data conversion
Number of groups	4 groups MAX
Number of CHs per 1 group	Up to number of connected module
Maximum number of channels	1000 ch maximum
Settings	AMP settings, capture settings, trigger/alarm settings, report settings, others
Captured data	Realtime data (CSV, GBD Binary) Data in Internal memory (SD1) or SD CARD (SD2) (CSV, GBD binary)
Display	Analog waveforms, logic waveforms, pulse waveforms, digital values
Display modes	Y-T View, Digital View, Report View, X-Y View between Cursors (only during replay), Integrated bar graph display
File conversion	Between cursors, All data
Monitor functions	Alarm monitor enables sending of email to the specified address
Statistic/History	Displays maximum, minimum and average values during measurement
Report function	Enables creation of daily or monthly files
E-mail function	The e-mail is sent to the specified address when the alarm monitor is performed.

### Accessories

Item	Remarks	Quantity
Quick Start Guide	GL840-UM-85x	1
CD-ROM	User's Manual, Application software	1
AC cable/AC adapter	100 to 240 VAC, 50/60 Hz	1
Ferrite core	Used to attach to the USB cable.	1

### Wireless LAN Unit B-568 (Option)

Item	Description
Communication system	Wireless LAN
Installation	Insert into the SD CARD2 slot * When the wireless unit is inserted, the SD CARD cannot be inserted into the SD CARD2 slot.
Wireless LAN standard	IEEE802.11b/g/n
Number of connected Remote unit	Up to 5 units
Function	Communication range: Approx. 40 m * Communication range depends on the obstacles and the surrounding environmental conditions. Access point : Control of wireless sensor (up to 5 units) and data capture Station : Control from PC and Data transfer to PC Control from Smartphone or tablet, and Data transfer Common to access point and station: WPS : Push button method / PIN method Encryption function : WEP64, WEP128, WPA-PSK/WPA 2-PSK, TKIP/AES

**Battery Pack B-569 (Option)**

Item	Description
Capacity	7.2V/2900mAh
Battery type	Lithium secondary battery
Running time	Up to two packs can be mounted <When LCD is ON> Battery pack x 1 (brightness MAX): approx. 3 hours Battery pack x 2 (brightness MIN): approx. 6 hours <When LCD is OFF> Battery pack x 1: approx. 5 hours Battery pack x 2: approx. 10 hours * 20 channel terminals, 1-sec sampling, capturing to internal memory (SD1), new battery pack, and +25°C environment. * The running time depends on the operating environment. When the empty battery is charged in the GL220/820/900, the charging in about 80-90% will stop. Once disconnect and connect the AC adapter, or remove and insert the battery pack. The battery pack charging is started in order to charge up to 100%. (It depends on the remaining capacity.)
Charging method	Mount in the main unit
Time required for charging	Battery pack x 1: approx. 5 hours Battery pack x 2: approx. 10 hours
Switchover in the event of a power failure	Because the battery is used together with the AC adapter, the power supply will be switched automatically to the battery in the event of a power failure. * The AC adapter is the primary power source.
Operation environment	Running on battery: 0 to 40°C, Battery being charged: 15 to 35°C
Other functions	<ul style="list-style-type: none"> <li>• When the battery is running low, file is closed automatically.</li> <li>• Remaining amount indicator</li> </ul>

**Humidity Sensor B-530 (Option)**

Item	Description																		
Allowable temperature range	-25 to +80°C																		
Allowable humidity range	0 to 100% RH																		
Relative humidity measurement accuracy	±3% RH (5 to 98% RH at 25°C)																		
Method	Capacitance method																		
Relative humidity measurement accuracy (5 to 98%)	<table border="1"> <thead> <tr> <th>Measurement environment</th> <th>Measurement accuracy</th> </tr> </thead> <tbody> <tr> <td>0 to 10°C</td> <td>±5% RH</td> </tr> <tr> <td>10 to 20°C</td> <td>±4% RH</td> </tr> <tr> <td>20 to 30°C</td> <td>±3% RH</td> </tr> <tr> <td>30 to 40°C</td> <td>±4% RH</td> </tr> <tr> <td>40 to 50°C</td> <td>±5% RH</td> </tr> <tr> <td>50 to 60°C</td> <td>±6% RH</td> </tr> <tr> <td>60 to 70°C</td> <td>±7% RH</td> </tr> <tr> <td>70 to 80°C</td> <td>±8% RH</td> </tr> </tbody> </table> <p>* Measurement accuracy at 60°C or more is a reference value.</p>	Measurement environment	Measurement accuracy	0 to 10°C	±5% RH	10 to 20°C	±4% RH	20 to 30°C	±3% RH	30 to 40°C	±4% RH	40 to 50°C	±5% RH	50 to 60°C	±6% RH	60 to 70°C	±7% RH	70 to 80°C	±8% RH
Measurement environment	Measurement accuracy																		
0 to 10°C	±5% RH																		
10 to 20°C	±4% RH																		
20 to 30°C	±3% RH																		
30 to 40°C	±4% RH																		
40 to 50°C	±5% RH																		
50 to 60°C	±6% RH																		
60 to 70°C	±7% RH																		
70 to 80°C	±8% RH																		
Response time	15 sec. (90% response when membrane filter is installed)																		
Sensor output	0 to 1 VDC																		
External dimensions	φ14 x 80 mm (excluding cable)																		
Cable length	3 m																		
Sensor power source	+5 to +16 VDC																		
Power consumption	approx. 4 mA																		

List of Options


Item	Model	Description
Input/output cable for GL	B-513	2 m long (no clip on end of cable)
DC drive cable	B-514	2 m long (no clip on end of cable)
Humidity sensor *1	B-530	3 m long (with a dedicated power connector)
Input terminal (Multi-inputs)	B-564	20CH Standard terminal
Input terminal (Withstand voltage)	B-565	20CH Withstand high-voltage high-precision terminal
Screwless input terminal	B-564SL	20ch Screwless terminal
20CH Screw input terminal	B-563	GL860 Standard 20CH screw terminal
20CH Screwless input terminal	B-563SL	GL860 Standard 20CH screwless terminal
Base unit for input terminal	B-566	Extension terminal base unit, connection plate, screws
Connection cable for extension terminal	B-567-05	Connection cable (50 cm)
	B-567-20	Connection cable (2 m)
Wireless LAN unit *2	B-568	Wireless LAN
Battery pack	B-569	7.2V/2900mAh
Bracket for DIN rail (GL840 main body)	B-570	Built to order
Bracket for DIN rail	B-540	Built to order
Shunt resistor	B-551-10	Built to order. 10 pcs/set 250 Ω, Rated power of 1 W, Maximum service voltage of 15.8 V
Input terminal cover	B-588	Protective cover
Voltage & Temp input terminal	GS-4VT	Terminal for 4ch voltage / temperature measurement (Thermocouple only)
Acceleration & Temp sensor	GS-3AT	Sensor for 3-axis acceleration / temperature measurement
Thermistor input terminal	GS-4TSR	Terminal for 4ch thermistor temperature measurement (Thermistor sensor for GS)
AC current sensor adapter	GS-DPA-AC	Adapter for 2ch AC power measurement (AC current sensor only)
Carbon Dioxide (CO2) sensor	GS-CO2	Sensor for CO2 measurement
Illuminance & UV sensor	GS-LXUV	Sensor for 1ch Illuminance / 1ch ultraviolet measurement
Temp & Humidity sensor	GS-TH	Sensor for temperature and humidity measurement
Dual port adapter	GS-DPA	Adapter for 2ch sensors
Thermistor sensor (Normal type)	GS-103AT-4P	GS-4TSR only (approx. 3 m) Thermistor (-40 to 105°C)
Thermistor sensor (Ultrathin type)	GS-103JT-4P	GS-4TSR only (approx. 3 m) Ultra-thin shape thermistor (-40 to 120°C)
AC current sensor (50A)	GS-AC50A	GS-DPA-AC-dedicated CT (50A)
AC current sensor (100A)	GS-AC100A	GS-DPA-AC-dedicated CT (100A)
AC current sensor (200A)	GS-AC200A	GS-DPA-AC-dedicated CT (200A)
Module extension cable	GS-EXC	1.5 m extension cable (Between the GL840 and sensor, between the branch adapter and sensor)

\*1 Allowable temperature range: -25 to +80°C

\*2 It is available in limited region.

## 4.4 External Dimensions


### GL840-M (with standard terminal)

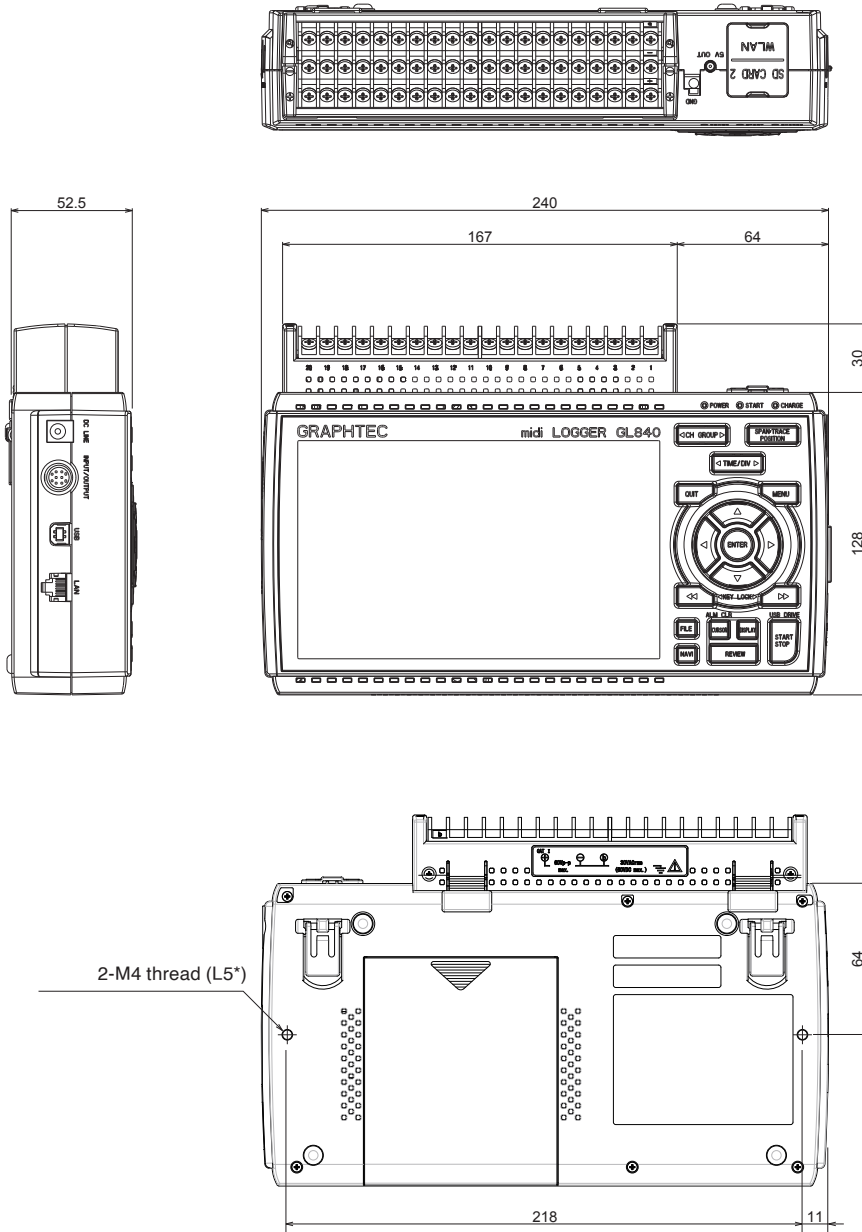

Unit: mm

Dimension precision: Error  $\pm 3$  mm

### Terminals


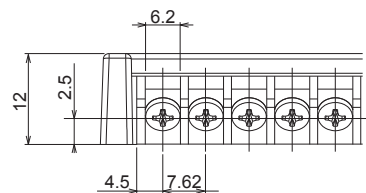


Unit: mm

Dimension precision: Error  $\pm 0.5$  mm




**GL840-WV (Withstand high-voltage high-precision terminal)**

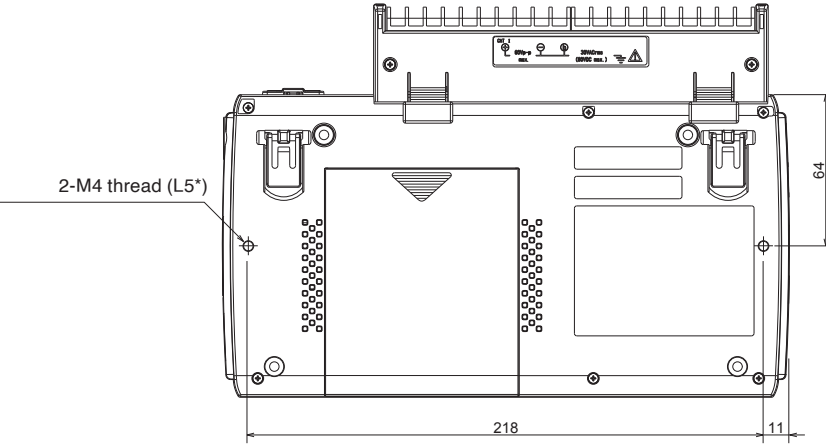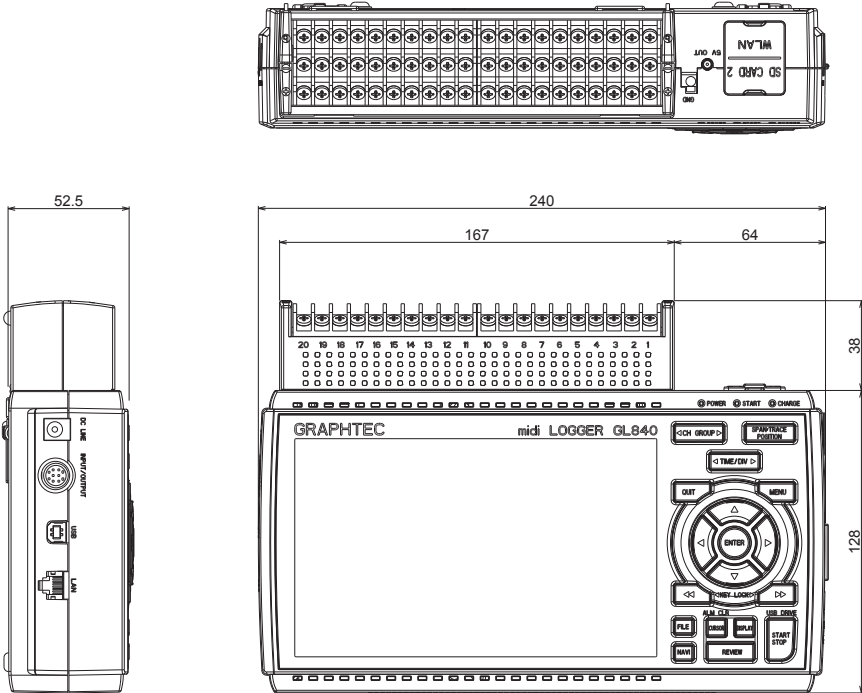


Unit: mm  
Dimension precision: Error ± 3 mm

Terminals

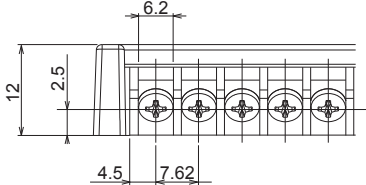


Unit: mm  
Dimension precision: Error ± 0.5 mm

**GL840 + B-564SL (Screwless terminal)**

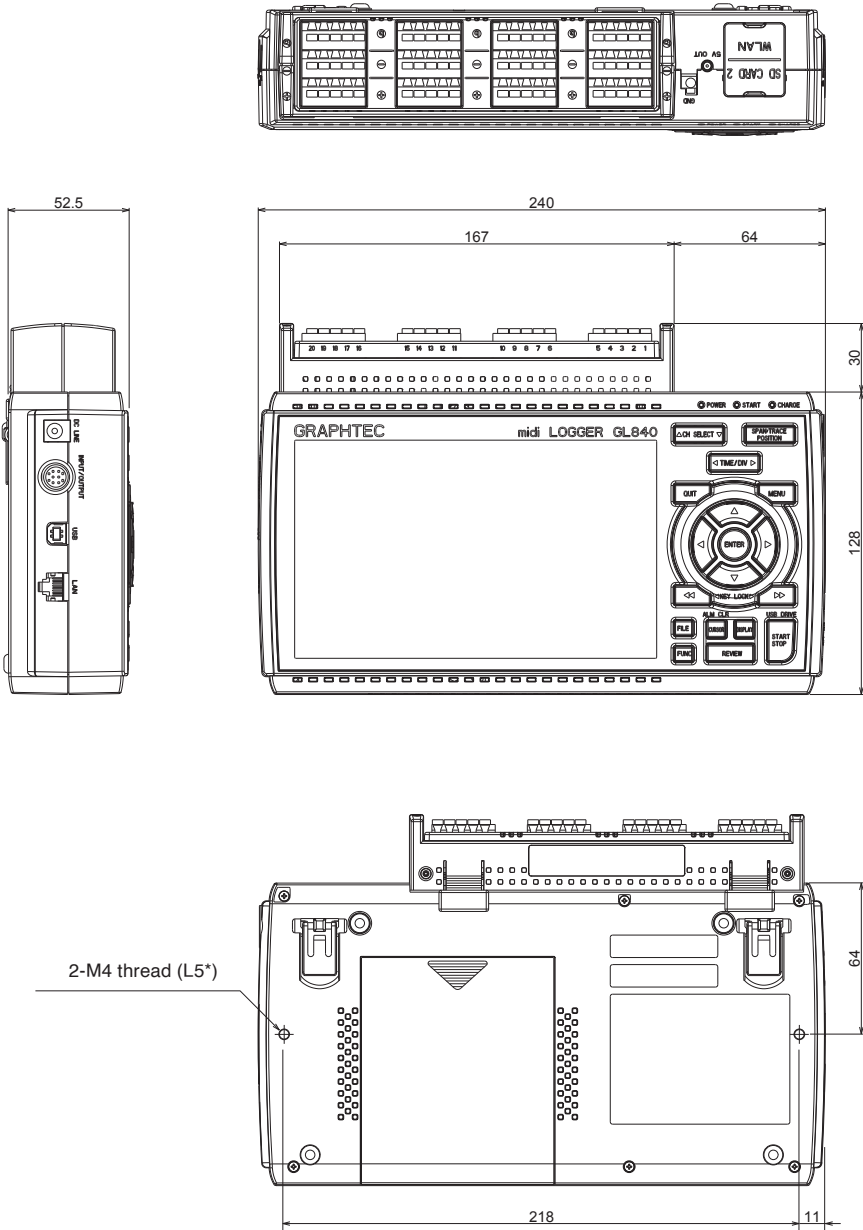


Unit: mm  
Dimension precision: Error ± 3 mm

**GL840 + B-563 (GL860 Standard 20CH screw terminal )**

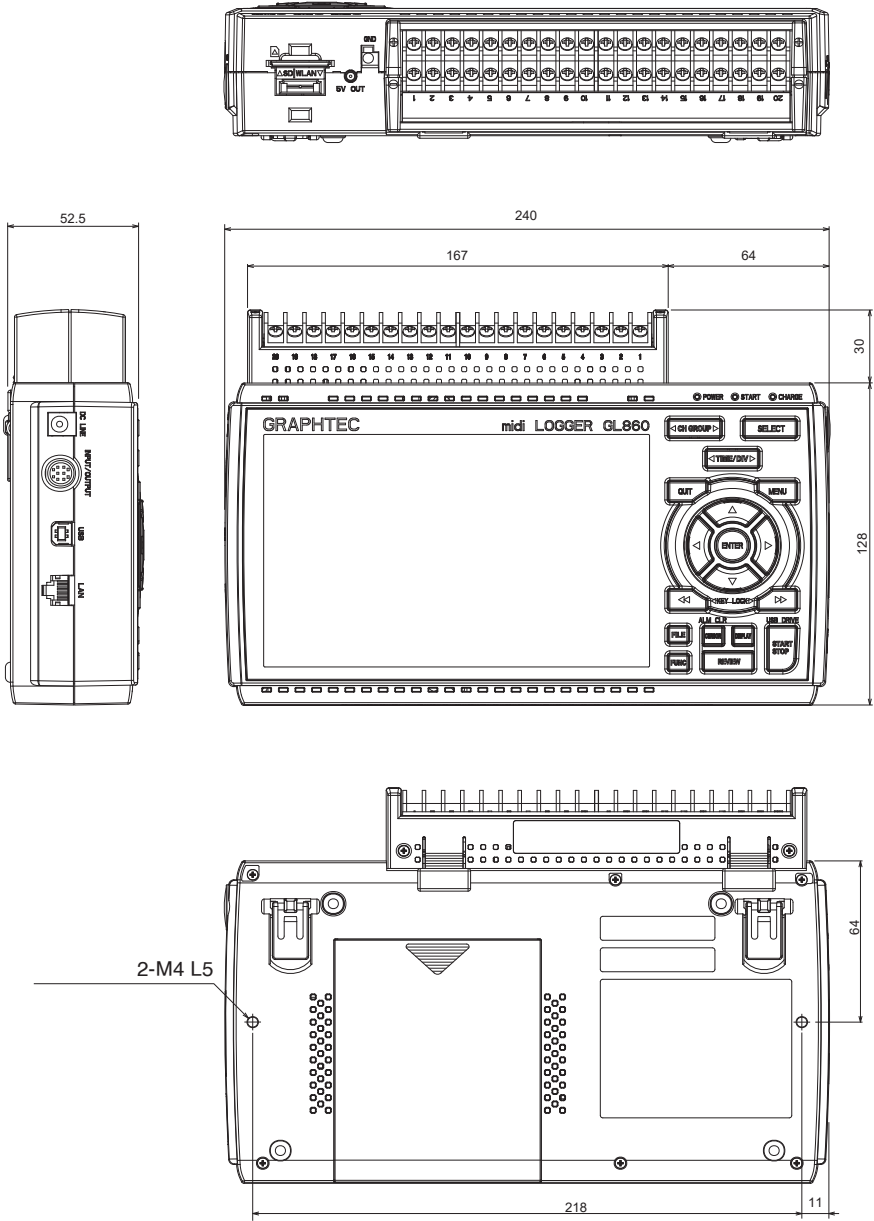


Unit: mm  
 Dimension precision: ± 3 mm

**Terminals**

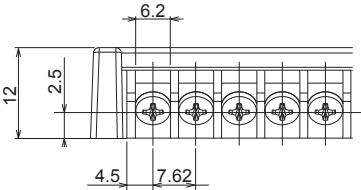

Unit: mm  
 Dimension precision: ± 0.5 mm

**GL840 + B-563SL (GL860 Standard 20CH screwless terminal)**

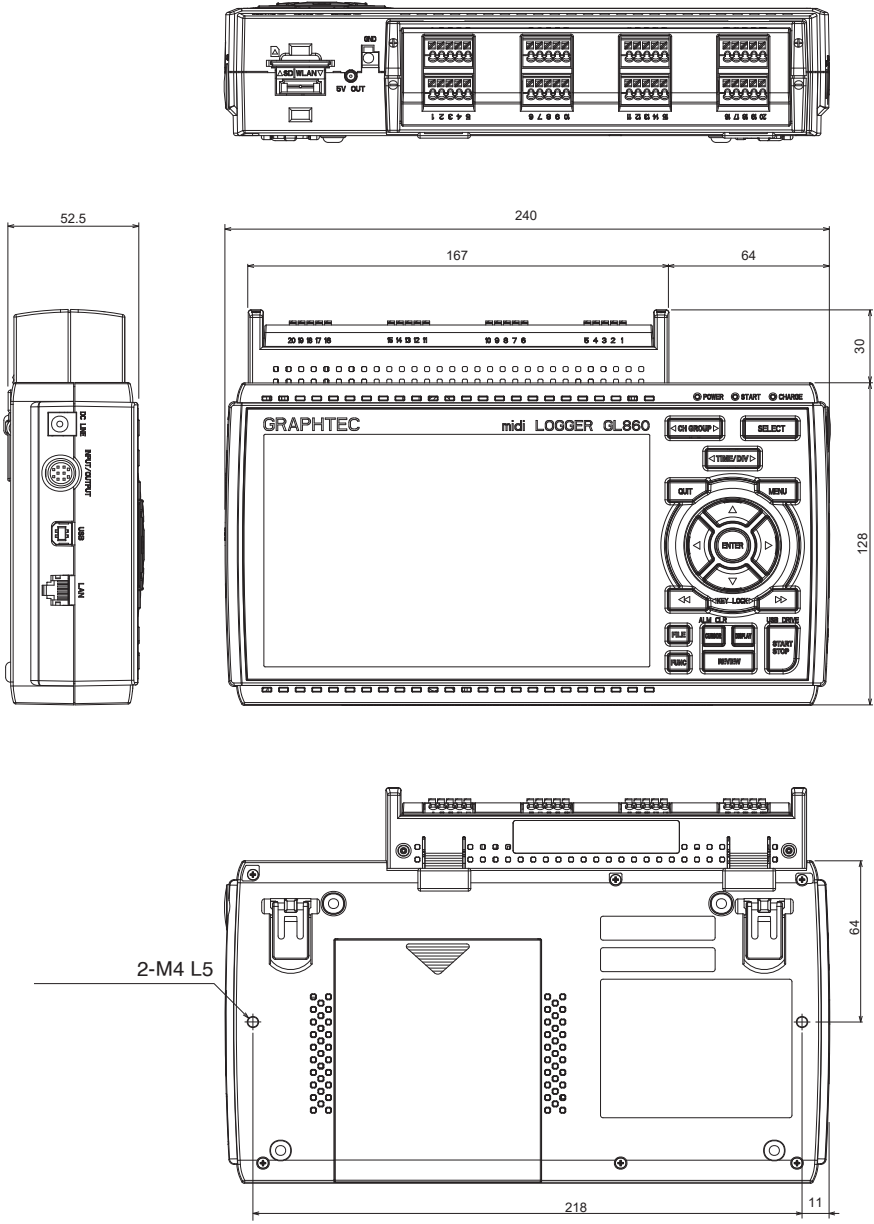

Unit: mm  
Dimension precision: ± 3 mm

# INDEX

## Sign

- 3-axis Acceleration / Temperature Sensor . . . . . **3-33**
- 4ch Thermistor Terminal . . . . . **3-36**
- 4ch Voltage / Temperature Terminal . . . . . **3-35**

## A

- AC/battery status indicator . . . . . **3-5**
- Accessories . . . . . **4-13**
- AC line filter . . . . . **3-52**
- AC Line Frequency . . . . . **3-82**
- AC Power Supply . . . . . **2-4**
- Adapter for AC current sensor . . . . . **3-41**
- Add checksum to file . . . . . **3-82**
- A/D resolution . . . . . **2-7, 2-8, 2-9, 2-10**
- ALARM CLEAR. . . . . **3-14**
- Alarm display area . . . . . **3-6**
- Alarm hold . . . . . **3-57**
- Alarm level settings . . . . . **3-57, 3-58**
- Alarm Output . . . . . **2-11**
- AMP settings . . . . . **3-21**
- Analog settings . . . . . **3-24**
- Annotation Settings . . . . . **3-28**

## B

- Background Color . . . . . **3-81**
- Backup setting . . . . . **3-52**
- Battery Pack . . . . . **4-14**
- Bitmap file format . . . . . **3-87**
- Branch adapter for GS . . . . . **3-43**
- Burnout . . . . . **3-81**

## C

- Captured data file name . . . . . **3-49**
- Captured data replaying . . . . . **3-20**
- Capture-related items . . . . . **3-47**
- Capturing . . . . . **3-19**
- Character string input . . . . . **3-91**
- Charging the Battery . . . . . **2-22**
- Checking the Accessories . . . . . **2-2**
- CH GROUP . . . . . **3-8**
- Clock display . . . . . **3-4**
- CO2 sensor . . . . . **3-39**
- Connecting to a PC . . . . . **2-18**
- Connection to the wireless LAN . . . . . **2-20**
- Connection Using a USB Cable . . . . . **2-18**
- Control Software . . . . . **4-13**
- CURSOR. . . . . **3-14**
- Cursor Sync. . . . . **3-94**

## D

- Data capture bar . . . . . **3-7**
- Data replaying during capture . . . . . **3-19**
- Data replay menu . . . . . **3-92**
- Data Save . . . . . **3-85**
- DATA settings . . . . . **3-47**
- Date and Time . . . . . **2-52**
- Date Search . . . . . **3-94**
- Date/Time . . . . . **3-82**
- DC Power Supply . . . . . **2-5**
- Dead zones . . . . . **3-60**
- Demo Waveform . . . . . **3-83**
- Device access display . . . . . **3-3, 3-4**
- Digital display area . . . . . **3-5**
- Direction . . . . . **3-10**
- DISPLAY . . . . . **3-13**
- DNS Address . . . . . **3-64**
- Download of device file . . . . . **3-107**

## E

- Easy Connection (WPS) . . . . . **3-66**
- Edge operations . . . . . **3-59**
- E-mail settings . . . . . **3-77**
- ENTER . . . . . **3-10**
- Error Codes . . . . . **3-109**
- EU . . . . . **3-27, 3-31**
- Execute . . . . . **3-87**
- Execute (Calculation) . . . . . **3-95**
- External Input/Output Functions . . . . . **4-12**
- External sampling . . . . . **3-51**
- External Sampling Input . . . . . **2-11**

## F

- FAST FORWARD . . . . . **3-11**
- FILE . . . . . **3-15**
- File box . . . . . **3-89**
- FILE menu . . . . . **3-84**
- File name display area . . . . . **3-6**
- File Operation . . . . . **3-84**
- Filter . . . . . **2-7, 2-8, 2-9, 2-10, 3-26, 3-30**
- Find Next . . . . . **3-94**
- Find Previous . . . . . **3-94**
- Free Running . . . . . **3-18**
- FTP client settings . . . . . **3-75**
- FTP server . . . . . **3-75**
- Function Specifications . . . . . **4-10**

- H**
- How to insert the SD CARD ..... 2-14
  - How to insert the wireless LAN unit ..... 2-16
  - How to remove the SD CARD ..... 2-15
  - Humidity Sensor ..... 4-14
- I**
- Illuminance / Ultraviolet Sensor ..... 3-38
  - Information ..... 3-83
  - Input ..... 3-24, 3-30
  - Input/output cable for GL ..... 2-11
  - Input Unit Specifications ..... 4-8
  - Integrated bar graph display ..... 3-96
  - Inter-CH Op Settings ..... 3-28
  - Interface settings ..... 3-61
  - Internal memory ..... 3-3
  - IP Address ..... 3-64
- K**
- KEY LOCK ..... 3-11
  - Key lock display ..... 3-4
  - Key Operation ..... 3-8
- L**
- LAN Connection ..... 2-19
  - Language ..... 1-5, 3-82
  - LCD brightness ..... 3-80
  - Level operations ..... 3-59
  - Load Settings ..... 3-88
  - LOCAL ..... 3-10
  - Logic and Pulse settings ..... 3-29
  - Logic/Pulse ..... 3-29
  - Logic/Pulse Input ..... 2-11
- M**
- Memory devices ..... 4-3
  - MENU ..... 3-9, 3-21
  - Monitor ..... 4-3
  - Mounting the Battery Pack ..... 2-21
  - Move to Center ..... 3-93
  - Move to First Data ..... 3-93
  - Move to Last Data ..... 3-93
  - Move to Selected Position ..... 3-93
- N**
- NAVI ..... 3-15
  - NAVI menu ..... 3-100
  - New Line code ..... 3-75
  - Nomenclature and Functions ..... 2-3
  - NTP Server ..... 3-79
- O**
- Operating Environment ..... 1-3
  - Optional Accessories ..... 4-13
  - Options ..... 4-15
  - OTHER settings ..... 3-80
- P**
- PASV Mode ..... 3-75
  - PC I/F ..... 4-3
  - Pen display ..... 3-6
  - Ping format ..... 3-87
  - Port Number ..... 3-64
  - Power On Start ..... 3-81
  - Pulse Slope ..... 3-30
- Q**
- Quick setting ..... 3-102
  - Quick settings ..... 3-5
  - QUIT ..... 3-10
- R**
- Range ..... 3-24
  - Relay capture ..... 3-51
  - Remote key operation ..... 3-105
  - Remote lamp ..... 3-4
  - Remote terminal (GLT400: option) settings ..... 3-46
  - Remote unit settings ..... 3-70
  - Remove / replace SD memory card ..... 3-86
  - Removing the wireless LAN unit ..... 2-17
  - Repeated capturing ..... 3-57
  - Return to default settings ..... 3-82
  - REVIEW ..... 3-12
  - Ring capture ..... 3-50
  - Ring capture setting ..... 3-50
  - Room temperature compensation ..... 3-81
- S**
- Safety Precautions ..... ii
  - Sampling interval ..... 3-48
  - Save ..... 3-87
  - Scale lower limit ..... 3-6
  - Scale upper limit ..... 3-6
  - Scaling settings ..... 3-27, 3-31
  - Screen Copy ..... 3-87
  - Screen Saver ..... 3-80
  - SD CARD 2 ..... 3-4
  - Send burnout alarm ..... 3-57
  - Sensor ..... 3-24
  - Signal Types ..... 2-8, 2-9
  - SPAN/TRACE/POSITION ..... 3-9
  - Specify Save Destination ..... 3-87
  - Standard Specifications ..... 4-2
  - Start side source setting ..... 3-56

START/STOP .....	3-11
Statistical calculation setting .....	3-54
Status mark .....	3-3
Status message .....	3-2
Stop side source setting .....	3-56

## T

Temperature and humidity sensor .....	3-32
Temp. Unit .....	3-81
TIME/DIV .....	3-9
Time/DIV display area .....	3-3
To cancel key lock by password .....	3-103
To Ensure Safe and Correct Use .....	i
Trigger/Alarm Functions .....	4-10
Trigger Input .....	2-11
Trigger level settings .....	3-58
TRIG settings .....	3-55

## U

USB Drive Mode .....	3-11
USB settings .....	3-64

## W

Warming-up Before Use .....	1-4
Waveform display area .....	3-6
WEB Server .....	3-104
Window names .....	3-2
Wired LAN settings .....	3-64
Wireless LAN setting .....	3-65
Wireless LAN Unit .....	4-13
Wireless sensor .....	3-44
Wireless Unit .....	2-16

Specifications are subject to change without notice.

---

GL840 User's Manual

GL840-UM-156

October 11, 2024 1st edition-01

**GRAPHTEC CORPORATION**

---



**GRAPHTEC**